

## CAPABILITY LIST

P/N	NSN	DESIGNATION	MANUFACTURER
100	7310-00-905-6212	OVEN, WARMING, ELECTRIC	SPERRY-FRANK
758	6605-00-663-8512	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
1000	7310-00-905-6212	OVEN, WARMING, ELECTRIC	SPERRY-FRANK
1010	6615-01-248-0835	GYROSCOPE, RATE OF TURN	KIRKOS ENGINEERING
1031	5930-00-615-7340	SWITCH, PRESSURE	HYDRA-ELECTRIC
1144	5826-00-188-5554	INDICATOR, BEARING	KOLLSMAN
1175	6625-01-412-3365	METER, ELECTRICAL FREQUENCY	JEWELL INSTRUMENTS
1553	5930-00-615-7340	SWITCH, PRESSURE	HAYDON KERK
4047	5945-00-628-6484	RELAY, HYBRID	DNE TECHNOLOGIES
4100	5945-00-075-4925	SWITCH, INSTRUMENT	DNE TECHNOLOGIES
4371	2925-01-483-3517	MAGNETO, IGNITION	UNISON INDUSTRIES
6316	6340-00-304-5556	DETECTOR, ICE	DNE TECHNOLOGIES
8348	1620-00-617-9123	GEARBOX, LANDING	CEF INDUSTRIES
8445	1680-01-004-2086	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8446	1680-00-615-1335	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8465	6685-00-526-7864	TRANSMITTER, PRESSURE	CEF INDUSTRIES
8544	1680-01-218-2079	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8545	1680-01-217-5837	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8546	1680-01-222-2551	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8656	1680-01-449-2870	ACTUATOR, ELECTRO-MECHANICAL, LINEAR, OIL COOLER DO	CEF INDUSTRIES
10706	5985-01-491-3998	ANTENNA	CEF INDUSTRIES
18000	5826-00-032-7024	INDICATOR, BEARING-DISTANCE-HEADING	AERONAUTICAL INSTRUMENT AND RADIO COM
22118	6645-00-814-1706	CLOCK, MECHANICAL, PANEL	AEROSONIC
22135	5985-00-673-5831	ANTENNA, DME/TACAN, BEACON	L3 TECHNOLOGIES
22630	5985-00-673-5831	ANTENNA, DME/TACAN, BEACON	L3 TECHNOLOGIES
22705	6610-00-006-5783	INDICATOR, MACH AND TRUE AIR SPEED	AEROSONIC
44143	2915-01-147-2644	PUMP, FUEL, FFP	EATON INDUSTRIAL
44910	-----	LIGHT, EMERGENCY EXIT	GRIMES AEROSPACE
47680	4810-00-761-6225	VALVE, LINEAR, DIRECTIONAL CONTROL	EATON
49740	4810-00-612-2696	VALVE, LINEAR, DIRECTIONAL CONTROL	EATON
49930	2925-01-360-2734	EXCITER, IGNITION	UNISON INDUSTRIES
50150	4810-00-533-4097	VALVE, LINEAR, DIRECTIONAL CONTROL	WOODWARD
50313	4140-00-564-5980	FAN, CENTRIFUGAL	FREUND PRECISION
52760	4820-01-033-2869	VALVE, LINEAR, DIRECTIONAL CONTROL	EATON
62560	4320-01-224-9869	MOTOR, HYDRAULIC	EATON AEROSPACE
66039	4320-00-616-3812	PUMP, AXIAL PISTONS	PARKER HANNIFIN
76000	5826-MD-010-2363	INDICATOR, OMNI BEARING	ACTIA (THALES AVIONICS)
80550	5985-00-553-5867	ANTENNA, LOOP	BORG INSTRUMENTS
83308	1650-00-815-9387	MOTOR, HYDRAULIC	EATON AEROSPACE
89000	6620-00-901-7848	TRANSMITTER PRESSURE	S-TECH
93416	4320-01-224-9869	MOTOR, HYDRAULIC	EATON AEROSPACE
95023	5930-00-961-8507	SWITCH, PRESSURE	HYDRA-ELECTRIC
95024	5930-00-961-8506	SWITCH, PRESSURE	HYDRA-ELECTRIC

**CAPABILITY LIST**

100266	6610-00-557-3030	INDICATOR, ATTITUDE DIRECTOR	L3 TECHNOLOGIES
100524	6605-00-034-2500	INDICATOR, HORIZONTAL SITUATION	ASTRONAUTICS
102150	1660-00-343-4692	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102217	6130-00-927-0415	BATTERY, POWER SUPPLY	DRS TECHNOLOGIES
102379	6610-00-939-5237	INDICATOR, ATTITUDE DIRECTOR	ASTRONAUTICS
104470	5826-00-089-7912	INDICATOR, BEARING DISTANCE HEADING	ASTRONAUTICS
109110	6610-33-G02-2895	INDICATOR, ATTITUDE DIRECTOR	MEGGIT
115385	4320-00-631-4859	PUMP, ROTARY	ASTRONAUTICS
115715	4320-00-631-4859	PUMP, ROTARY	MEGGIT
135244	6625-00-235-4782	VOLTMETER, D/C	WESTON ELECTRICAL INSTRUMENT
170998	1650-00-204-1703	MOTOR, HYDRAULIC	EATON AEROSPACE
171232	1650-00-204-1703	MOTOR, HYDRAULIC	EATON AEROSPACE
200261	5826-00-611-0951	MOUNTING BASE	RAYTHEON
280522	6930-01-112-3283	INDICATOR, POSITION	L3 TECHNOLOGIES
400086	6645-00-793-5794	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
400161	6645-00-022-7479	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
400164	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
400191	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
400192	6645-00-880-5927	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
400196	6645-00-121-7551	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
400201	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
400202	6645-00-150-6526	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
400240	6645-00-076-3050	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
400252	6645-00-880-5927	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
405968	5985-00-149-1451	ANTENNA, LOOP	KEARFOTT
433220	6645-00-076-3050	CLOCK, MECHANICAL, PANEL	L3 TECHNOLOGIES
472475	6350-01-280-1671	DETECTOR, HEAT	KIDDE TECHNOLOGIES
472529	6620-01-063-9054	INDICATOR, TORQUEMETER	SIMMONDS PRECISION PRODUCTS
472740	6680-01-060-4248	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
472887	6680-01-060-4249	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
505968	5985-00-149-1451	ANTENNA, LOOP	KEARFOTT
534853	6685-00-887-1966	PROBE,TEMPERATURE	HONEYWELL INTERNATIONAL
535429	6610-00-887-9422	MOUNT ASSY, COMPUTER RESILIENT	HONEYWELL INTERNATIONAL
538088	6610-00-991-0770	INDICATOR, TRUE AIR SPEED	HONEYWELL INTERNATIONAL
549722	2915-00-971-9130	PUMP, SUBMERGED, AIRCRAFT	HONEYWELL INTERNATIONAL
560655	6645-00-887-0122	TIMER, SEQUENTIAL	HAMILTON SUNDSTRAND
658060	1650-00-858-0501	ACCUMULATOR, PNEUMATIC	LOCKHEED MARTIN
670752	1680-01-181-1374	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
670764	6680-00-923-8466	GENERATOR, TACHOMETER	LOCKHEED MARTIN
695197	4810-01-066-0321	VALVE, LINEAR, DIRECTIONAL CONTROL	LOCKHEED MARTIN
695261	6685-00-692-8341	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	LOCKHEED MARTIN
695316	4810-00-525-2445	VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	LOCKHEED MARTIN
695324	4140-00-564-5980	FAN, CENTRIFUGAL	LOCKHEED MARTIN
695455	6340-00-304-5556	DETECTOR, ICE	LOCKHEED MARTIN

**CAPABILITY LIST**

695495	4810-00-761-6225	VALVE, LINEAR, DIRECTIONAL CONTROL	LOCKHEED MARTIN
695700	1680-00-672-8931	ACTUATOR, ELEVATOR TRIM TAB, ROTARY	LOCKHEED MARTIN
695715	5945-00-675-7413	RELAY, ELECTROMAGNETIC	LOCKHEED MARTIN
695795	5945-00-675-7412	RELAY, ELECTROMAGNETIC	LOCKHEED MARTIN
695807	1680-01-497-7142	ACTUATOR, ELECTRO-MECHANICAL, LINEAR, OIL COOLER DO	LOCKHEED MARTIN
695813	4820-00-006-5087	VALVE, ENGINE, BLEED AIR, CHECK	LOCKHEED MARTIN
695908	4320-00-616-3812	PUMP, AXIAL PISTONS	LOCKHEED MARTIN
697752	4810-00-575-7781	VALVE, TEMPERATURE CONTROL, BUTTERFLY	LOCKHEED MARTIN
697753	4810-01-039-0459	VALVE, BUTTERFLY	LOCKHEED MARTIN
707821	5826-00-241-1011	TRANSCEIVER, RADIO COMPASS	RAYTHEON
707874	5826-00-611-0951	MOUNTING BASE	RAYTHEON
707877	5895-00-228-3133	CONTROL BOX, RECEIVER	RAYTHEON
708268	5826-00-625-9201	TRANSCEIVER, RADIO COMPASS	RAYTHEON
731700	2915-00-074-1724	VALVE, FLOAT, FUEL TANK	TRANSDIGM
861195	4320-00-174-5811	PUMP, AUXILIAR	EATON AEROSPACE
891041	6350-01-280-1671	DETECTOR, HEAT	KIDDE TECHNOLOGIES
892541	6350-00-015-8049	DETECTOR, HEAT	KIDDE TECHNOLOGIES
917108	4140-01-041-4886	FAN, VANE, AXIAL	LITTON
1105123	1680-01-208-0174	ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	SMITH & SMITH AIRCRAFT
1505950	5841-00-851-8029	INDICATOR, RADAR, TARGET	LOCKHEED MARTIN
1780109	6605-00-111-3645	TRANSMITTER, INDUCTION COMPASS	HONEYWELL INTERNATIONAL
1780595	6605-00-241-8996	COMPENSATOR, INDUCTION COMPASS	HONEYWELL INTERNATIONAL
1889514	5985-01-282-7892	ANTENNA, RADAR	NORTHROP GRUMMAN SYSTEMS
1889522	6130-01-056-8665	POWER SUPPLY, RADAR	NORTHROP GRUMMAN SYSTEMS
2585726	6605-00-833-5087	TRANSMITTER, INDUCTION COMPASS	HONEYWELL INTERNATIONAL
3883028	6685-00-526-7864	TRANSMITTER, PRESSURE	GULFSTREAM AEROSPACE
3883029	6680-01-122-6960	GENERATOR, TACHOMETER	GULFSTREAM AEROSPACE
4006452	6680-01-020-5012	TRANSMITTER, OIL QUANTITY	SIMMONDS PRECISION PRODUCTS
6404486	2915-00-464-6946	CONTROL, SENSITIVE, SPEED	GENERAL MOTORS
6502251	6645-00-091-7107	TIMER, ELECTRICAL, STOP	ROLLS-ROYCE
6610273	6610-00-515-4600	INDICATOR, FLAP, POSITION	EMBRAER
6610328	6645-00-150-6526	CLOCK, MECHANICAL, PANEL	EMBRAER
6805769	5996-00-764-6258	AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	ROLLS-ROYCE
6809573	2995-00-877-3666	VALVE, ANTI ICING	ROLLS-ROYCE
6814762	2915-00-626-3123	VALVE, FUEL SYSTEM	HONEYWELL INTERNATIONAL
6815686	4810-00-627-4825	VALVE ASSY, SOLENOID, DRAIN	ROLLS-ROYCE
6821493	2995-00-876-9685	VALVE, SPEED SENSITIVE	ROLLS-ROYCE
6827995	5930-00-965-7111	SWITCH, FUEL FILTER, PRESSURE	ROLLS-ROYCE
6842553	5996-00-691-0174	AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	ROLLS-ROYCE
6873465	2915-00-464-6946	CONTROL, SENSITIVE, SPEED	ROLLS-ROYCE
6876338	5996-01-096-4648	AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	ROLLS-ROYCE
6894182	5996-01-114-8652	AMPLIFIER, ELECTRONIC CONTROL	ROLLS-ROYCE
7000066	6610-00-580-9690	INDICATOR, RUDDER, POSITION	AIRCRAFT INSTRUMENTS
7514060	-----	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS

**CAPABILITY LIST**

7514081	-----	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
8020042	5930-00-615-7340	SWITCH, PRESSURE	ELECTRO NATIONAL
8529935	2935-00-887-4267	COOLER, ENGINE OIL	PARKER HANNIFIN
8859877	4320-01-171-0452	PUMP, AXIAL PISTONS	GENERAL MOTORS
9260065	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ELTA
9305700	1660-00-595-7773	SENSOR, CABIN TEMPERATURE	EDEL ENGINEERING DEVELOPMENT
9542662	1630-00-914-1329	WHEEL, NOSE LANDING GEAR	GOODYEAR
9560569	1630-01-482-8991	BRAKE, MULTIPLE DISK	MEGGITT AIRCRAFT BRAKING SYSTEMS
9560685	1630-00-825-4794	BRAKE, MULTIPLE DISK	MEGGITT AIRCRAFT BRAKING SYSTEMS
9746077	6130-00-958-9796	POWER SUPPLY, DC	MEGGITT AIRCRAFT BRAKING SYSTEMS
10006252	1650-00-288-9632	MOTOR, HYDRAULIC	EATON AEROSPACE
23711461	1650-00-858-0501	ACCUMULATOR, PNEUMATIC	TAVCO
26130010	4810-00-987-3948	VALVE, SOLENOID, SHUT-OFF	HAMILTON SUNDSTRAND
26130011	4810-00-987-3949	VALVE, SOLENOID, SHUT-OFF	HAMILTON SUNDSTRAND
27231294	1660-00-583-7106	SENSOR, DUCT, OVERHEAT	HAMILTON SUNDSTRAND
27231296	1660-00-595-7773	SENSOR, CABIN TEMPERATURE	HAMILTON SUNDSTRAND
27231318	1660-01-021-4981	CONTROL BOX, AIRCRAFT AIR TEMPERATURE	HAMILTON SUNDSTRAND
27241301	4820-00-006-5087	VALVE, ENGINE, BLEED AIR, CHECK	HAMILTON SUNDSTRAND
58057112	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
62707621	1660-00-351-3738	CONTROL BOX, AIR TEMPERATURE	HONEYWELL INTERNATIONAL
69580701	6685-01-119-6546	THERMOSTAT, FLOW CONTROL	PSG CONTROLS
1391041046	6620-00-514-5334	INDICATOR, PRESSURE	KOLLSMAN
1570041040	6620-00-514-5334	INDICATOR, PRESSURE	KOLLSMAN
8010000653	5841-01-301-4588	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
8324020025	5826-12-361-9365	TACAN	THALES ELECTRONIC SYSTEMS
88415422001	6610-00-405-6461	ALTIMETER, ENCODER	KOLLSMAN
697749-1	6680-01-220-4090	INDICATOR, LIQUID QUANTITY	LOCKHEED MARTIN
00000C523	5895-01-128-7267	CONTROL, AMPLIFIER	L3 AVIATION PRODUCTS
001965	6685-00-526-7864	TRANSMITTER, PRESSURE	GOLEMAN
003013	5831-00-539-1471	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
003895-1	1680-00-888-3687	PUMP, WINDSHIELD	HAMILTON SUNDSTRAND
00558-503	1680-00-887-1908	GEARBOX, FLAP DRIVE	BFM ENERGY PRODUCTS
00558-505	1680-00-866-7187	GEARBOX, FLAP DRIVE	BFM ENERGY PRODUCTS
00558-507	1680-00-921-8698	GEARBOX, FLAP DRIVE	BFM ENERGY PRODUCTS
010006	4140-01-041-4886	FAN, VANE, AXIAL	ROTRON
010177	4140-01-041-4886	FAN, VANE, AXIAL	ROTRON
01-524795-1	5820-00-782-5308	RADIO SET	GENERAL DYNAMICS MISSION SYSTEMS
01-524860-1	5820-00-782-5308	RADIO SET	GENERAL DYNAMICS MISSION SYSTEMS
020-001-002	6680-00-869-9811	COMPENSATOR, FUEL QUANTITY	PARKER-HANNIFIN
020-001-003	6680-00-869-9812	COMPENSATOR, FUEL QUANTITY	PARKER-HANNIFIN
020-001-004	6680-00-869-9813	COMPENSATOR, FUEL QUANTITY	PARKER-HANNIFIN
020-001-005	6680-00-869-9814	COMPENSATOR, FUEL QUANTITY	PARKER-HANNIFIN
051-000-001	6685-00-670-0895	THERMOSTAT, FLOW CONTROL	PSG CONTROLS
064-1052-70	5821-MD-010-2079	TRANSCEIVER, RADIO	HONEYWELL INTERNATIONAL

### CAPABILITY LIST

066-01153-0202	5841-01-561-2819	TRANSCEIVER, RADIO ALTIMETER	HONEYWELL INTERNATIONAL
066-1062-00	5895-01-269-4441	TRANSCEIVER, ATC	HONEYWELL INTERNATIONAL
066-1062-10	5895-01-269-4441	TRANSCEIVER, ATC	HONEYWELL INTERNATIONAL
066-50000-2930	5841-01-470-8036	PROCESSOR, TCAS	HONEYWELL INTERNATIONAL
071-01519-0101	5841-01-538-8074	RECEIVER-EXCITER, RADAR	HONEYWELL
08-60170-001	1650-01-151-0619	ACCUMULATOR ASSY, HYDRAULIC	TACTAIR
08-8424-001	1650-01-151-0619	ACCUMULATOR ASSY, HYDRAULIC	TACTAIR
08-8424-0011	1650-01-151-0619	ACCUMULATOR ASSY, HYDRAULIC	TACTAIR
088424010	1650-00-640-8486	ACCUMULATOR ASSY, HYDRAULIC	TACTAIR
092-000-001	6340-00-304-5556	DETECTOR, ICE	MACK ELECTRIC DEVICES
0R00268-1	5826-00-241-1011	TRANSCEIVER, RADIO COMPASS	RAYTHEON
0R20026-1	5826-00-241-1011	TRANSCEIVER, RADIO COMPASS	RAYTHEON
0R200268-1	5826-00-241-1011	TRANSCEIVER, RADIO COMPASS	RAYTHEON
0R200268-4	5821-00-503-4903	TRANSCEIVER, RADIO COMPASS	RAYTHEON
0R200343-1	5826-00-969-9542	MOUNTING BASE ASSEMBLY	RAYTHEON
0R200343-2	5826-00-333-9867	MOUNTING BASE ASSEMBLY	RAYTHEON
0R200343-4	5826-00-522-3428	MOUNTING BASE ASSEMBLY	RAYTHEON
0R200343B	5826-00-969-9542	MOUNTING BASE ASSEMBLY	RAYTHEON
100-0034-01	----	INDICATOR, ELECTRICAL TACHOMETER	SPERRY-FRANK
100-0034-03	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0034-06	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0034-16	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0034-20	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0034-22	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0034-28	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0034-29	6620-01-322-7678	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0034-57	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0034-58	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0043-01	5841-00-189-9436	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0043-02	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0043-03	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0043-04	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0043-05	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0051-01	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0051-02	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0051-03	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0051-04	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0051-05	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
100-0051-06	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
1000-1	7310-00-905-6212	OVEN, WARMING, ELECTRIC	KELLY MANUFACTURING
10040-1000-0101	6680-01-220-4090	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
10040-3000-0101	6680-01-220-4091	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
10040-5000-0101	6680-01-224-7271	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
10073-0101	6680-01-350-8049	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS

## CAPABILITY LIST

10074-0101	6680-01-350-8048	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
10075-0101	6680-01-350-9120	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
1008700-4	1650-00-633-6250	ACCUMULATOR ASSY, HYDRAULIC	HONEYWELL INTERNATIONAL
10095-0101	6620-01-394-4018	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
10097-0101	6680-01-394-2555	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
1010530-4	1650-00-395-2599	ACCUMULATOR ASSY, HYDRAULIC	HONEYWELL INTERNATIONAL
10-1326-1	-----	LIGHT, EMERGENCY EXIT	GRIMES AEROSPACE
102150-0	1660-00-343-4692	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102150-0-12	-----	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102150-0-13	1660-00-343-4692	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102150-0-14	1660-00-343-4692	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102150-0-15	1660-00-343-4692	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102210-14-1	1660-01-067-0390	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102210-14-2	1660-01-159-9078	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102210-14-2A	1660-01-159-9078	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102210-16-1	1660-01-311-9984	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102210-9	1660-00-887-6728	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102210-9A	1660-00-887-6728	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102226-3	1660-00-887-6729	VALVE, CABIN AIR PRESSURE, OUTFLOW	HONEYWELL INTERNATIONAL
102538-2-1	1660-00-062-0301	CONTROLLER, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
102538-5-1	1660-01-391-8408	CONTROLLER, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
103036-3	1660-00-783-6159	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	HONEYWELL INTERNATIONAL
10-3068-5	4810-01-015-1980	VALVE, FUEL SYSTEM, GATE	BOEING
10-3068-6	4810-01-015-1979	VALVE, FUEL SYSTEM, GATE	BOEING
10-3206-2	6680-00-472-6348	TRANSMITTER, OIL QUANTITY	BOEING
10-3206-9	6680-01-020-5012	TRANSMITTER, OIL QUANTITY	BOEING
10-3212-3	1650-01-021-2865	SERVOVALVE, HYDRAULIC	BOEING
10322A	6620-00-189-2381	INDICATOR, TRIPLE	LIFTEC
10-381550-4	2925-01-360-2734	EXCITER, IGNITION	UNISON INDUSTRIES
10450-31105	6610-00-160-3226	ALTIMETER PRESSURE	AEROSONIC
10450-31327	6610-01-091-3702	ALTIMETER PRESSURE	AEROSONIC
1050-225	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
1051R300	1620-00-406-5828	GEARBOX, LANDING	TRIUMPH GEAR SYSTEMS
106462-1	4810-00-887-1914	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
106462-3-1	4810-00-884-7571	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
10-682560-13	2920-01-222-2581	MAGNETO, DUAL	TELEDYNE INDUSTRIES
107996-X	-----	THERMOSTAT, PNEUMATIC	HONEYWELL INTERNATIONAL
108032-X	-----	REGULATOR, FILTER, PRESSURE	HONEYWELL INTERNATIONAL
10-821614-6R	6150-MD-040-3654	HARNES, DUAL IGNITION	TELEDYNE INDUSTRIES
109710-1-1	4810-00-299-7847	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-2	4810-01-014-2632	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-2-1	4810-01-014-2632	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-3-1	-----	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-4-1	-----	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL

## CAPABILITY LIST

109710-5-1	4820-01-459-2243	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-6	4810-01-229-3584	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-6-1	4810-01-229-3584	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-7-1	-----	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-8-1	-----	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-9	4810-01-393-3991	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
109710-9-1	4810-01-229-3584	VALVE, APU, SHUT-OFF, BUTTERFLY	HONEYWELL INTERNATIONAL
10D014-1	5820-00-782-5308	RADIO SET	OAI ELECTRONICS
110-340	5985-01-562-0815	ANTENNA	CHELTON AVIONIC
1105123-1	1680-01-254-6893	ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	SMITH & SMITH AIRCRAFT
1117-02	4320-14-449-6817	PUMP, HYDRAULIC	IN-LHC
1117-03	1650-14-434-8822	PUMP, HYDRAULIC	IN-LHC
1121-8-9-00	4820-00-810-2061	VALVE, FLUID, REGULATING	PARKER-HANNIFIN
1121F8-2-0	4820-00-622-2446	VALVE, FLUID, REGULATING	PARKER-HANNIFIN
1121F8-9-0	4820-00-810-2061	VALVE, FLUID, REGULATING	PARKER-HANNIFIN
1121F8-9-00	4820-00-810-2061	VALVE, FLUID, REGULATING	PARKER-HANNIFIN
11221-7	1660-01-236-1136	CONTROL BOX, TEMPERATURE	HAMILTON SUNDSTRAND
112-383	2915-00-887-1915	PUMP, FUEL	HAMILTON SUNDSTRAND
113-10105	5831-00-106-2733	CONTROL, PUBLIC ADDRESS SET	RANDAM ELECTRONICS
1144-041030	5826-00-505-0968	INDICATOR, BEARING	KOLLSMAN
11568-000	2935-01-170-8386	COOLER, ENGINE OIL	PALOMAR PRODUCTS
1161160-115	5895-MD-036-3498	COMUNICATION CONTROL UNIT	AMETEK THERMAL SYSTEMS
1161200-115	5831-MD-036-9060	CREW STATION UNIT	PALOMAR PRODUCTS
116595-01	6610-00-557-3030	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
1169340-120	5935-01-518-7034	JACK BOX	PALOMAR PRODUCTS
11700	6615-01-059-7909	GYROSCOPE, RATE OF TURN	ATLANTIC INERTIAL SYSTEMS
117-384019-3	6625-01-294-5627	INDICATOR, FUEL QUANTITY	BEECHCRAFT
1184R125	1680-00-733-3491	WINCH, AIRCRAFT MOUNTED	GOODRICH
119415-2	5895-01-096-3727	TRANSCEIVER, RADIO	BAE SYSTEMS
121000-1	4810-01-220-6060	VALVE, SOLENOID	ROCKER SOLENOID
12-10001-01	6680-01-419-1995	TRANSMITTER, OIL QUANTITY	STRUBE
12-10001-10	6680-01-419-1995	TRANSMITTER, OIL QUANTITY	STRUBE
121000-2	4810-01-220-6060	VALVE, SOLENOID	ROCKER SOLENOID
121672-01	6615-00-550-6628	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
121672-01-15	6615-00-973-2218	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
121672-01-16	6615-00-074-4036	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
121672-01-17	6615-00-900-5959	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
1228-041040	6620-00-553-8988	TRANSMITTER, PRESSURE	KOLLSMAN
123488-010-01	4320-01-471-3415	PUMP, ROTARY	ONTIC
124236-1	6645-00-091-7107	TIMER, ELECTRICAL, STOP	ROLLS-ROYCE
124536-22	2910-00-420-1277	CONTROL, TURBINE ENGINE, FUEL	HONEYWELL INTERNATIONAL
124536-31	2910-01-034-9473	CONTROL, TURBINE ENGINE, FUEL	HONEYWELL INTERNATIONAL
124623-01	6615-00-581-2265	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
124623-01-09	6615-00-852-1611	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS



## CAPABILITY LIST

124623-01-10	6615-00-951-9140	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
124623-01-12	6615-00-994-8940	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
12DB-0594	4140-00-564-5980	FAN, CENTRIFUGAL	MOTOR MAGNETICS
1316940-1	6615-00-887-6721	GYROSCOPE, RATE OF TURN	HONEYWELL INTERNATIONAL
13207E3189-2	4320-00-930-5414	MOTOR, HYDRAULIC	EATON AEROSPACE
133258-2-1	1660-00-757-7908	TRANSDUCER, GAGE	HONEYWELL
135070	6610-01-132-1898	INDICATOR, ATTITUDE DIRECTOR	ASTRONAUTICS
1356-512471	1650-00-516-6914	ACCUMULATOR ASSY, HYDRAULIC	PARKER-HANNIFIN
1356-542903	1650-00-584-9343	ACCUMULATOR ASSY, HYDRAULIC	PARKER-HANNIFIN
1356-552094	1650-00-516-6914	ACCUMULATOR ASSY, HYDRAULIC	PARKER-HANNIFIN
1356-552235	1650-00-516-6914	ACCUMULATOR ASSY, HYDRAULIC	PARKER-HANNIFIN
1356-583317	1650-00-877-6095	ACCUMULATOR ASSY, HYDRAULIC	PARKER-HANNIFIN
136601-01-03	6610-00-866-3234	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
1374-598497	4810-00-887-4337	VALVE, SOLENOID, SHUTOFF	ROCKWELL COLLINS
137A6	5985-00-689-6576	ANTENA, ADF	PARKER-HANNIFIN
1391-041046	6620-00-514-5334	INDICATOR, PRESSURE	KOLLSMAN
139602-01-01	6610-00-068-3464	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
13V600-6	4820-00-978-8886	VALVE, NLG, SHUTTLE	HONEYWELL INTERNATIONAL
1426-1AE1	6610-00-230-8656	INDICATOR, AIR SPEED	CARLETON
1426-1AEA1	6610-00-230-8656	INDICATOR, AIR SPEED	CARLETON
1426-1BA1	6610-00-230-8669	INDICATOR, AIR SPEED	CARLETON
1426-1ZA1	6610-00-263-3076	INDICATOR, AIR SPEED	CARLETON
1426-2JA1	6610-00-190-1407	INDICATOR, AIR SPEED	CARLETON
1426-37AA6	-----	INDICATOR, AIR SPEED	CARLETON
1426-37EA6	-----	INDICATOR, AIR SPEED	CARLETON
1426-37FA6	-----	INDICATOR, AIR SPEED	CARLETON
1426-37GA6	-----	INDICATOR, AIR SPEED	CARLETON
1426-AEA1	6610-00-230-8656	INDICATOR, AIR SPEED	CARLETON
1432-22BAA1	6610-00-864-9966	INDICATOR, AIR SPEED	CARLETON
1432-22DBA1	6610-00-222-8956	INDICATOR, AIR SPEED	CARLETON
1463-55F-B55-1	6610-01-010-1746	INDICATOR, MACH AND TRUE AIR SPEED	CARLETON LIFE SUPPORT SYSTEMS
1463-55F-B55-4	6610-01-109-5605	INDICATOR, MACH AND TRUE AIR SPEED	CARLETON LIFE SUPPORT SYSTEMS
1463-55K-B55-1	6610-01-008-1653	INDICATOR, MACH AND TRUE AIR SPEED	CARLETON LIFE SUPPORT SYSTEMS
1463-55K-B55-2	6610-01-109-4841	INDICATOR, MACH AND TRUE AIR SPEED	CARLETON LIFE SUPPORT SYSTEMS
14711-200	1670-00-989-6799	LATCH ASSY, CONVEYOR	TELAIR
147930-01-01	6615-00-880-5033	GYROSCOPE, SWITCHING RATE	GE AVIATION SYSTEMS
147B13	6685-00-526-4559	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B13A	6685-00-526-4559	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B30	6685-00-557-0372	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B30A	6685-00-526-7730	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B31	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B31A	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B31A2	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B31A3	6685-00-005-9025	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE



## CAPABILITY LIST

147B31A3-1	6685-00-005-9025	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B31A4	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B31B	6685-00-692-8341	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B31C	6685-00-530-3321	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B31F	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B31G	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B7	6685-00-553-4726	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B7A	6685-00-553-4726	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
147B8	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
149452-01-01	6615-00-181-1879	GYROSCOPE, SWITCHING RATE	GE AVIATION SYSTEMS
15-0069-25	6220-01-304-4054	SPOTLIGHT	GRIMES AEROSPACE
15120-4	1630-00-887-4268	VALVE, BRAKE ACTUATOR	MOOG
1521BU4-02	6685-00-514-5061	INDICATOR, PRESSURE	KOLLSMAN
1521U4-02	6685-00-514-5061	INDICATOR, PRESSURE	KOLLSMAN
152B4	6685-00-530-3614	INDICATOR, ANTI-ICING	HORIZON AEROSPACE
152B44	6685-00-530-3614	INDICATOR, ANTI-ICING	HORIZON AEROSPACE
1559-4-03	6620-00-526-5003	INDICATOR, ELECTRICAL TACHOMETER	KOLLSMAN
1559B4-05	6680-00-663-4206	INDICATOR, ELECTRICAL TACHOMETER	KOLLSMAN
1559C4-06	6620-00-556-1976	INDICATOR, ELECTRICAL TACHOMETER	KOLLSMAN
15647-1A	6615-00-800-2544	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	KOLLSMAN
1570-041040	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
1570B041040	6620-00-514-5334	INDICATOR, PRESSURE	KOLLSMAN
1570B-041040	6620-00-514-5334	INDICATOR, PRESSURE	KOLLSMAN
1570C041041	6620-00-514-5334	INDICATOR, PRESSURE	KOLLSMAN
1570C-041041	6620-00-514-5334	INDICATOR, PRESSURE	KOLLSMAN
15720-5	1630-00-887-1916	VALVE, BRAKE	MOOG
15868-1A	6615-00-887-6721	GYROSCOPE, RATE OF TURN	HONEYWELL INTERNATIONAL
15885-1B	6615-00-986-8995	GYROSCOPE, DISPLACEMENT	HONEYWELL INTERNATIONAL
15885-1C	6615-00-182-7698	GYROSCOPE, DISPLACEMENT	HONEYWELL INTERNATIONAL
15885-4C	6615-01-454-1463	GYROSCOPE, DISPLACEMENT	HONEYWELL INTERNATIONAL
1593-503	6220-00-299-4621	LIGHT, LANDING, AIRCRAFT	SPECIALTY LIGHTING
162B2	6685-00-553-4726	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
1630BU4-02	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
1630U4-03	6605-00-526-7253	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
1630U4-04	6605-00-514-3851	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
1630X4-03	6605-00-526-7252	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
164-1	6680-00-753-8932	INDICATOR, LIQUID QUANTITY	TRANSICOIL
16VC002-3	6610-01-222-6439	TRANSMITTER, ANGLE OF ATTACK	LOCKHEED MARTIN
16VE002001-1	6680-01-060-4248	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
16VE002001-3	6680-01-060-4249	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
16VF002-1	6610-01-114-6817	INDICATOR, ANGLE OF ATTACK	LOCKHEED MARTIN
16VF003-2	6620-01-060-3086	INDICATOR, ELECTRICAL, TACHOMETER	LOCKHEED MARTIN
16VF041-2	6610-01-395-3510	INDICATOR, VERTICAL VELOCITY	LOCKHEED MARTIN
16V5004-1	6610-01-132-1898	INDICATOR, ATTITUDE DIRECTOR	LOCKHEED MARTIN

## CAPABILITY LIST

16VL014001-4	1630-01-217-3141	SENSOR, WHEEL SPEED	LOCKHEED MARTIN
16VP009-3	4810-01-123-7254	VALVE, FLUID PRESSURE, REGULATING	LOCKHEED MARTIN
16VY007001-9	4810-01-154-3200	VALVE, REGULATING, FLUID PRESSURE	LOCKHEED MARTIN
16VY100-10	4810-01-130-7379	VALVE, REGULATING	LOCKHEED MARTIN
16VY103002-1	1660-01-057-5182	CONTROL BOX, AIR TEMPERATURE	LOCKHEED MARTIN
16VZ001-55	6615-00-137-6038	GYROSCOPE, RATE OF TURN	LOCKHEED MARTIN
172-1704	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL
172937-001	5930-01-113-3970	SWITCH, STEPPING	TELEDYNE CONTROLS
17861-7	4810-00-018-3826	VALVE, BUTTERFLY	SAIA-BURGESS
17862-7	4810-00-018-3825	VALVE, BUTTERFLY	TELEDYNE CONTROLS
179727-2	5996-00-764-6258	AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	HONEYWELL INTERNATIONAL
179822-1	5996-00-691-0174	AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	HONEYWELL INTERNATIONAL
18000-2	5826-00-032-7024	INDICATOR, BEARING-DISTANCE-HEADING	AERONAUTICAL INSTRUMENT AND RADIO COM
1801-1-A	-----	COMPASS, MAGNETIC, MOUNTED	BE AEROSPACE
180-147	7330-00-532-5867	JUG, INSULATED	HONEYWELL AEROSPATIALE
1802529-1	6615-00-986-8995	GYROSCOPE, DISPLACEMENT	HONEYWELL INTERNATIONAL
18-1033	6695-00-628-8990	INDICATOR, POSITION	HONEYWELL INTERNATIONAL
18-1101	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
1813-1-A	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1813-1-B	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
18-1497	6620-00-999-2222	TRANSMITTER, PRESSURE	HONEYWELL AEROSPATIALE
18-1497-2	6620-00-999-2222	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1497-3	6620-00-999-2222	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1498	6620-00-999-2424	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1498-02	6620-00-999-2424	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1498-2	6620-00-999-2424	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1498-4	6620-00-999-2424	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1499	6620-00-999-2425	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1499-02	6620-00-999-2425	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1499-2	6620-00-999-2425	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1499-4	6620-00-999-2425	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1499-5		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1683	6685-00-133-7890	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1683-3	6620-00-754-7494	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1686-2	5826-00-032-7024	INDICATOR, BEARING-DISTANCE-HEADING	HONEYWELL INTERNATIONAL
18-1699	6620-00-553-8988	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
181700-1	1660-00-909-4310	HEAT EXCHANGER, AIR TO AIR	HONEYWELL INTERNATIONAL
181700-1-1	1660-00-909-4310	HEAT EXCHANGER, AIR TO AIR	HONEYWELL INTERNATIONAL
181700-2-1	1660-01-437-8166	HEAT EXCHANGER, AIR TO AIR	HONEYWELL INTERNATIONAL
18-1704	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1718	6620-00-902-3688	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1718-2	6620-01-106-1311	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1718-3		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1718-3A	6620-01-067-8336	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL

## CAPABILITY LIST

18-1724	6620-00-901-7848	TRANSMITTER PRESSURE	HONEYWELL INTERNATIONAL
18-1724-2		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1724-3	6620-00-901-7848	TRANSMITTER PRESSURE	HONEYWELL INTERNATIONAL
18-1750-2		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1765	6685-00-615-9904	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1796	6620-00-115-2501	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-18-14	6620-00-588-3576	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1814-2		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1815	6620-00-415-2768	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1815-2		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18181A	6605-00-663-5933	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1818-1A	6605-00-663-5933	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1818-1-A	6605-00-342-0799	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
18-1842-2		TRANSMITTER, PRESSURE	HONEYWELL AEROSPATIALE
18-1842-3	6620-01-029-5299	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1842-4		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1842-5	6620-01-096-5037	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1842-6	6620-01-130-2626	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-1842-7		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18184A	6605-00-663-8511	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1818-4-A	6605-00-663-8511	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
181880-1	1660-00-909-4309	HEAT EXCHANGER, AIR TO AIR	HONEYWELL AEROSPATIALE
181880-1-1	1660-00-909-4309	HEAT EXCHANGER, AIR TO AIR	HONEYWELL INTERNATIONAL
181880-2-1	1660-01-446-9327	HEAT EXCHANGER, AIR TO AIR	HONEYWELL INTERNATIONAL
18-1887	6620-01-034-0888	TRANSMITTER, PRESSURE	LOCKHEED MARTIN
18-1894		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-2021	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
18212A	6605-00-663-8523	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1821-2A	6605-00-663-8523	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1821-2-A	6605-00-663-8523	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1822-1-A	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
1822-1-B	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
1822-1-C	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
18234A	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
1823-4A	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1826-1-A	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
18282A	6605-00-348-5744	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
1828-2A	6605-00-348-5744	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
18-3106		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-3106-2	6620-00-999-2222	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-3108		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-3108-2	6620-00-999-2424	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-3110-2	6620-00-065-3235	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
18-3112-2	6620-00-999-2425	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL

## CAPABILITY LIST

18-3114-2	6620-01-256-9703	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
1831-1-A	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1832-1-A	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
1832-3-A	6605-00-663-5950	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
1833-1-A	6605-00-663-5946	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
18401A	6605-00-514-5746	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
1840-1A	6605-00-514-5746	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
18402A	6605-00-514-5746	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1840-2A	6605-00-514-5746	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
18412A	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1841-2A	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
18412B	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1841-2B	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
1845X4-03	6610-00-388-0030	ALTIMETER, PRESSURE	KOLLSMAN
1845X4-03D	6610-00-526-6081	ALTIMETER, PRESSURE	KOLLSMAN
1845X4-03DF	6610-00-179-2197	ALTIMETER, PRESSURE	KOLLSMAN
18-4797-3		TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
190772-2	2915-00-626-3123	VALVE, FUEL SYSTEM	HONEYWELL INTERNATIONAL
19-20-281	6610-00-580-9690	INDICATOR, RUDDER, POSITION	PENN KEYSTONE
19-20-9	6610-00-515-4600	INDICATOR, FLAP, POSITION	PENN KEYSTONE
19A513	4140-00-564-5980	FAN, CENTRIFUGAL	GLOBE MOTORS
1G107	5930-00-615-7340	SWITCH, PRESSURE	CUSTOM CONTROL SENSORS
1U028-005-047	6620-01-143-2180	GAGE, FUEL FLOW	SIGMA TEK
1VC1001-1L	1680-00-671-3837	SEAT, AIRCRAFT, TROOPS	NEWGARD INDUSTRIES
1VC1001-1R	1680-00-671-2101	SEAT, AIRCRAFT, TROOPS	NEWGARD INDUSTRIES
20000500289-003	1660-01-408-7708	CONTROLLER, AIR PRESSURE, AIRCRAFT CABIN	BOEING
200-069-002	6620-01-060-3086	INDICATOR, ELECTRICAL, TACHOMETER	PARKER-HANNIFIN
200-069-003	6620-01-060-3086	INDICATOR, ELECTRICAL, TACHOMETER	PARKER-HANNIFIN
200F-5003	2915-MD-003-2382	PUMP, FUEL	HARTZELL ENGINE TECHNOLOGIES
200F-5003R	2915-MD-003-2382	PUMP, FUEL	HARTZELL ENGINE TECHNOLOGIES
201-004-001	6620-01-038-5801	INDICATOR, TORQUEMETER	PARKER-HANNIFIN
2012273-01	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	L3 TECHNOLOGIES
20140-0351	6610-00-006-5783	INDICATOR, MACH AND TRUE AIR SPEED	AEROSONIC
2015-10-01	6605-00-390-8429	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
201F-5007	2915-MD-040-3652	PUMP, FUEL	HARTZELL ENGINE TECHNOLOGIES
201F-5007R	2915-01-520-7874	PUMP, FUEL	HARTZELL ENGINE TECHNOLOGIES
20-224-01	6680-01-290-5920	INDICATOR, PRIMARY, FUEL QUANTITY	GE AVIATION SYSTEMS
20-225-01	6680-01-290-7552	INDICATOR, REPEATER, FUEL QUANTITY	GE AVIATION SYSTEMS
20-226-01	6680-01-291-4271	INDICATOR, TOTALIZER, FUEL QUANTITY	GE AVIATION SYSTEMS
2041232-1104	6210-01-408-7389	INDICATOR, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2041440-0101	5985-01-089-0737	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2041440-0102	-----	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2041440-0104	5985-01-194-2321	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2041440-0106	5985-01-315-0315	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL

## CAPABILITY LIST

2070409-0101	5985-01-408-7393	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070409-0103	----	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070409-0108	----	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0101	5821-01-408-7392	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0102	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0103	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0105	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0106	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0108	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0110	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0111	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0112	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0113	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0151	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0152	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0153	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0156	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0158	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070410-0163	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070963-0101	5841-01-305-1921	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070963-0102	5841-01-091-8929	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070963-0103	----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070963-0104	5841-01-194-2452	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070963-0105	5841-01-314-9947	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070964-0106	5841-01-193-6436	INDICATOR, WEATHER, RADAR	HONEYWELL INTERNATIONAL
2070964-0107	5841-01-314-9991	INDICATOR, WEATHER, RADAR	HONEYWELL INTERNATIONAL
208-013-005	6620-01-276-9825	INDICATOR, TEMPERATURE, FAN TURBINE INLET	PARKER-HANNIFIN
20B95-4A	6110-01-109-5099	REGULATOR, VOLTAGE	ALLIED SIGNAL
2109-5	6685-01-112-9094	ALTIMETER, PRESSURIZED COMPARTMENT	KEARFLEX ENGINEERING
211-009-005	6680-01-342-7698	INDICATOR, FUEL QUANTITY	PARKER HANNIFIN
2-1109	1630-00-927-1773	BRAKE, MULTIPLE DISK	GOODRICH
2118-364	6610-01-391-9062	ACCELEROMETER, MECHANICAL	Q.E.D.
2119-001	6610-00-585-5929	ACCELEROMETER, MECHANICAL	BURTON MEDICAL PRODUCTS
2119-001-1	----	ACCELEROMETER, MECHANICAL	BURTON MEDICAL PRODUCTS
2119-001-2	6610-00-585-1355	ACCELEROMETER, MECHANICAL	BURTON MEDICAL PRODUCTS
2119-001-3	6610-00-684-1666	ACCELEROMETER, MECHANICAL	BURTON MEDICAL PRODUCTS
2119-500	6610-00-007-1030	ACCELEROMETER, MECHANICAL	Q.E.D.
21-545	5945-00-628-6484	RELAY, HYBRID	TE CONNECTIVITY
2159K	6615-00-880-5033	GYROSCOPE, SWITCHING RATE	GE AVIATION SYSTEMS
2159T	6615-00-181-1879	GYROSCOPE, SWITCHING RATE	GE AVIATION SYSTEMS
219A967	1630-00-914-1329	WHEEL, NOSE LANDING GEAR	JAY-EM AEROSPACE
219A967-1	1630-00-914-1329	WHEEL, NOSE LANDING GEAR	JAY-EM AEROSPACE
21B18-1B	6110-00-060-6811	REGULATOR, VOLTAGE	HONEYWELL INTERNATIONAL
21B18-1C	6110-00-060-6811	REGULATOR, VOLTAGE	HONEYWELL INTERNATIONAL

**CAPABILITY LIST**

21B18-5-A	6110-01-017-5428	REGULATOR, VOLTAGE	HONEYWELL INTERNATIONAL
21C1577-46	6680-00-959-7632	GENERATOR, TACHOMETER	AMETEK
2200440-7-3	1660-01-275-5646	REFRIGERATOR, AIR CYCLE	HONEYWELL INTERNATIONAL
22055-1FAP.CN1	5826-MD-010-2387	INDICATOR, RADIO MAGNETIC	CINAVE
2221-1	6605-00-663-5630	COMPASS, MAGNETIC, MOUNTED	AMETEK
229255-3	-----	VALVE, REGULATING	MEGGITT
229255-4	4810-01-130-7379	VALVE, REGULATING	MEGGITT
2311M-28-1	6105-00-630-5828	MOTOR, DIRECT CURRENT	ROSEMOUNT AEROSPACE
23410-3	1630-00-998-7897	VALVE, BRAKE CONTROL	EATON
239-001	6625-01-412-3365	METER, ELECTRICAL FREQUENCY	JEWELL INSTRUMENTS
23932-001	-----	ALTIMETER, PRESSURE	EDO
23932-002	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-003	6610-01-009-8021	ALTIMETER, PRESSURE	KOLLSMAN
23932-004	6660-01-020-3765	ALTIMETER, PRESSURE	KOLLSMAN
23932-005	6660-01-020-3765	ALTIMETER, PRESSURE	KOLLSMAN
23932-006	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-008	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-011	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-012	6610-01-074-2819	ALTIMETER, PRESSURE	KOLLSMAN
23932-013	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-014	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-021	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-022	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-023	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-024	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-031	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-032	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-033	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-034	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-201	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-202	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-203	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-204	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-211	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-212	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-213	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-214	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-301	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-302	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-303	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-304	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-311	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-312	-----	ALTIMETER, PRESSURE	KOLLSMAN
23932-313	-----	ALTIMETER, PRESSURE	KOLLSMAN

## CAPABILITY LIST

23932-314	----	ALTIMETER, PRESSURE	KOLLSMAN
23932-401	----	ALTIMETER, PRESSURE	KOLLSMAN
23932-402	----	ALTIMETER, PRESSURE	KOLLSMAN
23932-403	----	ALTIMETER, PRESSURE	KOLLSMAN
23932-404	----	ALTIMETER, PRESSURE	KOLLSMAN
23932-411	----	ALTIMETER, PRESSURE	KOLLSMAN
23932-412	----	ALTIMETER, PRESSURE	KOLLSMAN
23932-413	----	ALTIMETER, PRESSURE	KOLLSMAN
23932-414	6610-01-294-5633	ALTIMETER, PRESSURE	KOLLSMAN
23932-901	6610-01-329-9067	ALTIMETER, PRESSURE	KOLLSMAN
23932-902	----	ALTIMETER, PRESSURE	KOLLSMAN
2430-87-00	5985-01-324-6246	ANTENNA	KOLLSMAN
250A200	1630-01-188-6735	WHEEL, MAIN LANDING GEAR	JAY-EM AEROSPACE
250A2001LC	1630-01-188-6735	WHEEL, MAIN LANDING GEAR	JAY-EM AEROSPACE
250A200-1LC	1630-01-188-6735	WHEEL, MAIN LANDING GEAR	JAY-EM AEROSPACE
25100A15A1B1	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
25200A15A1-1A1	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
25200A15B1-1A1	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
25201A15B2-1A1	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
25201A15B4-1A1	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
25201-A15B-4-1C2	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
25201A15C7-2B2	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
25530562-01	6685-01-119-6546	THERMOSTAT, FLOW CONTROL	VAPOR CORP
25530562-02	6685-00-670-0895	THERMOSTAT, FLOW CONTROL	VAPOR CORP
25615-C27A-26-A1	6685-00-868-5858	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
25730032-02	----	VALVE, SOLENOID CONTROLLED, SHUT-OFF	MEGGITT
25730032-03	----	VALVE, SOLENOID CONTROLLED, SHUT-OFF	MEGGITT
25730032-04	4810-00-730-2852	VALVE, SOLENOID CONTROLLED, SHUT-OFF	MEGGITT
25730043-02	----	VALVE, SOLENOID CONTROLLED, SHUT-OFF	MEGGITT
25730043-03	4810-00-730-3551	VALVE, SOLENOID CONTROLLED, SHUT-OFF	MEGGITT
2586261-1	6605-00-447-9665	CONTROLLER, DIGITAL	HONEYWELL INTERNATIONAL
2586261-2	----	CONTROLLER, DIGITAL	HONEYWELL INTERNATIONAL
2586333-1	6615-00-447-9683	GYROSCOPE, DIRECCIONAL	HONEYWELL INTERNATIONAL
2586333-2	6615-00-180-0895	GYROSCOPE, DIRECCIONAL	HONEYWELL INTERNATIONAL
2586333-3	6615-01-065-7226	GYROSCOPE, DIRECCIONAL	HONEYWELL INTERNATIONAL
2586384-1	5895-00-447-9688	AMPLIFIER, POWER SUPPLY	HONEYWELL INTERNATIONAL
2586384-2	----	AMPLIFIER, POWER SUPPLY	HONEYWELL INTERNATIONAL
2589226-1	6605-00-999-2411	AMPLIFIER, POWER SUPPLY	HONEYWELL INTERNATIONAL
26130010-01	4810-00-987-3948	VALVE, SOLENOID, SHUT-OFF	HAMILTON SUNDSTRAND
26130010-01A	----	VALVE, SOLENOID, SHUT-OFF	HAMILTON SUNDSTRAND
26130011-01	4810-01-206-6309	VALVE, SOLENOID, SHUT-OFF	HAMILTON SUNDSTRAND
261D1644	5985-01-015-0737	ANTENNA	EDO
270-2261-010	6685-00-526-7864	TRANSMITTER, PRESSURE	ROCKWELL COLLINS
270-2494-010	----	GYROSCOPE, ROTATING	ROCKWELL COLLINS



**CAPABILITY LIST**

270-2494-020	----	GYROSCOPE, ROTATING	ROCKWELL COLLINS
27231317	----	CONTROL BOX, TEMPERATURE	HAMILTON SUNDSTRAND
27231317-01	1660-01-014-4509	CONTROL BOX, TEMPERATURE	HAMILTON SUNDSTRAND
27231318	1660-01-021-4981	CONTROL BOX, TEMPERATURE	HAMILTON SUNDSTRAND
27231318-01	1660-01-021-4981	CONTROL BOX, TEMPERATURE	VAPOR BRUNSWICK
272-41-301	4820-00-006-5087	VALVE, ENGINE, BLEED AIR, CHECK	VAPOR
272B308042	6220-00-299-4621	LIGHT, LANDING, AIRCRAFT	MARTIN AIRCRAFT TOOL
27431466-01	1660-01-003-6297	CONTROL BOX, TEMPERATURE	VAPOR BRUNSWICK
275540-003	6655-01-283-0303	INDICATORMAGNETIC VARIATION	B V R TECHNOLOGIES
276-5324-002	6615-01-038-8080	LIGHT ASSY, INDICATOR	KORRY ELECTRONICS
276-5328-001	6220-01-195-2560	PANEL, INDICATING, LIGHT TRANSMITTING	KORRY ELECTRONICS
28002-001	6140-00-283-7855	BATTERY, INU, STORAGE	MARATHONNORCO AEROSPACE
28007-001	----	ALTIMETER, ENCODING	KOLLSMAN
28007-002	6610-01-121-9627	ALTIMETER, ENCODING	KOLLSMAN
28007-003	----	ALTIMETER, ENCODING	KOLLSMAN
28007-004	----	ALTIMETER, ENCODING	KOLLSMAN
28007-005	----	ALTIMETER, ENCODING	KOLLSMAN
28007-006	----	ALTIMETER, ENCODING	KOLLSMAN
28007-007	----	ALTIMETER, ENCODING	KOLLSMAN
28007-008	----	ALTIMETER, ENCODING	KOLLSMAN
28007-009	----	ALTIMETER, ENCODING	KOLLSMAN
28007-010	----	ALTIMETER, ENCODING	KOLLSMAN
28007-011	----	ALTIMETER, ENCODING	KOLLSMAN
28007-012	----	ALTIMETER, ENCODING	KOLLSMAN
28007-013	----	ALTIMETER, ENCODING	KOLLSMAN
28007-014	----	ALTIMETER, ENCODING	KOLLSMAN
28007-015	----	ALTIMETER, ENCODING	KOLLSMAN
28007-016	----	ALTIMETER, ENCODING	KOLLSMAN
28007-017	----	ALTIMETER, ENCODING	KOLLSMAN
28007-018	----	ALTIMETER, ENCODING	KOLLSMAN
28007-019	----	ALTIMETER, ENCODING	KOLLSMAN
28007-020	----	ALTIMETER, ENCODING	KOLLSMAN
28007-021	----	ALTIMETER, ENCODING	KOLLSMAN
28007-022	----	ALTIMETER, ENCODING	KOLLSMAN
28007-023	----	ALTIMETER, ENCODING	KOLLSMAN
28007-024	----	ALTIMETER, ENCODING	KOLLSMAN
28007-025	----	ALTIMETER, ENCODING	KOLLSMAN
28007-026	----	ALTIMETER, ENCODING	KOLLSMAN
28007-027	----	ALTIMETER, ENCODING	KOLLSMAN
28007-028	----	ALTIMETER, ENCODING	KOLLSMAN
28007-029	----	ALTIMETER, ENCODING	KOLLSMAN
28007-030	----	ALTIMETER, ENCODING	KOLLSMAN
28007-171	----	ALTIMETER, ENCODING	KOLLSMAN
28007-172	----	ALTIMETER, ENCODING	KOLLSMAN

**CAPABILITY LIST**

28007-173	----	ALTIMETER, ENCODING	KOLLSMAN
28007-174	6610-01-346-5592	ALTIMETER, ENCODING	KOLLSMAN
28007-175	----	ALTIMETER, ENCODING	KOLLSMAN
28007-176	----	ALTIMETER, ENCODING	KOLLSMAN
28007-177	----	ALTIMETER, ENCODING	KOLLSMAN
28007-178	----	ALTIMETER, ENCODING	KOLLSMAN
28007-201	----	ALTIMETER, ENCODING	KOLLSMAN
28007-202	----	ALTIMETER, ENCODING	KOLLSMAN
28007-203	----	ALTIMETER, ENCODING	KOLLSMAN
28007-204	6610-01-259-0251	ALTIMETER, ENCODING	KOLLSMAN
28007-205	----	ALTIMETER, ENCODING	KOLLSMAN
28007-206	----	ALTIMETER, ENCODING	KOLLSMAN
28007-207	----	ALTIMETER, ENCODING	KOLLSMAN
28007-208	----	ALTIMETER, ENCODING	KOLLSMAN
28007-209	----	ALTIMETER, ENCODING	KOLLSMAN
28007-210	----	ALTIMETER, ENCODING	KOLLSMAN
28007-211	----	ALTIMETER, ENCODING	KOLLSMAN
28007-212	----	ALTIMETER, ENCODING	KOLLSMAN
28007-213	----	ALTIMETER, ENCODING	KOLLSMAN
28007-214	----	ALTIMETER, ENCODING	KOLLSMAN
28007-215	----	ALTIMETER, ENCODING	KOLLSMAN
28007-216	----	ALTIMETER, ENCODING	KOLLSMAN
28007-217	----	ALTIMETER, ENCODING	KOLLSMAN
28007-218	----	ALTIMETER, ENCODING	KOLLSMAN
28007-223	----	ALTIMETER, ENCODING	KOLLSMAN
28007-224	----	ALTIMETER, ENCODING	KOLLSMAN
28007-225	----	ALTIMETER, ENCODING	KOLLSMAN
28007-226	----	ALTIMETER, ENCODING	KOLLSMAN
28007-227	----	ALTIMETER, ENCODING	KOLLSMAN
28007-228	----	ALTIMETER, ENCODING	KOLLSMAN
28007-229	----	ALTIMETER, ENCODING	KOLLSMAN
28007-230	----	ALTIMETER, ENCODING	KOLLSMAN
28007-231	----	ALTIMETER, ENCODING	KOLLSMAN
28007-232	----	ALTIMETER, ENCODING	KOLLSMAN
28007-233	----	ALTIMETER, ENCODING	KOLLSMAN
28007-234	----	ALTIMETER, ENCODING	KOLLSMAN
28007-235	----	ALTIMETER, ENCODING	KOLLSMAN
28007-261	----	ALTIMETER, ENCODING	KOLLSMAN
28007-262	----	ALTIMETER, ENCODING	KOLLSMAN
28007-263	----	ALTIMETER, ENCODING	KOLLSMAN
28007-264	----	ALTIMETER, ENCODING	KOLLSMAN
28007-265	----	ALTIMETER, ENCODING	KOLLSMAN
28007-266	----	ALTIMETER, ENCODING	KOLLSMAN
28007-267	----	ALTIMETER, ENCODING	KOLLSMAN

### CAPABILITY LIST

28007-268	----	ALTIMETER, ENCODING	KOLLSMAN
28007-269	----	ALTIMETER, ENCODING	KOLLSMAN
28007-270	----	ALTIMETER, ENCODING	KOLLSMAN
28007-271	----	ALTIMETER, ENCODING	KOLLSMAN
28007-272	----	ALTIMETER, ENCODING	KOLLSMAN
28007-301	----	ALTIMETER, ENCODING	KOLLSMAN
28007-302	----	ALTIMETER, ENCODING	KOLLSMAN
28007-303	----	ALTIMETER, ENCODING	KOLLSMAN
28007-304	----	ALTIMETER, ENCODING	KOLLSMAN
28007-305	----	ALTIMETER, ENCODING	KOLLSMAN
28007-306	----	ALTIMETER, ENCODING	KOLLSMAN
28007-307	----	ALTIMETER, ENCODING	KOLLSMAN
28007-308	----	ALTIMETER, ENCODING	KOLLSMAN
28007-309	----	ALTIMETER, ENCODING	KOLLSMAN
28007-310	----	ALTIMETER, ENCODING	KOLLSMAN
28007-311	----	ALTIMETER, ENCODING	KOLLSMAN
28007-312	----	ALTIMETER, ENCODING	KOLLSMAN
28007-313	----	ALTIMETER, ENCODING	KOLLSMAN
28007-314	----	ALTIMETER, ENCODING	KOLLSMAN
28007-315	----	ALTIMETER, ENCODING	KOLLSMAN
28007-316	----	ALTIMETER, ENCODING	KOLLSMAN
28007-317	----	ALTIMETER, ENCODING	KOLLSMAN
28007-318	----	ALTIMETER, ENCODING	KOLLSMAN
28007-319	----	ALTIMETER, ENCODING	KOLLSMAN
28007-320	----	ALTIMETER, ENCODING	KOLLSMAN
28007-321	----	ALTIMETER, ENCODING	KOLLSMAN
28007-322	----	ALTIMETER, ENCODING	KOLLSMAN
28007-323	----	ALTIMETER, ENCODING	KOLLSMAN
28007-324	----	ALTIMETER, ENCODING	KOLLSMAN
28007-325	----	ALTIMETER, ENCODING	KOLLSMAN
28007-326	----	ALTIMETER, ENCODING	KOLLSMAN
28007-327	----	ALTIMETER, ENCODING	KOLLSMAN
28007-328	----	ALTIMETER, ENCODING	KOLLSMAN
28007-329	----	ALTIMETER, ENCODING	KOLLSMAN
28007-330	----	ALTIMETER, ENCODING	KOLLSMAN
28007-331	----	ALTIMETER, ENCODING	KOLLSMAN
28007-332	----	ALTIMETER, ENCODING	KOLLSMAN
28007-333	----	ALTIMETER, ENCODING	KOLLSMAN
28007-334	----	ALTIMETER, ENCODING	KOLLSMAN
28007-335	----	ALTIMETER, ENCODING	KOLLSMAN
28007-336	----	ALTIMETER, ENCODING	KOLLSMAN
28007-337	----	ALTIMETER, ENCODING	KOLLSMAN
28007-338	----	ALTIMETER, ENCODING	KOLLSMAN
28007-339	----	ALTIMETER, ENCODING	KOLLSMAN

**CAPABILITY LIST**

28007-340	----	ALTIMETER, ENCODING	KOLLSMAN
28007-341	----	ALTIMETER, ENCODING	KOLLSMAN
28007-342	----	ALTIMETER, ENCODING	KOLLSMAN
28007-343	----	ALTIMETER, ENCODING	KOLLSMAN
28007-344	----	ALTIMETER, ENCODING	KOLLSMAN
28007-345	----	ALTIMETER, ENCODING	KOLLSMAN
28007-346	----	ALTIMETER, ENCODING	KOLLSMAN
28007-347	----	ALTIMETER, ENCODING	KOLLSMAN
28007-700	----	ALTIMETER, ENCODING	KOLLSMAN
28007-800	----	ALTIMETER, ENCODING	KOLLSMAN
28007-906	----	ALTIMETER, ENCODING	KOLLSMAN
28007-907	----	ALTIMETER, ENCODING	KOLLSMAN
28007-921	----	ALTIMETER, ENCODING	KOLLSMAN
28007-922	----	ALTIMETER, ENCODING	KOLLSMAN
28B95-65A	6115-01-053-7272	GENERATOR, A/C	COOPER INDUSTRIES
28VS200Y4	6130-00-566-0347	POWER CONVERTER, AC/DC	HONEYWELL INTERNATIONAL
28VS200Y-4	6130-00-566-0347	POWER CONVERTER, AC/DC	COOPER INDUSTRIES
28VS200Y4A	6130-00-164-4224	POWER CONVERTER, AC/DC	COOPER INDUSTRIES
28VS200Y-4A	6120-01-591-0842	POWER CONVERTER, AC/DC	COOPER INDUSTRIES
28YBL100A1	6130-00-314-0050	POWER CONVERTER, AC/DC	COOPER INDUSTRIES
28YBL100A-1	6130-00-314-0050	POWER CONVERTER, AC/DC	COOPER INDUSTRIES
28YBL100A1A	6130-00-314-0050	POWER CONVERTER, AC/DC	CHAMPION AEROSPACE
28YBL100A-1A	6130-00-314-0050	POWER CONVERTER, AC/DC	CHAMPION AEROSPACE
2A1991-313	5985-00-588-2822	ANTENNA, LOOP	KEARFOTT
2B6-6	2910-01-143-0195	PUMP, FUEL, ELECTRICAL	PARKER HANNIFIN
2C1565-91A	5826-00-234-6315	INDICATOR, BEARING	KEARFOTT
2C1565-92	5826-00-505-0968	INDICATOR, BEARING	KOLLSMAN
2C666-149	5895-00-247-3004	CONTROL BOX, RECEIVER	BAE SYSTEMS
2CM9AAA1	6680-00-815-1905	GENERATOR, TACHOMETER	AMETEK
2CM9AAA2	6680-00-815-1905	GENERATOR, TACHOMETER	AMETEK
2CM9AAA6	6680-00-815-1905	GENERATOR, TACHOMETER	AMETEK
2CM9AAC6	6680-00-959-7632	GENERATOR, TACHOMETER	AMETEK
2CM9AAH4	6680-00-445-1246	GENERATOR, TACHOMETER	AMETEK
2CM9AAV6	----	GENERATOR, TACHOMETER	AMETEK
2CM9AAZ6	6680-00-034-0505	GENERATOR, TACHOMETER	AMETEK
2CM9ABE6	6680-01-122-6960	GENERATOR, TACHOMETER	AMETEK
2CM9ABH7	----	GENERATOR, TACHOMETER	AMETEK
2CM9ABK7	6680-01-358-9820	GENERATOR, TACHOMETER	AMETEK
2CM9ABY7	6680-00-920-9213	GENERATOR, TACHOMETER	AMETEK
2CM9ABZ7	6680-01-397-6175	GENERATOR, TACHOMETER	AMETEK
2CM9ACE7	6680-00-406-4280	GENERATOR, TACHOMETER	AMETEK
2CM9ACF8	6680-00-923-8466	GENERATOR, TACHOMETER	AMETEK
2CM9ACH7	----	GENERATOR, TACHOMETER	AMETEK
2CM9ADB9	----	GENERATOR, TACHOMETER	AMETEK

**CAPABILITY LIST**

2CM9ADE8	6680-00-008-4544	GENERATOR, TACHOMETER	AMETEK
2CM9ADT6	-----	GENERATOR, TACHOMETER	AMETEK
2VC1002-1C	1680-00-782-5861	SEAT, AIRCRAFT, TROOPS	NEWGARD INDUSTRIES
2VC1002-1L	1680-00-913-4840	SEAT, AIRCRAFT, TROOPS	NEWGARD INDUSTRIES
2VC1002-1R	1680-00-913-4841	SEAT, AIRCRAFT, TROOPS	NEWGARD INDUSTRIES
2Z6763-275	5826-00-611-0951	MOUNTING BASE	RAYTHEON
3-00001	5985-00-106-0906	ANTENNA	EDO
3000-10	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	POINTER
3000-11	5821-01-480-0975	TRANSMITTER, EMERGENCY LOCATOR (ELT)	POINTER
3000-8	5826-01-307-7380	TRANSMITTER, EMERGENCY LOCATOR (ELT)	POINTER
3000-9	5826-01-307-7380	TRANSMITTER, EMERGENCY LOCATOR (ELT)	POINTER
30-1037-1	6220-01-020-2550	LIGHT, NAVIGATIONAL, AIRCRAFT	GRIMES AEROSPACE
301110-1	1680-01-464-4953	SEAT, AIRCRAFT, TROOPS	SIMULA SAFETY SYSTEMS
301120-1	1680-01-464-4939	SEAT, AIRCRAFT, TROOPS	SIMULA SAFETY SYSTEMS
301-3000	-----	EMERGENCY POWER SUPPLY UNIT	COHBAM AVIONICS (NEC AERO)
301-3017	-----	BATTERY PACK	COHBAM AVIONICS (NEC AERO)
301-3100	6130-14-545-4006	EMERGENCY POWER SUPPLY UNIT	COHBAM AVIONICS (NEC AERO)
301660-1	5985-00-217-0463	ANTENNA, LOOP	KEARFOTT
3053593-1-1	1650-00-566-0335	VALVE, BOMB BAY, HYDRAULIC, CONTROL	MOOG
305J001-1	1560-01-208-0460	TANK, FUEL, AIRCRAFT	SARGENT FLETCHER
3078-1	5930-00-615-7340	SWITCH, PRESSURE	ITT AEROSPACE CONTROLS
30A8-690	4820-00-089-3256	VALVE, FLUID, REGULATING	PARKER-HANNIFIN
30-Y-1001	-----	INDICATOR, ELECTRICAL TACHOMETER	ROCKWELL COLLINS
3-1267-1	1630-01-115-1715	WHEEL, AIRCRAFT, MLG	KELLY MANUFACTURING
3-1284	1630-00-075-1976	WHEEL, AIRCRAFT, NLG	GOODRICH
313N-2	-----	CONTROL, NAVIGATION	GOODRICH
313N-2D	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
31400-1	1650-00-566-0331	VALVE, TRANSFER, AUTOMATIC PILOT	CMC ELECTRONIQUE
3158-700	5841-00-892-1070	INDICATOR, DRIFT ANGLE-GROUND SPEED	PARKER-HANNIFIN
3214-30	-----	BATTERY, EMERGENCY	DIEHL
3214-31	-----	BATTERY, EMERGENCY	DIEHL
321502-4-1	4810-00-796-1672	VALVE, BUTTERFLY, SHUT-OFF	HONEYWELL INTERNATIONAL
32164-009	6680-00-923-8466	GENERATOR TACHOMETER	LUCAS AEROSPACE
3236K13	6680-00-920-9213	GENERATOR, TACHOMETER	AMETEK
3252022-0101	6610-01-035-0673	ALTIMETER, SERVO CONTROLLED	CARLETON
3301-31	-----	BATTERY, EMERGENCY	DIEHL
3318488-1	1660-01-130-4645	CONTROL BOX, TEMPERATURE	LOCKHEED MARTIN
331A-8G	5826-01-065-9189	INDICATOR, COURSE	ROCKWELL COLLINS
331C-4	-----	INDICATOR, BEARING DISTANCE HEADING	ROCKWELL COLLINS
331C-4A	5826-00-679-3205	INDICATOR, BEARING DISTANCE HEADING	ROCKWELL COLLINS
331C-4E	-----	INDICATOR, BEARING DISTANCE HEADING	ROCKWELL COLLINS
331C-4F	5826-00-953-9298	INDICATOR, BEARING DISTANCE HEADING	ROCKWELL COLLINS
331D-2	6610-00-799-8315	INDICATOR, HORIZONTAL SITUATION	ROCKWELL COLLINS
331D-2A	-----	INDICATOR, HORIZONTAL SITUATION	ROCKWELL COLLINS

### CAPABILITY LIST

331D-2B	----	INDICATOR, HORIZONTAL SITUATION	ROCKWELL COLLINS
331D-2D	6610-00-975-1699	INDICATOR, HORIZONTAL SITUATION	ROCKWELL COLLINS
332C218P2	6680-00-445-1246	GENERATOR, TACHOMETER	AMETEK
332C-4	5826-01-040-0109	INDICATOR, RADIO MAGNETIC	ROCKWELL COLLINS
332D-11	----	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
332D-11A	5826-00-348-3874	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
332D-11B	----	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
332D-11T	----	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
332D-11V	6615-01-134-8914	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
333F-1	5996-00-617-0426	AMPLIFIER, HSI, ELECTRONIC CONTROL	ROCKWELL COLLINS
334C-6	----	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS
334C-6A	----	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS
334C-6B	----	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS
334C-6C	----	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS
3-34D15	6130-01-178-7850	POWER SUPPLY	PACIFIC ELECTRONIC ENTERPRISES
339242-13	1630-01-408-3685	WHEEL, NOSE LANDING GEAR	LOCKHEED MARTIN
339H-1	5841-00-758-4547	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
339H-1A	----	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
339H-1B	----	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
34102C1C4-1C1	6620-00-959-6614	INDICATOR, ELECTRICAL TACHOMETER	HONEYWELL INTERNATIONAL
3-43512-3	6685-00-526-7864	TRANSMITTER, PRESSURE	NORTHROP GRUMMAN SYSTEMS
345A-7	6615-00-134-5980	GYROSCOPE, RATE OF TURN	ROCKWELL COLLINS
345A-7A	6615-00-134-5980	GYROSCOPE, RATE OF TURN	ROCKWELL COLLINS
345A-7B	----	GYROSCOPE, RATE OF TURN	ROCKWELL COLLINS
345C-2A	6615-01-043-2763	ACCELEROMETER, ELECTRICAL, LINEAR	ROCKWELL COLLINS
3510M0	2925-14-305-4212	RELAY, REVERSE CURRENT	ZODIAC AEROSPACE
35160-0124	6610-00-473-5046	INDICATOR, VERTICAL VELOCITY	AEROSONIC
351B-6	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-6A	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-6B	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-6C	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-6E	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-6F	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-6G	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-6H	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-7	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-7A	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-7B	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
351B-7C	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
3567609-3703	6685-01-146-8649	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
3567742-1001	6620-00-999-2425	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
3567742-1501	6620-00-999-2222	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
3567742-1701	6620-01-029-5135	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
3567742-3001	6620-00-999-2424	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL

## CAPABILITY LIST

3567742-4701	6620-00-065-3235	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
3567745-1701	6620-00-901-7848	TRANSMITTER PRESSURE	HONEYWELL INTERNATIONAL
35-811	1650-01-021-2865	SERVOVALVE, HYDRAULIC	HYDRO-AIRE
3602043-1	-----	SWITCH, APU, SLIDE	HONEYWELL INTERNATIONAL
3602043-2	2990-01-341-3579	SWITCH, APU, SLIDE	HONEYWELL INTERNATIONAL
3602043-3	5930-01-231-6885	SWITCH, APU, SLIDE	HONEYWELL INTERNATIONAL
3602043-3-1	5930-01-231-6885	SWITCH, APU, SLIDE	HONEYWELL INTERNATIONAL
3604174-1	5930-01-019-5594	SWITCH, APU, SLIDE	HONEYWELL INTERNATIONAL
3604174-1-1	5930-01-019-5594	SWITCH, APU, SLIDE	HONEYWELL INTERNATIONAL
36104-1H-8-A1	5826-00-505-3094	INDICATOR, RADIO MAGNETIC	HONEYWELL INTERNATIONAL
36104-1L-11-A1	5826-00-505-2222	INDICATOR, RADIO MAGNETIC	HONEYWELL INTERNATIONAL
36104-1L-11-A2	5826-00-505-3094	INDICATOR, RADIO MAGNETIC	HONEYWELL INTERNATIONAL
362-014-001	6610-01-040-4430	INDICATOR, ANGLE OF ATTACK	PARKER-HANNIFIN
372021-11	1650-01-132-3641	BOOSTER ASSY, RUDDER CONTROL	LOCKHEED MARTIN
372697-10	2920-00-906-6251	STARTER, ENGINE, ELECTRICAL	HONEYWELL INTERNATIONAL
372697-6	2920-00-906-6251	STARTER, ENGINE, ELECTRICAL	HONEYWELL INTERNATIONAL
374455-7	1650-01-134-4415	BOOSTER ASSY, AILERON CONTROL	LOCKHEED MARTIN
374D-1	-----	TRANSCEIVER, TACAN	ROCKWELL COLLINS
374D-2	5826-01-411-6748	TRANSCEIVER, TACAN	ROCKWELL COLLINS
377J-1	-----	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
377J-2	-----	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
38106-001	6130-01-217-5880	POWER SUPPLY	KOLLSMAN
38210-397	6610-14-380-2775	INDICATOR, VERTICAL VELOCITY	BADIN CROUZET
3895-1	1680-00-888-3687	PUMP, WINDSHIELD	HAMILTON SUNDSTRAND
38E45-1C	2995-00-911-6736	VALVE, START, CONTROL	GOODRICH
38E45-1D	2995-00-168-2418	VALVE, START, CONTROL	GOODRICH
38E45-1E	2995-00-168-2418	VALVE, START, CONTROL	GOODRICH
38E45-4B	4810-01-058-5300	VALVE, START, CONTROL	GOODRICH
38E73-4A	2925-01-038-5770	VALVE, STARTER, CONTROL	GOODRICH
39-075	1630-00-908-9999	VALVE, DUAL CONTROL	HYDRO-AIRE
39-075A	1630-00-998-7896	VALVE, SKID CONTROL	HYDRO-AIRE
392200-11-1	4810-00-106-7401	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
393007-07869	6680-00-815-7282	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
393007-07870	6680-00-815-7285	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
393065-01858	6680-00-815-7284	INDICATOR, TOTALIZER, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
39-471	1630-01-009-8616	VALVE, DUAL ANTI-SKID	HYDRO-AIRE
396308-1-1	4810-00-588-3479	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
396308-2-1	4810-01-040-2372	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
396308-2-2	4810-01-040-2372	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
396308-3-1	4810-01-380-0393	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
398648-1-1	4810-00-575-7781	VALVE, TEMPERATURE CONTROL, BUTTERFLY	HONEYWELL INTERNATIONAL
398648-1-2	4810-00-575-7781	VALVE, TEMPERATURE CONTROL, BUTTERFLY	HONEYWELL INTERNATIONAL
398648-2-1	4810-01-523-0579	VALVE, TEMPERATURE CONTROL, BUTTERFLY	HONEYWELL INTERNATIONAL
398650-1-1	4810-00-575-7789	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL



**CAPABILITY LIST**

398654-1-2	4810-01-039-0459	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
398654-1-3	4810-01-039-0459	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
398654-1-4	4810-01-039-0459	VALVE, BUTTERFLY	HONEYWELL INTERNATIONAL
3A95550-107	4810-00-796-1672	VALVE, BUTTERFLY, SHUT-OFF	LOCKHEED MARTIN
3P99005-103	2915-00-074-1724	VALVE, FLOAT, FUEL TANK	LOCKHEED MARTIN
4005A	6610-00-557-3030	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
4005F	6610-00-866-3234	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
402-0466-020	6645-00-121-7551	CLOCK, MECHANICAL, PANEL	ROCKWELL COLLINS
4023400-0501	5841-00-089-7179	TRANSCEIVER, RADAR	RAYTHEON
4023400-0503	5841-00-149-1319	TRANSCEIVER, RADAR	RAYTHEON
4026927-901	6130-01-059-9017	POWER SUPPLY SUBASSEMBLY	HONEYWELL INTERNATIONAL
4047-1	5945-00-628-6484	RELAY, HYBRID	DNE TECHNOLOGIES
405485-2	5826-00-234-6315	INDICATOR, BEARING	KEARFOTT
4055K	6610-00-068-3464	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
405968-1	5985-00-149-1451	ANTENNA, LOOP	KEARFOTT
406-121AF	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
40-637-4	6680-01-060-4248	INDICATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
406AF406AF-G	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
406AF-6D	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
406AF-COMPACT	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
406AF-H	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
406AP	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
406AP-H	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
406AS	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
406-SURVIVAL	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
4080A	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
40D830-1	4820-00-006-5087	VALVE, ENGINE, BLEED AIR, CHECK	MOOG
40D830-3	4820-00-006-5087	VALVE, ENGINE, BLEED AIR, CHECK	MOOG
40D980	4810-00-018-3825	VALVE, BUTTERFLY	MOOG
40D990	4810-00-018-3826	VALVE, BUTTERFLY	MOOG
40F106	4820-01-097-8734	VALVE, FUEL, VENT	HONEYWELL INTERNATIONAL
4100050-2	1650-01-058-6259	MOTOR, HYDRAULIC, FFP	ALLEN AIRCRAFT PRODUCTS
41-2036-002	4810-00-627-4825	VALVE ASSY, SOLENOID, DRAIN	PARKER HANNIFIN
41-2036-003	-----	VALVE ASSY, SOLENOID, DRAIN	HONEYWELL INTERNATIONAL
41-2036-004	4810-00-749-8896	VALVE ASSY, SOLENOID, DRAIN	HONEYWELL INTERNATIONAL
4-156-1	2915-00-671-7892	VALVE, FLOAT, FUEL TANK	HONEYWELL INTERNATIONAL
4-156-1M1	2915-00-671-7892	VALVE, FLOAT, FUEL TANK	PARKER HANNIFIN
418200-2	5826-00-390-5744	INDICATOR, BEARING	KEARFOTT
41D110-1	4810-00-943-5223	VALVE, BUTTERFLY	MOOG
41D230	2995-00-822-3053	VALVE, HOT AIR	MOOG
42-109	1630-00-085-2625	CONTROL UNIT, ANTI-SKID	HYDRO-AIRE
42-109-1A	1630-00-133-8183	CONTROL UNIT, ANTI-SKID	HYDRO-AIRE
42-109A	1630-01-104-1015	CONTROL UNIT, ANTI-SKID	HYDRO-AIRE
43030-1	4810-00-914-9508	VALVE, SHUTOFF, BLEED AIR	MOOG

### CAPABILITY LIST

43030-11	4810-00-085-1104	VALVE, SHUTOFF, BLEED AIR	MOOG
4309-210-01-10	6610-14-380-2741	INDICATOR, POSITION	ACTIA (THALES AVIONICS)
4344D1-1	1680-00-402-6201	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	SARGENT AEROSPACE & DEFENSE
4344D1-2	1680-00-402-6202	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	SARGENT AEROSPACE & DEFENSE
4344D1-3	1680-01-181-9873	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	SARGENT AEROSPACE & DEFENSE
4344D1-4	1680-01-181-9874	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	SARGENT AEROSPACE & DEFENSE
4344D2-1	1680-01-222-2551	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	SARGENT AEROSPACE & DEFENSE
4344EA03	1680-00-615-1335	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	SARGENT AEROSPACE & DEFENSE
4344EA1	1680-00-615-1335	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	SARGENT AEROSPACE & DEFENSE
4344EA-1	1680-00-615-1335	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	SARGENT AEROSPACE & DEFENSE
4344EA2	1680-01-004-2086	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	SARGENT AEROSPACE & DEFENSE
4344EA-2	1680-01-004-2086	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	SARGENT AEROSPACE & DEFENSE
4344EA3	3040-01-414-2019	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	SARGENT AEROSPACE & DEFENSE
4344EA-3	3040-01-414-2019	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	SARGENT AEROSPACE & DEFENSE
4344EA4	1680-01-416-3926	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	SARGENT AEROSPACE & DEFENSE
4344EA-4	1680-01-414-0474	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	SARGENT AEROSPACE & DEFENSE
4371R	2925-01-483-3517	MAGNETO, IGNITION	HARTZELL ENGINE TECHNOLOGIES
437X-1	5985-00-758-4548	ANTENNA	ROCKWELL COLLINS
43932-052	6610-01-074-2819	ALTIMETER, PRESSURE	KOLLSMAN
44910-5	6220-00-370-5447	LIGHT, EMERGENCY EXIT	GRIMES AEROSPACE
449201-6	5831-00-987-1815	CONTROL BOX	RAYTHEON
449330-1	4920-00-986-7642	TEST SET, INTERCOMMUNICATION	TRAYTHEON
45-0325-1	6220-01-437-7640	LIGHT, LANDING, AIRCRAFT	GRIMES AEROSPACE
45-0325-3	6220-01-437-7640	LIGHT, LANDING, AIRCRAFT	GRIMES AEROSPACE
450-655	5841-00-892-1070	INDICATOR, DRIFT ANGLE-GROUND SPEED	CMC ELECTRONIQUE
453-5000	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
453-5001	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
453-5002	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
453-5003	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
453-5004	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
453-5012	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
453-5060	5821-01-561-9503	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
453-5061	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
4536-01C	6615-00-077-1831	GYROSCOPE, RATE OF TURN	PARKER-HANNIFIN
453-6603	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
453-6604	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
453-6611	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
461-00269-001	6605-14-369-3135	GYROSCOPE, COMPASS	SFIM INDUSTRIES
461-00269-003	6605-14-369-3134	GYROSCOPE, COMPASS	SFIM INDUSTRIES
461-00331-300	6605-14-387-2597	GYROSCOPE, COMPASS	SFIM INDUSTRIES
468100-0-1	6645-00-091-7107	TIMER, ELECTRICAL, STOP	HONEYWELL
468100-1	6645-00-091-7107	TIMER, ELECTRICAL, STOP	HONEYWELL
46D40163	5826-00-521-0571	COUPLING, ANTENNA	RAYTHEON
482-0061-00	5826-01-422-0955	INDICATOR, RADIO MAGNETIC	ROCKWELL COLLINS

### CAPABILITY LIST

482-0061-000	----	INDICATOR, RADIO MAGNETIC	ROCKWELL COLLINS
482-0061-030	6655-01-394-5119	INDICATOR, RADIO MAGNETIC	ROCKWELL COLLINS
483A	5945-00-628-6484	RELAY, HYBRID	PANEX
490T-1	5985-00-954-1665	COUPLER, ANTENNA	ROCKWELL COLLINS
490T-1A	5985-00-852-0457	COUPLER, ANTENNA	ROCKWELL COLLINS
497230-01-01	6615-01-503-2256	CONTROLLER, ENGAGING, AUTO-PILOT	BAE SYSTEMS CONTROLS
4K95000-253A	5985-00-673-5831	ANTENNA, DME/TACAN, BEACON	LOCKHEED MARTIN
4K95000-281A	5841-01-246-9183	TRANSCIVER, CARA	LOCKHEED MARTIN
500-12	----	TRANSMITTER, PERSONAL LOCATOR (PLT/PLB)	TECHTEST
500-16	----	TRANSMITTER, PERSONAL LOCATOR (PLT/PLB)	TECHTEST
500-27	----	TRANSMITTER, PERSONAL LOCATOR (PLT/PLB)	TECHTEST
5007-410-00-11	6680-14-409-2567	TACHOMETER	ACTIA (THALES AVIONICS)
501-1027-01	6615-00-877-9343	GYROSCOPE, RATE OF TURN	L3 AVIATION PRODUCTS
501-1131-01	6610-00-200-8832	INDICATOR, VERTICAL VELOCITY	L3 AVIATION PRODUCTS
501-1228-04	6130-01-219-8285	POWER SUPPLY, BATTERY	L3 AVIATION PRODUCTS
501-1804-01	6610-01-464-5517	INDICATOR, ATTITUDE DIRECTOR	L3 AVIATION PRODUCTS
501-1847-04	6605-01-532-2364	INDICATOR, ELECTRONIC HORIZONTAL SITUATION (EHSI)	L3 AVIATION PRODUCTS
50150-20	4810-00-728-3396	VALVE, LINEAR, DIRECTIONAL CONTROL	WOODWARD
50150-28	4810-00-401-5524	VALVE, LINEAR, DIRECTIONAL CONTROL	WOODWARD
50150-3	----	VALVE, LINEAR, DIRECTIONAL CONTROL	WOODWARD
502600-7	1680-00-809-8502	VALVE, LINEAR, DIRECTIONAL CONTROL	TRANSDIGM
505485-2	5826-00-234-6315	INDICATOR, BEARING	KEARFOTT
5-09192-1	6685-00-670-0895	THERMOSTAT, FLOW CONTROL	PSG CONTROLS
50F12696	5985-00-217-0457	ANTENNA	EDO
50F13903	5826-00-333-9867	MOUNTING BASE ASSEMBLY	RAYTHEON
5-10052	6685-01-119-6546	THERMOSTAT, FLOW CONTROL	PSG CONTROLS
510414-3-1	6610-00-887-6725	COMPUTER, TRUE AIR SPEED	HONEYWELL INTERNATIONAL
510414-3-2	6610-00-759-7170	COMPUTER, TRUE AIR SPEED	HONEYWELL INTERNATIONAL
518-28007-001	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-002	6610-01-121-9627	ALTIMETER, ENCODING	KOLLSMAN
518-28007-003	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-004	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-005	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-006	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-007	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-008	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-009	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-010	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-011	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-012	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-013	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-014	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-015	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-016	----	ALTIMETER, ENCODING	KOLLSMAN

**CAPABILITY LIST**

518-28007-017	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-018	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-019	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-020	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-021	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-022	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-023	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-024	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-025	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-026	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-027	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-028	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-029	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-030	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-171	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-172	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-173	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-174	6610-01-346-5592	ALTIMETER, ENCODING	KOLLSMAN
518-28007-175	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-176	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-177	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-178	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-201	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-202	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-203	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-204	6610-01-259-0251	ALTIMETER, ENCODING	KOLLSMAN
518-28007-205	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-206	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-207	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-208	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-209	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-210	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-211	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-212	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-213	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-214	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-215	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-216	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-217	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-218	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-223	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-224	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-225	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-226	----	ALTIMETER, ENCODING	KOLLSMAN

### CAPABILITY LIST

518-28007-227	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-228	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-229	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-230	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-231	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-232	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-233	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-234	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-235	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-261	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-262	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-263	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-264	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-265	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-266	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-267	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-268	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-269	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-270	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-271	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-272	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-301	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-302	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-303	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-304	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-305	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-306	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-307	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-308	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-309	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-310	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-311	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-312	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-313	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-314	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-315	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-316	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-317	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-318	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-319	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-320	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-321	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-322	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-323	----	ALTIMETER, ENCODING	KOLLSMAN

### CAPABILITY LIST

518-28007-324	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-325	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-326	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-327	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-328	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-329	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-330	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-331	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-332	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-333	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-334	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-335	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-336	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-337	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-338	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-339	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-340	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-341	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-342	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-343	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-344	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-345	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-346	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-347	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-700	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-800	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-906	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-907	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-921	----	ALTIMETER, ENCODING	KOLLSMAN
518-28007-922	----	ALTIMETER, ENCODING	KOLLSMAN
51RV-4	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
51RV-4B	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
51RV-4D	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
51RV-5	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
51RV-5B	5826-01-481-6179	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
51RV-5D	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
51Y-7	5826-00-322-2167	TRANSCEIVER, ADF	ROCKWELL COLLINS
51Y-7A	5826-00-275-0612	TRANSCEIVER, ADF	ROCKWELL COLLINS
51Y-7C	----	TRANSCEIVER, ADF	ROCKWELL COLLINS
51Y-7D	5826-01-194-5731	TRANSCEIVER, ADF	ROCKWELL COLLINS
51Z4	5826-00-960-0830	TRANSCEIVER, RADIO BEACON	ROCKWELL COLLINS
5207-00-1	4810-01-154-3200	VALVE, REGULATING, FLUID PRESSURE	DUKES AEROSPACE
522-0690-003	----	INDICATOR, BEARING DISTANCE HEADING	ROCKWELL COLLINS
522-0974-003	5826-00-679-3205	INDICATOR, BEARING DISTANCE HEADING	ROCKWELL COLLINS

### CAPABILITY LIST

522-1230-00	5821-00-893-0193	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1230-000	5821-00-893-0193	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1230-021	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1230-022	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1230-023	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1261-00	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-1261-000	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-1394-003	5996-00-617-0426	AMPLIFIER, HSI, ELECTRONIC CONTROL	ROCKWELL COLLINS
522-1394-335	5996-00-617-0426	AMPLIFIER, HSI, ELECTRONIC CONTROL	ROCKWELL COLLINS
522-1501-00	5821-00-893-2906	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1501-000	5821-00-893-2906	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1501-041	5826-00-142-9449	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1501-043	5820-01-496-3825	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1501-044	5820-01-496-3829	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1660-00	5821-00-604-3307	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1660-000	5821-00-124-4484	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1660-031	5895-01-105-3821	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1660-033	5820-01-496-3802	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1660-034	5820-01-496-3804	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-1771-003	----	INDICATOR, BEARING DISTANCE HEADING	ROCKWELL COLLINS
522-2213-00	5821-00-838-7051	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-000	5821-00-838-7051	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-011	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-012	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-013	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-014	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-015	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-016	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-017	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-018	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-019	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-020	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-021	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-022	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-023	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-024	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-025	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-026	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-027	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-028	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-029	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-030	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-031	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-032	----	CONTROL, RADIO SET	ROCKWELL COLLINS



### CAPABILITY LIST

522-2213-033	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-034	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-035	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-036	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-037	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-038	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-039	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-040	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-041	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-042	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-043	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-044	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-045	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-046	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-047	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-048	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-049	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-050	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-051	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-052	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-053	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-054	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2213-055	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2377-003	5826-00-953-9298	INDICATOR, BEARING DISTANCE HEADING	ROCKWELL COLLINS
522-2411-003	6610-00-799-8315	INDICATOR, HORIZONTAL SITUATION	ROCKWELL COLLINS
522-2447-005	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-015	6625-00-063-6398	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-025	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-035	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-046	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-048	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-050	5826-00-028-6810	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-051	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-053	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-055	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-056	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-057	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-058	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-059	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-205	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-215	5826-01-077-7047	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-225	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-235	----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-248	----	CONTROL, NAVIGATION	ROCKWELL COLLINS

**CAPABILITY LIST**

522-2447-250	5825-01-044-1407	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-251	5821-01-090-2847	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-252	5895-01-099-8589	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-253	5821-01-049-5456	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-255	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-256	5895-01-416-2525	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-257	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-258	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-259	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-260	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-261	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-262	5821-01-503-5826	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-263	5821-01-278-0398	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-264	5895-01-416-2524	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-266	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-267	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-268	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-269	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-270	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-271	5826-01-369-4446	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-272	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2447-273	-----	CONTROL, NAVIGATION	ROCKWELL COLLINS
522-2457-00	5821-00-019-8405	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-000	5821-00-019-8405	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-011	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-012	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-013	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-014	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-015	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-016	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-017	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-018	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-019	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-020	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-021	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-022	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-023	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-024	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-025	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-026	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-027	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-028	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-029	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-030	-----	CONTROL, RADIO SET	ROCKWELL COLLINS

### CAPABILITY LIST

522-2457-031	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-032	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-033	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-034	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-035	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-036	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-037	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-038	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-039	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-040	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-041	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-042	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2457-043	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2615-005	5985-00-689-6576	ANTENA, ADF	ROCKWELL COLLINS
522-2646-014	----	ANTENA, VHF	ROCKWELL COLLINS
522-2703-011	----	TRANSPONDER	ROCKWELL COLLINS
522-2892-00	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2892-011	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2892-012	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2892-013	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2892-014	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2892-015	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2892-016	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2892-017	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2892-018	----	CONTROL, RADIO SET	ROCKWELL COLLINS
522-2900-002	6615-01-468-8150	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-003	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-005	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-006	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-008	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-009	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-010	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-011	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-013	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-014	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-015	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-016	6615-01-391-4192	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-017	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-020	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-021	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-022	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-023	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-024	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-025	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS

**CAPABILITY LIST**

522-2900-026	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-027	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-028	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-057	6615-01-038-7294	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-114	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2900-16	6615-01-391-4192	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
522-2996-000	5826-00-960-0830	TRANSCEIVER, RADIO BEACON	ROCKWELL COLLINS
522-2996-014	5826-00-960-0830	TRANSCEIVER, RADIO BEACON	ROCKWELL COLLINS
522-3306-011	5826-00-404-0245	INDICATOR, OMNI BEARING	ROCKWELL COLLINS
522-3443-00	5985-00-939-7495	COUPLER, ANTENNA	ROCKWELL COLLINS
522-3443-000	5985-00-939-7495	COUPLER, ANTENNA	ROCKWELL COLLINS
522-3443-001	5985-00-954-1665	COUPLER, ANTENNA	ROCKWELL COLLINS
522-3443-006	5985-00-954-1665	COUPLER, ANTENNA	ROCKWELL COLLINS
522-3444-001	5985-00-852-0457	COUPLER, ANTENNA	ROCKWELL COLLINS
522-3698-002	5826-01-013-0955	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
522-3698-003	5826-00-758-4546	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
522-3698-004	5826-01-124-7459	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
522-3698-005	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
522-3698-006	5826-01-397-4398	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
522-3903-001	5895-01-069-9153	CONTROL, RADIO SET	ROCKWELL COLLINS
522-3903-002	5821-01-332-4630	CONTROL, RADIO SET	ROCKWELL COLLINS
522-3985-001	----	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
522-4057-001	5835-01-103-7517	RECORDER, SOUND	ROCKWELL COLLINS
522-4114-002	1680-01-481-5724	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
522-4114-003	5841-00-758-4547	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
522-4114-004	----	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
522-4114-006	----	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
522-4114-008	----	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
522-4114-012	5841-01-012-2184	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
522-4140-001	5985-00-758-4548	ANTENNA	ROCKWELL COLLINS
522-4140-006	5985-00-758-4548	ANTENNA	ROCKWELL COLLINS
522-4140-007	5985-00-758-4548	ANTENNA	ROCKWELL COLLINS
522-4174-001	6610-00-763-2415	COMPUTER, FLIGHT DIRECTOR	ROCKWELL COLLINS
522-4329-001	5985-00-322-2172	ACCELEROMETER, ELECTRICAL, LINEAR	ROCKWELL COLLINS
522-4329-002	6615-01-043-2763	ACCELEROMETER, ELECTRICAL, LINEAR	ROCKWELL COLLINS
522-4354-002	----	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
522-4363-004	----	INDICATOR, RADIO ALTIMETER	ROCKWELL COLLINS
522-4706-001	6610-00-975-1699	INDICATOR, HORIZONTAL SITUATION	ROCKWELL COLLINS
522-4828-001	5826-01-496-3805	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-4828-002	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-4829-001	5826-01-095-1097	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-4829-002	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-4830-001	5821-01-033-8754	TRANSCEIVER, RADIO	ROCKWELL COLLINS
522-4830-002	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS

### CAPABILITY LIST

523EA8	1680-00-078-4322	GEAR BOX ASSYFLAP DRIVEMOTOR DRIVEN	SARGENT AEROSPACE & DEFENSE
523EA9	1680-00-789-9345	GEAR BOX ASSYFLAP DRIVEMOTOR DRIVEN	SARGENT AEROSPACE & DEFENSE
52F12984	5826-00-522-3428	MOUNTING BASE ASSEMBLY	RAYTHEON
53150-1	4810-01-066-0321	VALVE, LINEAR, DIRECTIONAL CONTROL	EATON
532-38105-201	----	INDICATOR, MACH AND TRUE AIR SPEED	KOLLSMAN
532-38105-202	6610-01-263-1400	INDICATOR, MACH AND TRUE AIR SPEED	KOLLSMAN
532-38105-203	----	INDICATOR, MACH AND TRUE AIR SPEED	KOLLSMAN
532-38105-204	----	INDICATOR, MACH AND TRUE AIR SPEED	KOLLSMAN
532-38105-301	----	INDICATOR, MACH AND TRUE AIR SPEED	KOLLSMAN
532-38105-302	6610-01-297-7004	INDICATOR, MACH AND TRUE AIR SPEED	KOLLSMAN
532-38105-303	----	INDICATOR, MACH AND TRUE AIR SPEED	KOLLSMAN
532-38105-304	6610-01-244-1521	INDICATOR, MACH AND TRUE AIR SPEED	KOLLSMAN
535429-0-1	6610-00-887-9422	MOUNT ASSY, COMPUTER RESILIENT	HONEYWELL INTERNATIONAL
538088-0-2	6610-00-991-0770	INDICATOR, TRUE AIR SPEED	HONEYWELL INTERNATIONAL
5386-106-01-11	6620-14-414-0225	INDICATOR, OIL, PRESSURE	ACTIA (THALES AVIONICS)
53C14232	5826-00-342-1964	COUPLING, ANTENNA	RAYTHEON
540-25100-004	1680-01-201-5691	ALERTER, ALTITUDE	KOLLSMAN
540-25100-005	6340-01-394-9780	ALERTER, ALTITUDE	KOLLSMAN
540-25100-021	1680-01-104-0475	ALERTER, ALTITUDE	KOLLSMAN
540-25100-022	----	ALERTER, ALTITUDE	KOLLSMAN
540-25100-034	----	ALERTER, ALTITUDE	KOLLSMAN
540-25100-134	----	ALERTER, ALTITUDE	KOLLSMAN
540538-2-1	1680-00-973-4891	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	HONEYWELL INTERNATIONAL
541214-1-2	1660-00-777-0154	ACTUATOR,ELECTRO-MECHANICAL,ROTARY	HONEYWELL INTERNATIONAL
54D12603	5826-00-535-6629	CONTROL PANEL, DIRECTION FINDER	PHILIPS ELECTRONIC INSTRUMENTS
5502636-1	5996-00-458-2768	AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	ABB BENDIX
5502636-2	5996-01-096-4648	AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	ABB BENDIX
5502636-4	2915-01-221-6837	AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	ABB BENDIX
5505067-3	5996-01-114-8652	AMPLIFIER, ELECTRONIC CONTROL	ABB BENDIX
551200-3	1650-00-395-2599	ACCUMULATOR ASSY, HYDRAULIC	HONEYWELL INTERNATIONAL
5579-501-01-11	6685-14-380-2742	INDICATOR, EGT	ACTIA (THALES AVIONICS)
5617-354-01-10	6685-14-380-2743	INDICATOR, TEMPERATURE	ACTIA (THALES AVIONICS)
562C-5	6615-01-038-7294	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
562C-5B	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
562C-5C	6615-01-020-3673	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
562C-5F	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
5633-701-01-10	6680-14-380-2744	INDICATOR, ENGINE, ELECTRICAL TACHOMETER	ACTIA (THALES AVIONICS)
568-4838-001	5826-01-008-4097	DIRECTION FINDER SET	ROCKWELL COLLINS
570-23932-001	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-002	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-003	6610-01-009-8021	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-004	6660-01-020-3765	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-005	6660-01-020-3765	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-006	----	ALTIMETER, PRESSURE	KOLLSMAN

**CAPABILITY LIST**

570-23932-008	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-011	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-012	6610-01-074-2819	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-013	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-014	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-021	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-022	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-023	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-024	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-031	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-032	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-033	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-034	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-201	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-202	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-203	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-204	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-211	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-212	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-213	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-214	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-301	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-302	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-303	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-304	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-311	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-312	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-313	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-314	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-401	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-402	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-403	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-404	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-411	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-412	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-413	----	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-414	6610-01-294-5633	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-901	6610-01-329-9067	ALTIMETER, PRESSURE	KOLLSMAN
570-23932-902	----	ALTIMETER, PRESSURE	KOLLSMAN
5712-10	6620-14-406-3186	TRANSMITTER, PRESSURE	KOLLSMAN
57-12-10	6620-14-406-3186	TRANSMITTER, PRESSURE	LABEM
5728N1	6610-14-423-7041	INDICATOR, TURN AND SLIP	AIR PRECISION
575-7	6340-00-304-5556	DETECTOR, ICE	NORTHERN TELECOM
575-716	5930-00-615-7340	SWITCH, PRESSURE	NORTHERN TELECOM

## CAPABILITY LIST

58057-1	6605-14-510-2970	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-11	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-12	6605-14-369-3134	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-13	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-32	6605-14-558-0093	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-33	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-34	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-35	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-4	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-41	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-42	6605-14-369-3135	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-43	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-82	6605-14-369-3135	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-83	6605-14-387-2597	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-84	-----	GYROSCOPE, COMPASS	SFIM INDUSTRIES
58057-85	6605-14-433-6921	GYROSCOPE, COMPASS	SFIM INDUSTRIES
588530-3	1660-00-760-0622	INDICATOR, AIRCRAFT AIR TEMPERATURE, SELECTOR	HAMILTON SUNDSTRAND
588530-5	1660-01-097-8733	INDICATOR, AIRCRAFT AIR TEMPERATURE, SELECTOR	HAMILTON SUNDSTRAND
588531-3	-----	CONTROL UNIT, AIRCRAFT AIR TEMPERATURE	HAMILTON SUNDSTRAND
588531-5	1660-00-918-6727	CONTROL UNIT, AIRCRAFT AIR TEMPERATURE	HAMILTON SUNDSTRAND
588531-7	1660-01-097-8747	CONTROL UNIT, AIRCRAFT AIR TEMPERATURE	HAMILTON SUNDSTRAND
58F12501	5826-00-629-8309	MOUNTING BASE ASSEMBLY	RAYTHEON
590A-3H	-----	CONTROL, AIR DATA	ROCKWELL COLLINS
590A-3J	6615-01-038-7296	CONTROL, AIR DATA	ROCKWELL COLLINS
590A-3J1	-----	CONTROL, AIR DATA	ROCKWELL COLLINS
590A-3K	-----	CONTROL, AIR DATA	ROCKWELL COLLINS
590A-3K1	6615-01-188-4494	CONTROL, AIR DATA	ROCKWELL COLLINS
590A-3KI	6615-01-188-4494	CONTROL, AIR DATA	ROCKWELL COLLINS
593-8655-001	-----	CONTROL, RADIO SET	ROCKWELL COLLINS
597-2259-301	5826-14-547-0474	RECEIVER PROCESSOR	ROCKWELL COLLINS
5A527	2935-00-966-3321	COOLER, ENGINE, OIL	STANDARD THOMSON
5A527-000	2935-00-966-3321	COOLER, ENGINE, OIL	STANDARD THOMSON
5A844	4820-00-072-5573	VALVE, OIL TEMPERATURE, REGULATING	STANDARD THOMSON
5A844-000	4820-00-072-5573	VALVE, OIL TEMPERATURE, REGULATING	STANDARD THOMSON
6002052-1	-----	SENSOR, WHEEL SPEED	STANDARD THOMSON
6002052-2	-----	SENSOR, WHEEL SPEED	MEGGITT AIRCRAFT BRAKING SYSTEMS
6002052-3	1630-01-217-3141	SENSOR, WHEEL SPEED	MEGGITT AIRCRAFT BRAKING SYSTEMS
6002052-4	-----	SENSOR, WHEEL SPEED	MEGGITT AIRCRAFT BRAKING SYSTEMS
60-2650-1	6130-01-017-5448	POWER SUPPLY	MEGGITT AIRCRAFT BRAKING SYSTEMS
60-2927-1	6130-01-139-3549	POWER SUPPLY, FLASHTUBE	GRIMES AEROSPACE
60-369A	2915-00-971-9130	PUMP, SUBMERGED, AIRCRAFT	HYDRO-AIRE
60-371D	2915-01-160-8283	PUMP, SUBMERGED, AIRCRAFT	HYDRO-AIRE
60-551	4320-00-631-4859	PUMP, ROTARY	HYDRO-AIRE
605600-1-1	-----	FAN, TUBE, AXIAL	HONEYWELL INTERNATIONAL



## CAPABILITY LIST

605600-2-1	4140-00-924-8116	FAN, TUBE, AXIAL	HONEYWELL INTERNATIONAL
60-5851	4320-00-631-4859	PUMP, ROTARY	HYDRO-AIRE
614E-20R	----	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
614E-20S	----	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
614E-22B	----	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
614E-22F	----	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
614E-22M	1680-01-537-2927	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
614E-23R	6615-01-038-7295	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
614E-37	----	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
614E-5A	6615-01-038-7299	CONTROLLER, FLIGHT, AUTOPILOT	ROCKWELL COLLINS
616297-57	5831-00-987-1815	CONTROL BOX	ROCKWELL COLLINS
618M-3	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
618M-3A	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
618M-4	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
618M-4A	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
618M-5	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
618M-5A	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
618T-1	5821-00-123-4846	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-1B	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-2	5821-00-123-4853	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-2B	5826-01-095-1097	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-3	5821-00-604-3307	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-3B	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-4	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-4B	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-5	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-5B	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-6	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
618T-6B	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
619209-1	6220-00-858-0915	LIGHT, AIRCRAFT, LANDING	ROCKWELL COLLINS
620572-1	1650-00-566-0331	VALVE, TRANSFER, AUTOMATIC PILOT	LOCKHEED MARTIN
620577-1	6615-00-550-6628	GYROSCOPE, DISPLACEMENT	LOCKHEED MARTIN
620664-11	6610-00-759-7170	COMPUTER, TRUE AIR SPEED	LOCKHEED MARTIN
620865-103	6620-00-928-0216	INDICATOR, TORQUEMETER	SIMMONDS PRECISION PRODUCTS
620865-107	6620-00-148-7313	INDICATOR, TORQUEMETER	SIMMONDS PRECISION PRODUCTS
622-0181-001	6625-01-092-5410	GYROSCOPE, RATE OF TURN	ROCKWELL COLLINS
622-0181-002	6615-01-074-7193	GYROSCOPE, RATE OF TURN	ROCKWELL COLLINS
622-0181-003	6615-01-074-7193	GYROSCOPE, RATE OF TURN	ROCKWELL COLLINS
622-0356-001	5821-00-100-7931	TRANSCEIVER, UHF, RADIO	ROCKWELL COLLINS
622-0356-002	5821-01-020-3970	TRANSCEIVER, UHF, RADIO	ROCKWELL COLLINS
622-0507-001	5826-01-012-1938	TRANSCEIVER, TACAN	ROCKWELL COLLINS
622-0507-002	5821-01-411-2680	TRANSCEIVER, TACAN	ROCKWELL COLLINS
622-0507-004	----	TRANSCEIVER, TACAN	ROCKWELL COLLINS
622-0507-005	5821-01-324-1976	TRANSCEIVER, TACAN	ROCKWELL COLLINS

### CAPABILITY LIST

622-0507-006	5826-01-455-8243	TRANSCEIVER, TACAN	ROCKWELL COLLINS
622-0748-001	5895-01-012-1919	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-0748-002	5895-01-012-1920	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-0876-001	5895-01-014-1704	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-002		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-003		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-004	5820-01-359-9930	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-011	5826-01-309-9786	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-012		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-013		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-014		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-201		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-202		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-203		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-204		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-211		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-212		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-213		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0876-214		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0877-001		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0877-002		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0877-003		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0877-004		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0877-201		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0877-202		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0877-203		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0877-204		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-0902-001	5826-01-008-4097	DIRECTION FINDER SET	ROCKWELL COLLINS
622-0902-005	5826-01-008-4097	DIRECTION FINDER SET	ROCKWELL COLLINS
622-0944-003	5930-01-420-7373	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-0944-006	-----	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-0944-007	-----	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-0945-003	5895-01-015-3713	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-0945-006	5826-01-422-5470	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-0945-007	6615-01-038-7295	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-0945-008	-----	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-0945-017	6615-01-394-6499	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-0950-001	5895-01-020-3852	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-0950-002	6610-01-117-3659	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-1001-001	5895-01-013-0722	CONTROL, AIR DATA	ROCKWELL COLLINS
622-1001-002	6615-01-038-7296	CONTROL, AIR DATA	ROCKWELL COLLINS
622-1001-019	6610-01-360-3564	CONTROL, AIR DATA	ROCKWELL COLLINS
622-1116-004	-----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
622-1116-018	-----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS

**CAPABILITY LIST**

622-1116-019	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
622-1181-001	5895-01-215-0303	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1181-002	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1181-003	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1181-004	5895-01-215-0303	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1181-005	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1181-006	5821-01-473-7187	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1181-008	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1239-001	5826-01-120-5991	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-002		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-003		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-004		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-007	5826-01-486-8271	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-008		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-009	5826-01-074-7167	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-011	5826-01-202-7420	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-012	5821-01-130-3162	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-013		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-014		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-027	5826-01-136-7886	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-201	5826-01-482-4504	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-202		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-203		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-204		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-207	5999-01-494-1903	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-208	5820-01-450-7989	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-209		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-211	5826-01-482-4505	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-212	5999-01-487-6103	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-213		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-214	5826-01-482-4506	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1239-227	5826-01-487-7615	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1275-002	5826-01-479-7796	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-1281-001	6615-01-020-3673	AMPLIFIER, AUTOPILOT	ROCKWELL COLLINS
622-1281-007	----	AMPLIFIER, AUTOPILOT	ROCKWELL COLLINS
622-1396-001	5820-01-087-6982	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-002	5821-01-038-7301	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-003	5821-01-083-0695	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-010	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-011	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-101	5895-01-357-4630	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-102	5821-01-316-3554	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-103	5821-01-363-5414	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-110	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS

**CAPABILITY LIST**

622-1396-111	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-203	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-205	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-206	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-208	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-209	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1396-210	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
622-1406-001	----	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
622-1678-001	5826-01-012-4864	ADAPTER, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1678-002	5895-01-289-5677	ADAPTER, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1678-004	5895-01-289-5677	ADAPTER, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1679-001	5975-01-060-9629	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1680-001	5975-01-013-0861	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1680-002	5975-01-131-4232	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1680-003	5975-01-151-9680	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1680-004	5975-01-045-6683	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1680-005	5975-01-154-9194	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1782-001	5975-01-013-0862	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1782-002	5975-01-034-5476	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1783-001	5975-01-012-1857	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1783-002	5975-01-034-5477	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1783-003	5975-01-062-5189	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-1783-005	5975-01-208-8418	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2041-001	5975-01-041-2044	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2041-002	----	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2360-001	5895-01-012-7084	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2360-002	5895-01-012-7085	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2362-001	5826-01-125-1023	RECEIVER, ADF	ROCKWELL COLLINS
622-2363-001	5985-01-112-8057	ANTENNA, ADF	ROCKWELL COLLINS
622-2363-002	----	ANTENNA, ADF	ROCKWELL COLLINS
622-2510-001	5895-01-037-6772	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2510-002	5895-01-079-7568	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2510-003	5895-01-075-9774	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2511-001	5895-01-014-3656	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2511-002	5895-01-018-3511	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-2586-001	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-2586-002	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-2587-001	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-2588-001	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-2588-002	5821-01-069-1018	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-2589-001	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-2590-001	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-2590-002	----	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-2591-001	5895-01-069-3279	TRANSCEIVER, RADIO	ROCKWELL COLLINS

## CAPABILITY LIST

622-2614-012	----	CONTROL, SERVO, AUTO-PILOT	ROCKWELL COLLINS
622-2819-001		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-2819-002		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-2819-003		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-2819-004		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-2819-201	5826-01-507-9558	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-2819-202		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-2819-203		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-2819-204		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-2855-001	5841-01-272-2715	ALTIMETER SET, ELECTRONIC	ROCKWELL COLLINS
622-2873-001	5825-01-335-5226	RECEIVER, ADF	ROCKWELL COLLINS
622-2889-001	5826-01-554-6297	ADAPTER, BEARING	ROCKWELL COLLINS
622-2889-002	5826-MD-010-2546	ADAPTER, BEARING	ROCKWELL COLLINS
622-2921-002	5826-01-126-6339	EQUIPMENT, DISTANCE	ROCKWELL COLLINS
622-3177-001	5895-01-448-0873	TRANSCEIVER, DME	ROCKWELL COLLINS
622-3178-001	----	TRANSCEIVER, ADF	ROCKWELL COLLINS
622-3178-002	----	TRANSCEIVER, ADF	ROCKWELL COLLINS
622-3178-003	5820-01-301-9433	TRANSCEIVER, ADF	ROCKWELL COLLINS
622-3178-004	----	TRANSCEIVER, ADF	ROCKWELL COLLINS
622-3179-001	----	TRANSCEIVER, ADF	ROCKWELL COLLINS
622-3179-002	----	TRANSCEIVER, ADF	ROCKWELL COLLINS
622-3179-003	----	TRANSCEIVER, ADF	ROCKWELL COLLINS
622-3179-004	5826-01-194-5731	TRANSCEIVER, ADF	ROCKWELL COLLINS
622-3204-001	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-3204-042	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-3255-001	5820-01-208-8750	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3255-002	5826-01-360-2878	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3255-003	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3255-004	5826-01-499-1906	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3255-005	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3255-006	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3255-007	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3255-008	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3255-009	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-001	5826-01-129-6079	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-002	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-003	5826-01-251-4020	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-004	5826-01-601-6931	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-005	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-006	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-007	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-008	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-009	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-010	5826-01-548-2159	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS

## CAPABILITY LIST

622-3257-011	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-012	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-013	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-101	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3257-201	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3259-002	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3259-003	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3259-005	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
622-3343-001	----	INDICATOR, ATTITUDE DIRECTOR	ROCKWELL COLLINS
622-3343-002	----	INDICATOR, ATTITUDE DIRECTOR	ROCKWELL COLLINS
622-3344-002	6610-01-620-8831	INDICATOR, ATTITUDE DIRECTOR	ROCKWELL COLLINS
622-3371-001	5820-01-312-2024	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-3372-001	5820-01-183-3036	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-3374-002	6610-01-101-1927	INDICATOR, ATTITUDE DIRECTOR	ROCKWELL COLLINS
622-3710-001	5985-01-258-5646	ANTENNA, ADF	ROCKWELL COLLINS
622-3765-001	5975-01-037-6649	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-3766-001	5975-01-039-7621	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-3881-001	----	INDICATOR, DME	ROCKWELL COLLINS
622-3881-002	----	INDICATOR, DME	ROCKWELL COLLINS
622-3890-002	5999-01-234-9779	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-003	5841-01-220-1390	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-004	5826-01-124-7459	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-005	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-006	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-008	5826-01-124-4793	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-011	5826-01-197-9612	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-013	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-014	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-015	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-018	5841-01-328-8012	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-102	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-103	5841-01-426-8489	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-104	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-108	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3890-114	----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
622-3915-001	5840-01-188-4694	INDICATOR, DME	ROCKWELL COLLINS
622-3915-002	----	INDICATOR, DME	ROCKWELL COLLINS
622-3916-001	6605-01-350-7225	INDICATOR, DME	ROCKWELL COLLINS
622-3916-002	----	INDICATOR, DME	ROCKWELL COLLINS
622-3917-001	----	INDICATOR, DME	ROCKWELL COLLINS
622-3917-002	----	INDICATOR, DME	ROCKWELL COLLINS
622-3918-001	----	INDICATOR, DME	ROCKWELL COLLINS
622-3918-002	5841-01-126-6621	INDICATOR, DME	ROCKWELL COLLINS
622-3919-001	5841-01-220-0659	INDICATOR, DME	ROCKWELL COLLINS

### CAPABILITY LIST

622-3919-002	----	INDICATOR, DME	ROCKWELL COLLINS
622-3920-001	5826-01-422-5469	INDICATOR, DME	ROCKWELL COLLINS
622-3920-002	----	INDICATOR, DME	ROCKWELL COLLINS
622-3921-001	----	INDICATOR, DME	ROCKWELL COLLINS
622-3921-002	----	INDICATOR, DME	ROCKWELL COLLINS
622-3986-001	----	CONTROL, RADIO SET	ROCKWELL COLLINS
622-3986-002	----	CONTROL, RADIO SET	ROCKWELL COLLINS
622-3986-003	----	CONTROL, RADIO SET	ROCKWELL COLLINS
622-3986-004	----	CONTROL, RADIO SET	ROCKWELL COLLINS
622-3986-005	----	CONTROL, RADIO SET	ROCKWELL COLLINS
622-3987-001	----	CONTROL, RADIO SET	ROCKWELL COLLINS
622-3987-002	----	CONTROL, RADIO SET	ROCKWELL COLLINS
622-3987-003	----	CONTROL, RADIO SET	ROCKWELL COLLINS
622-3987-004	----	CONTROL, RADIO SET	ROCKWELL COLLINS
622-4186-001	5826-01-066-2662	ADAPTER, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-4298-001	6605-01-101-1883	INDICATOR, HORIZONTAL SITUATION	ROCKWELL COLLINS
622-4393-001	6615-01-477-9209	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4393-002	6615-01-092-0363	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4393-019	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-001	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-002	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-004	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-005	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-008	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-009	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-013	6615-01-188-4494	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-019	6615-01-208-8751	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-025	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4394-042	----	CONTROL, AIR DATA	ROCKWELL COLLINS
622-4401-001	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4401-003	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4401-004	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4401-005	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4401-007	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4401-010	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4401-014	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4401-015	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4401-020	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4401-026	----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-4424-001	6615-01-134-8914	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
622-4488-001	----	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
622-4564-001	----	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-4565-001	6615-01-328-1062	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
622-4565-002	5996-01-353-3975	GYROSCOPE, VERTICAL	ROCKWELL COLLINS



**CAPABILITY LIST**

622-4754-001	5975-01-066-9462	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-4924-001	1680-01-537-2927	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
622-4938-001	5826-01-296-3914	INDICATOR, RADIO MAGNETIC	ROCKWELL COLLINS
622-4938-001.E	5826-MD-031-3433	INDICATOR, RADIO MAGNETIC	ROCKWELL COLLINS
622-4956-103	5821-01-258-7579	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-4959-001	5826-01-132-7214	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-4960-001	5975-01-136-2750	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-5145-001	5826-01-411-6748	TRANSCEIVER, TACAN	ROCKWELL COLLINS
622-5150-001	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
622-5150-002	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
622-5151-001	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
622-5151-002	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
622-5152-001	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
622-5152-002	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
622-5229-001	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
622-5229-002	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
622-5377-001	5895-01-254-2749	TRANSCEIVER, RADIO	ROCKWELL COLLINS
622-5458-001	5975-01-120-7047	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-5486-001	5826-01-188-4493	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-5486-011	5826-01-395-9995	SELECTOR, FLIGHT MODE	ROCKWELL COLLINS
622-5508-001	5340-01-384-4056	TRAY, ELECTRONIC, MOUNTING	ROCKWELL COLLINS
622-5508-002	5975-01-424-3707	TRAY, ELECTRONIC, MOUNTING	ROCKWELL COLLINS
622-5508-003	----	TRAY, ELECTRONIC, MOUNTING	ROCKWELL COLLINS
622-5509-001	5820-01-308-2377	ADAPTER, RADIO, HIGH FREQUENCY	ROCKWELL COLLINS
622-5510-001	5820-01-210-2008	ADAPTER, RADIO, HIGH FREQUENCY	ROCKWELL COLLINS
622-5680-001	5975-01-149-4014	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-5680-002	5975-01-151-9681	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-5680-003	----	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-5812-001	6605-01-345-1258	VALVE, FLUX DETECTOR	ROCKWELL COLLINS
622-6020-011	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
622-6020-012	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
622-6020-021	5840-01-345-1650	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
622-6020-022	5980-01-289-5788	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
622-6020-121	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
622-6020-122	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
622-6129-001	5985-01-151-5848	COUPLER, ANTENNA	ROCKWELL COLLINS
622-6137-001	5821-01-300-2715	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-6137-201	5821-01-300-2715	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
622-6153-001	5820-01-328-1040	TRANSCEIVER, VHL, RADIO	ROCKWELL COLLINS
622-6208-303	6615-01-289-5715	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6208-403	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-001	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-002	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-003	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS



### CAPABILITY LIST

622-6209-004	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-005	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-006	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-007	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-008	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-010	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-011	5895-01-289-5757	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-019	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-020	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-103	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-104	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-105	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-106	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-109	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-110	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-111	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-112	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-114	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-118	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-120	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-203	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-204	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-205	1560-01-646-3939	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-206	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-303	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-304	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-305	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-306	6930-01-349-0661	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-405	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6209-817	6615-01-450-2720	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6263-001	5895-01-304-3814	INTERROGATOR SET	ROCKWELL COLLINS
622-6263-003	5895-01-304-3814	INTERROGATOR SET	ROCKWELL COLLINS
622-6321-001	5821-01-203-3480	TRANSCEIVER, RADIO AM/FM	ROCKWELL COLLINS
622-6342-011	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6342-012	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6342-013	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6342-021	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6342-022	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6342-023	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6342-024	6220-01-646-3936	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6342-121	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6342-122	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6424-001	5975-01-152-1266	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-6464-011	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS

## CAPABILITY LIST

622-6464-012	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6464-021	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6464-022	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6535-011	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6535-012	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6535-021	----	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6535-022	5980-01-333-7947	DISPLAY, ELECTRONIC FLIGHT	ROCKWELL COLLINS
622-6563-001	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-002	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-003	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-004	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-005	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-006	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-007	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-008	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-010	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-011	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-103	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-104	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-105	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-106	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-109	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-203	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-204	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-205	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-206	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-303	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-304	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-305	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-306	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-405	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6563-413	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6667-001	5996-01-306-4529	AMPLIFIER, ELECTRONIC CONTROL	ROCKWELL COLLINS
622-6900-007	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6900-027	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-6900-407	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-7233-001	5975-01-256-7216	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-7234-001	5975-01-242-9549	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-7236-001	----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-7236-002	----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-7236-011	5840-01-345-1652	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-7236-012	----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-7236-201	----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-7236-202	----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS

## CAPABILITY LIST

622-7337-001	5841-01-315-0645	TRANSCEIVER, RADAR	ROCKWELL COLLINS
622-7411-204	-----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
622-7570-001	5975-01-242-9549	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-7667-001	5998-01-308-3066	ADAPTER, DME	ROCKWELL COLLINS
622-7876-011	7025-01-476-7706	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-7876-012	5895-01-324-1442	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-7876-211	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-7876-212	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-7978-321	6605-15-191-3981	COMPUTER, AP/FD	ROCKWELL COLLINS
622-8084-001	5985-01-281-1984	ANTENNA	RAYTHEON
622-8139-001	5975-01-249-5920	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-8140-001	5826-01-251-1148	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-8329-013	-----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-8329-646	7021-MD-017-8134	AIR DATA COMPUTER	ROCKWELL COLLINS
622-8329-647	-----	AIR DATA COMPUTER	ROCKWELL COLLINS
622-8677-001	-----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
622-9009-001	5821-01-333-9238	PROCESSOR UNIT, DISPLAY	ROCKWELL COLLINS
622-9010-001	5821-01-333-9239	PROCESSOR UNIT, MULTI	ROCKWELL COLLINS
622-9076-001	-----	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
622-9301-001	-----	TRANSCEIVER, WEATHER, RADAR	ROCKWELL COLLINS
622-9849-001	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-9849-002	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-9849-011	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-9849-012	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-9849-201	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
622-9849-202	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
624334-1	6685-00-887-6815	INDICATOR, FUEL CROSS FEED PRESSURE	ROCKWELL COLLINS
624394-5	6680-00-319-1723	TRANSMITTER, OIL QUANTITY	LOCKHEED MARTIN
624407-1	6680-00-815-7282	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
624407-3	6680-00-815-7285	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
624408-1	6680-00-815-7284	INDICATOR, TOTALIZER, FUEL QUANTITY	LOCKHEED MARTIN
624437-1	6620-00-020-3211	TRANSMITER, FUEL FLOW	LOCKHEED MARTIN
624438-1	6620-00-021-2239	INDICATOR, FUEL FLOW	LOCKHEED MARTIN
624439-101	6130-01-227-4291	POWER SUPPLY, FUEL FLOW	LOCKHEED MARTIN
624439-101	6130-00-906-9917	POWER SUPPLY	LOCKHEED MARTIN
624439-103	6130-01-227-4291	POWER SUPPLY, FUEL FLOW	LOCKHEED MARTIN
626125-5	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	LOCKHEED MARTIN
626149-3	6685-00-887-6812	GAGE, DIFFERENTIAL, DIAL INDICATING	LOCKHEED MARTIN
626158-1	6685-00-887-6813	INDICATOR, BLEED MANIFOLD PRESSURE	HONEYWELL
627076-2-1	1660-01-057-5182	CONTROL BOX, AIR TEMPERATURE	LOCKHEED MARTIN
627T-1	5820-01-312-2024	TRANSCEIVER, RADIO	ROCKWELL COLLINS
628T-1	5820-01-312-2024	TRANSCEIVER, RADIO	ROCKWELL COLLINS
628T-2	5820-01-183-3036	TRANSCEIVER, RADIO	ROCKWELL COLLINS
628T-2A	5895-01-254-2749	TRANSCEIVER, RADIO	ROCKWELL COLLINS

## CAPABILITY LIST

629292-1	1660-00-887-4277	CONTROL BOX, AIRCRAFT AIR TEMPERATURE	ROCKWELL COLLINS
629318-5	6610-00-799-8315	INDICATOR, HORIZONTAL SITUATION	LOCKHEED MARTIN
630-37070-235	6610-01-101-1905	COMPUTER, AIR SPEED	KOLLSMAN
632184-3	5930-00-961-8506	SWITCH, PRESSURE	LOCKHEED MARTIN
634055-9	2915-00-887-1904	VALVE, FUEL SYSTEM	LOCKHEED MARTIN
634065-3	5930-00-961-8507	SWITCH, PRESSURE	LOCKHEED MARTIN
634080-11	2935-00-887-4267	COOLER, ENGINE OIL	LOCKHEED MARTIN
634174-1	2935-00-887-1969	COOLER, LUBRICATING OIL, ENGINE	LOCKHEED MARTIN
64042-401-1	6610-14-395-6835	INDICATOR, AIR SPEED	JAEGER (THALES AVIONICS)
64111-635-1	6610-14-349-3965	ALTIMETER, ENCODER	JAEGER (THALES AVIONICS)
64111-635-2	6610-14-482-5668	ALTIMETER, ENCODER	JAEGER (THALES AVIONICS)
64111-835-1	6610-14-043-0158	ALTIMETER, ENCODER	JAEGER (THALES AVIONICS)
642C1	5835-01-103-7517	RECORDER, SOUND	ROCKWELL COLLINS
64400-004-1	6610-14-395-6836	ACCELEROMETER, MECHANICAL	JAEGER (THALES AVIONICS)
644647-51	1660-00-887-6729	VALVE, CABIN AIR PRESSURE, OUTFLOW	LOCKHEED MARTIN
644648-103	1660-01-067-0390	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	LOCKHEED MARTIN
644648-105	1660-01-159-9078	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	LOCKHEED MARTIN
644648-107	1660-01-159-9078	VALVE, AIR PRESSURE, CONTROLLER	LOCKHEED MARTIN
644648-53	1660-00-887-6728	REGULATOR, AIR PRESSURE, AIRCRAFT CABIN	LOCKHEED MARTIN
644669-101	4810-00-884-7571	VALVE, BUTTERFLY	LOCKHEED MARTIN
644669-51	4810-00-887-1914	VALVE, BUTTERFLY	LOCKHEED MARTIN
644673-101	4810-00-914-9508	VALVE, CROSS	LOCKHEED MARTIN
644673-105	4810-00-085-1104	VALVE, SHUTOFF, BLEED AIR	LOCKHEED MARTIN
644673-51	4810-00-566-0332	VALVE, CROSS, SOLENOID	LOCKHEED MARTIN
644676-3	1660-00-818-7701	VALVE, BUTTERFLY	GE AVIATION
644810-51	2995-00-822-3053	VALVE, HOT AIR	LOCKHEED MARTIN
644850-103	4810-01-142-8229	VALVE, BUTTERFLY	LOCKHEED MARTIN
644850-107	4810-01-142-8229	VALVE, BUTTERFLY	LOCKHEED MARTIN
644850-7	4810-00-018-3825	VALVE, BUTTERFLY	LOCKHEED MARTIN
644853-101	4810-00-943-5223	VALVE, BUTTERFLY	LOCKHEED MARTIN
644853-103	4810-01-085-7038	VALVE, BUTTERFLY	LOCKHEED MARTIN
644858-101	4810-01-082-7208	VALVE, BUTTERFLY	LOCKHEED MARTIN
644858-103	4810-01-082-7207	VALVE, BUTTERFLY	LOCKHEED MARTIN
644858-107	4810-01-152-5662	VALVE, BUTTERFLY	LOCKHEED MARTIN
644858-7	4810-00-018-3825	VALVE, BUTTERFLY	LOCKHEED MARTIN
647091-101	4110-00-015-7627	REFRIGERATOR, MECHANICAL	LOCKHEED MARTIN
64811-399-1	6685-14-380-2756	INDICATOR, TEMPERATURE	JAEGER (THALES AVIONICS)
65-3569	5985-00-217-0457	ANTENNA	BOEING
658059-9	1630-00-887-4268	VALVE, BRAKE ACTUATOR	LOCKHEED MARTIN
658060-57	1650-00-858-0501	ACCUMULATOR, PNEUMATIC	LOCKHEED MARTIN
65A27D1	5841-00-900-8081	WARNING SET, RADIO ALTIMETER (RAWS)	PRECISION AEROSPACE
65B45233	5826-00-904-9822	INDICATOR, RADIO MAGNETIC	HONEYWELL INTERNATIONAL
66039-01	4320-01-171-0452	PUMP, AXIAL PISTONS	PARKER HANNIFIN
66039-2	4320-00-616-3812	PUMP, AXIAL PISTONS	PARKER HANNIFIN

## CAPABILITY LIST

668133-1	4820-00-855-8411	VALVE, HYDRAULIC PRESSURE SHUTOFF	LOCKHEED MARTIN
668281-11	1630-00-887-1916	VALVE, BRAKE	LOCKHEED MARTIN
668401-1	4810-00-887-4337	VALVE, SOLENOID, SHUTOFF	LOCKHEED MARTIN
668402-5	1650-00-566-0335	VALVE, BOMB BAY, HYDRAULIC, CONTROL	LOCKHEED MARTIN
669345-13	1680-00-887-1911	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
669353-101	1680-00-866-7187	GEARBOX, FLAP DRIVE	LOCKHEED MARTIN
669353-103	1680-00-921-8698	GEARBOX, FLAP DRIVE	LOCKHEED MARTIN
669353-5	1680-00-887-1908	GEARBOX, FLAP DRIVE	LOCKHEED MARTIN
66WBD300-4	4320-00-213-5986	PUMP, AXIAL PISTONS	EATON AEROSPACE
66WBD300B1	4320-00-213-5986	PUMP, AXIAL PISTONS	EATON AEROSPACE
670596-105	1660-01-097-8733	INDICATOR, AIRCRAFT AIR TEMPERATURE, SELECTOR	LOCKHEED MARTIN
670597-105	1660-00-918-6727	CONTROL UNIT, AIRCRAFT AIR TEMPERATURE	LOCKHEED MARTIN
670597-107	1660-01-097-8747	CONTROL UNIT, AIRCRAFT AIR TEMPERATURE	LOCKHEED MARTIN
670734-105	1660-00-909-4309	HEAT EXCHANGER, AIR TO AIR	LOCKHEED MARTIN
670734-106	1660-00-909-4310	HEAT EXCHANGER, AIR TO AIR	HONEYWELL INTERNATIONAL
670734-113	4140-00-924-8116	FAN, TUBE, AXIAL	LOCKHEED MARTIN
670750-107	1680-00-877-6385	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
670750-109	1680-01-181-3218	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
670752-107	1680-01-181-1374	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
670764-103	6680-00-923-8466	GENERATOR, TACHOMETER	LOCKHEED MARTIN
670835-101	1630-00-927-1773	BRAKE, MULTIPLE DISK	LOCKHEED MARTIN
670836-103	1630-01-115-1715	WHEEL, AIRCRAFT, MLG	LOCKHEED MARTIN
670846-101	2915-00-983-9306	VALVE, FUEL SYSTEM	LOCKHEED MARTIN
671352-103	5996-00-358-1724	AMPLIFIER, ELECTRONIC CONTROL	LOCKHEED MARTIN
671361-101	1630-00-075-1976	WHEEL, AIRCRAFT, NLG	KOLLSMAN
671CPU19-015	6610-00-663-7740	ALTIMETER, PRESSURE	LOCKHEED MARTIN
671CPU19-015D	6610-00-526-6067	ALTIMETER, PRESSURE	KOLLSMAN
671CPU19-015DF	6610-00-179-4312	ALTIMETER, PRESSURE	KOLLSMAN
671CPU19-035	6610-00-514-4176	ALTIMETER, PRESSURE	KOLLSMAN
671CPU19-035D	6610-00-526-6054	ALTIMETER, PRESSURE	KOLLSMAN
671CPU19-035DF	6610-00-179-4309	ALTIMETER, PRESSURE	KOLLSMAN
671CPX4-037	6610-00-514-4183	ALTIMETER, PRESSURE	KOLLSMAN
671CPX4-037D	6610-00-526-6083	ALTIMETER, PRESSURE	KOLLSMAN
671CPX4-037DF	6610-00-179-5241	ALTIMETER, PRESSURE	KOLLSMAN
672434-101	6610-00-459-4578	ALTIMETER, PRESSURE	KOLLSMAN
67-2734-001	1660-00-065-2899	VALVE, MODULATING, HOT AIR	GRIMES AEROSPACE
67-2790-001	4810-00-725-7747	VALVE, MODULATING, HOT AIR	GRIMES AEROSPACE
67-2790-002	4810-00-003-4369	VALVE, MODULATING, HOT AIR	GRIMES AEROSPACE
672986-103	1660-00-351-3738	CONTROL BOX, AIR TEMPERATURE	LOCKHEED MARTIN
673483-101	6220-01-020-2550	LIGHT, NAVIGATIONAL, AIRCRAFT	LOCKHEED MARTIN
673483-103	6130-01-017-5448	POWER SUPPLY	LOCKHEED MARTIN
673578-105	5826-01-136-7886	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
673819-103	5821-01-140-7767	TRANSCEIVER, VHF, RADIO	LOCKHEED MARTIN
674167-101	4820-01-097-8734	VALVE, FUEL, VENT	RAYTHEON

## CAPABILITY LIST

681200-1	5895-00-168-3590	AMPLIFIER, POWER SUPPLY	LOCKHEED MARTIN
6821493S	2995-MD-003-4605	VALVE, SPEED SENSITIVE	ROLLS-ROYCE
684-4133-020	5950-14-407-5589	TRANSFORMER, POWER	THALES AVIONICS
695224-1	5945-00-628-6484	RELAY, HYBRID	LOCKHEED MARTIN
695316-1	4810-00-522-4595	VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	LOCKHEED MARTIN
695335-5	6220-00-299-4621	LIGHT, LANDING, AIRCRAFT	LOCKHEED MARTIN
695335-7	6220-01-316-4577	LIGHT, LANDING, AIRCRAFT	LOCKHEED MARTIN
695463-3	1660-00-343-4692	REGULATOR, AIR PRESSURE, CABIN	HONEYWELL INTERNATIONAL
695464-13	1660-00-062-0301	CONTROLLER, AIR PRESSURE, AIRCRAFT CABIN	LOCKHEED MARTIN
695539-4	6685-00-670-0895	THERMOSTAT, FLOW CONTROL	LOCKHEED MARTIN
695539-5	6685-01-119-6546	THERMOSTAT, FLOW CONTROL	LOCKHEED MARTIN
695579-69	1620-00-617-9123	GEARBOX, LANDING	LOCKHEED MARTIN
695592-1	4320-00-631-4859	PUMP, ROTARY	LOCKHEED MARTIN
695592-3	4320-00-659-9775	PUMP, ROTARY	LOCKHEED MARTIN
695607-5	1680-00-671-2101	SEAT, AIRCRAFT, TROOPS	LOCKHEED MARTIN
695607-7	1680-00-671-3837	SEAT, AIRCRAFT, TROOPS	LOCKHEED MARTIN
695676-11	1680-01-004-2086	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	LOCKHEED MARTIN
695676-13	1680-01-472-9783	ACTUATOR, ELECTRO-MECHANICAL, ROTARY	LOCKHEED MARTIN
695676-15	1680-01-217-5837	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
695698-1	2915-00-671-7892	VALVE, FLOAT, FUEL TANK	LOCKHEED MARTIN
695698-3	2915-00-574-3227	VALVE, FLOAT, FUEL TANK	LOCKHEED MARTIN
695699-3	2915-00-581-0477	VALVE, FLOAT, FUEL TANK	PARKER HANNIFIN
695700-3	1680-01-013-9501	ACTUATOR, ELEVATOR TRIM TAB, ROTARY	LOCKHEED MARTIN
695715-1	5945-01-250-9675	RELAY, ELECTROMAGNETIC	LOCKHEED MARTIN
695715-7	5945-01-250-9675	RELAY, ELECTROMAGNETIC	LOCKHEED MARTIN
695746-1	2915-00-632-7932	VALVE, FUEL SYSTEM	LOCKHEED MARTIN
695748-13	4810-00-730-2852	VALVE, SOLENOID CONTROLLED, SHUT-OFF	LOCKHEED MARTIN
695748-15	4810-00-730-3551	VALVE, SOLENOID CONTROLLED, SHUT-OFF	LOCKHEED MARTIN
695752-1	2915-00-739-3047	VALVE, FLOAT, FUEL TANK	LOCKHEED MARTIN
695752-3	2915-00-074-1724	VALVE, FLOAT, FUEL TANK	LOCKHEED MARTIN
695755-1	1680-00-733-3491	WINCH, AIRCRAFT MOUNTED	LOCKHEED MARTIN
695757-31	6680-01-063-0597	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
695762-3	4810-00-612-2696	VALVE, LINEAR, DIRECTIONAL CONTROL	LOCKHEED MARTIN
695768-1	2915-00-971-9130	PUMP, SUBMERGED, AIRCRAFT	LOCKHEED MARTIN
695775-1	1680-00-088-6102	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
695775-2	1680-00-981-7652	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
695797-1	6680-00-580-1247	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-11	6680-00-585-5444	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-13	6680-00-585-8600	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-17	6680-00-866-5116	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-19	6680-00-849-7809	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-23	6680-01-056-1779	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-25	6680-01-060-5228	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-27	6680-01-058-5859	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN

## CAPABILITY LIST

695797-3	6680-00-580-1246	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-33	6680-01-058-5861	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
695797-35	6680-01-058-5862	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
695797-37	6680-01-058-5860	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-5	6680-00-580-1248	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695797-9	6680-00-585-5859	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
695799-185	6680-01-059-3387	COMPENSATOR, FUEL QUANTITY	LOCKHEED MARTIN
695799-225	6680-01-064-3231	COMPENSATOR, FUEL QUANTITY	LOCKHEED MARTIN
695799-235	6680-01-067-4552	COMPENSATOR, LIQUID QUANTITY GAGE	LOCKHEED MARTIN
695800-3	6680-01-419-1995	TRANSMITTER, OIL QUANTITY	LOCKHEED MARTIN
695800-5	6680-01-419-1995	TRANSMITTER, OIL QUANTITY	LOCKHEED MARTIN
695805-1	4810-00-987-3948	VALVE, SOLENOID, SHUT-OFF	LOCKHEED MARTIN
695807-1	1680-00-073-8204	ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	LOCKHEED MARTIN
695807-3	1680-01-254-6893	ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	LOCKHEED MARTIN
695807-5	1680-01-378-1631	ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	LOCKHEED MARTIN
695807-7	1680-01-497-7142	ACTUATOR, ELECTRO-MECHANICAL, LINEAR, OIL COOLER DOOR	LOCKHEED MARTIN
695808-1	4810-01-206-6309	VALVE, SOLENOID, SHUT-OFF	LOCKHEED MARTIN
695813-1	4820-00-006-5087	VALVE, ENGINE, BLEED AIR, CHECK	LOCKHEED MARTIN
695838-3	1680-00-426-5616	ACTUATOR, APU DOOR, ELECTRO-MECHANICAL	LOCKHEED MARTIN
695855-5	7310-00-905-6212	OVEN, WARMING, ELECTRIC	LOCKHEED MARTIN
695859-3	4810-00-003-4369	VALVE, MODULATING, HOT AIR	LOCKHEED MARTIN
695871-3	4820-00-810-2061	VALVE, FLUID, REGULATING	LOCKHEED MARTIN
695873-1	6350-01-280-1671	DETECTOR, HEAT	LOCKHEED MARTIN
695873-9	6350-01-280-1671	DETECTOR, HEAT	LOCKHEED MARTIN
695890-1	6105-00-630-5828	MOTOR, WINDSHIELD, DIRECT CURRENT	LOCKHEED MARTIN
695906-1	5930-00-615-7340	SWITCH, PRESSURE	LOCKHEED MARTIN
695923-1	1680-00-782-5861	SEAT, AIRCRAFT, TROOPS	LOCKHEED MARTIN
695923-3	1680-00-913-4840	SEAT, AIRCRAFT, TROOPS	LOCKHEED MARTIN
695923-5	1680-00-913-4841	SEAT, AIRCRAFT, TROOPS	LOCKHEED MARTIN
695960-1	1680-00-705-9996	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
695960-3	1680-00-705-9997	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
695960-5	2915-01-211-5951	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
695960-7	1680-01-131-0902	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
6970-1	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	LOCKHEED MARTIN
697226-1	2935-00-966-3321	COOLER, ENGINE, OIL	LOCKHEED MARTIN
697232-1	1650-00-204-1703	MOTOR, HYDRAULIC	LOCKHEED MARTIN
697235-1	1680-01-221-8261	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	LOCKHEED MARTIN
697273-1	5945-00-075-4925	SWITCH, INSTRUMENT	LOCKHEED MARTIN
697395-1	1630-00-998-7897	VALVE, BRAKE CONTROL	LOCKHEED MARTIN
697397-1	1630-00-998-7896	VALVE, SKID CONTROL	LOCKHEED MARTIN
697397-3	1630-00-908-9999	VALVE, DUAL CONTROL	LOCKHEED MARTIN
697398-1	1630-00-085-2625	CONTROL UNIT, ANTI-SKID	LOCKHEED MARTIN
697398-3	1630-00-133-8183	CONTROL UNIT, ANTI-SKID	LOCKHEED MARTIN
697489-1	1630-00-914-1329	WHEEL, NOSE LANDING GEAR	LOCKHEED MARTIN



**CAPABILITY LIST**

697639-11	----	CONTROL BOX, TEMPERATURE	LOCKHEED MARTIN
697639-13	1660-00-595-7773	SENSOR, CABIN TEMPERATURE	LOCKHEED MARTIN
697639-17	1660-00-583-7106	SENSOR, DUCT, OVERHEAT	LOCKHEED MARTIN
697639-21	1660-01-021-4981	CONTROL BOX, TEMPERATURE	LOCKHEED MARTIN
697639-35	1660-01-003-6297	CONTROL BOX, TEMPERATURE	LOCKHEED MARTIN
697639-37	1660-01-014-4509	CONTROL BOX, TEMPERATURE	LOCKHEED MARTIN
697639-39	1660-01-021-4981	CONTROL BOX, AIRCRAFT AIR TEMPERATURE	LOCKHEED MARTIN
697640-1	1680-01-008-7442	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	WHIPPANY ACTUATION SYSTEMS
697710-1	6680-01-170-8405	TRANSMITTER, LIQUID QUANTITY	LOCKHEED MARTIN
697749-11	6680-01-291-4271	INDICATOR, TOTALIZER, FUEL QUANTITY	LOCKHEED MARTIN
697749-13	6680-01-290-7552	INDICATOR, REPEATER, FUEL QUANTITY	LOCKHEED MARTIN
697749-15	6680-01-350-8049	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
697749-17	6680-01-350-8048	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
697749-19	6680-01-350-9120	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
697749-3	6680-01-220-4091	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
697749-5	6680-01-224-7271	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
697749-9	6680-01-290-5920	INDICATOR, PRIMARY, FUEL QUANTITY	LOCKHEED MARTIN
697750-1	4810-01-237-5974	VALVE, OIL COOLER, AUGMENTATION	LOCKHEED MARTIN
697750-3	4810-01-237-5974	VALVE, OIL COOLER, AUGMENTATION	LOCKHEED MARTIN
697752-1	4810-01-218-2643	VALVE, TEMPERATURE CONTROL, BUTTERFLY	LOCKHEED MARTIN
697753-1	4810-01-219-3417	VALVE, TEMPERATURE CONTROL, BUTTERFLY	LOCKHEED MARTIN
697883-1	6620-01-394-4018	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
697883-3	6680-01-394-2555	INDICATOR, FUEL QUANTITY	LOCKHEED MARTIN
698611-1	6620-00-111-0401	INDICATOR, TORQUEMETER	LOCKHEED MARTIN
7000B	----	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
7000E	----	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
7021-200	1650-14-377-8587	ACTUATOR, PNEUMATIC, NOSE CONE	LE BOZEC
703BD-OA-2	6610-MD-016-3590	INDICATOR, HORIZONTAL SITUATION	SFENA (THALES AVIONICS)
7041-1	1680-00-088-6102	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
7041-2	1680-00-981-7652	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
704A45-330-007	5985-01-112-8057	ANTENNA, ADF	CEF INDUSTRIES
705-12-333	6610-MD-016-3783	INDICATOR, HORIZONTAL SITUATION	OGMA
705565-2	6130-01-051-7518	CHARGER, BATTERY	GE AVIATION SYSTEMS
707073-801	5821-01-136-9512	TRANSCEIVER, UHF, RADIO	RAYTHEON
707877-1	5895-00-228-3133	CONTROL BOX, RECEIVER	RAYTHEON
707878-1	5826-00-521-0571	COUPLING, ANTENNA	RAYTHEON
707880-1	5826-00-390-5744	INDICATOR, BEARING	RAYTHEON
707881-1	5985-00-149-1451	ANTENNA, LOOP	RAYTHEON
708019-1	5821-00-090-2994	TRANSCEIVER, RADIO COMPASS	RAYTHEON
7088-1A	1680-00-789-9345	GEAR BOX ASSYFLAP DRIVEMOTOR DRIVEN	CEF INDUSTRIES
7-115945	2915-00-901-7206	VALVE, FLOAT, FUEL TANK	CEF INDUSTRIES
7125-9415	6615-01-178-0583	GYROSCOPE, RATE OF TURN	MID-CONTINENT INSTRUMENT
714E-1	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-2	----	CONTROL, RADIO SET	ROCKWELL COLLINS



**CAPABILITY LIST**

714E-2A	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-2B	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-2C	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-3	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-3B	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-3C	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-3D	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-3E	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-3F	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-3G	----	CONTROL, RADIO SET	ROCKWELL COLLINS
714E-3H	----	CONTROL, RADIO SET	ROCKWELL COLLINS
715.158-915	5895-12-322-8156	TRANSCEIVER, IFF	BECKER AVIONICS
724CU-4-012	6610-00-514-5612	INDICATOR, AIR SPEED	KOLLSMAN
724CU-5-011	6610-00-531-4299	INDICATOR, AIR SPEED	KOLLSMAN
724CU-5-03	----	INDICATOR, AIR SPEED	KOLLSMAN
724CU-5-03M	6610-00-526-4798	INDICATOR, AIR SPEED	KOLLSMAN
724CU-8-011	6610-00-531-4296	INDICATOR, AIR SPEED	KOLLSMAN
724DU-4-012	6610-00-514-5611	INDICATOR, AIR SPEED	KOLLSMAN
724DX-4-012	6610-00-526-7944	INDICATOR, AIR SPEED	KOLLSMAN
731300-3	2915-00-357-2496	VALVE, FLOAT, FUEL TANK	TRANSDIGM
731700-3	----	VALVE, FLOAT, FUEL TANK	TRANSDIGM
73483-103	6130-01-017-5448	POWER SUPPLY	LOCKHEED MARTIN
7500-15A5A	6620-00-553-8988	TRANSMITTER, PRESSURE	HONEYWELL
7-511C10035-1	6615-00-137-6038	GYROSCOPE, RATE OF TURN	BOEING
7514060-902	5985-01-461-0972	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7514081-901	----	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7514081-902	5985-01-521-0194	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7514081-903	5985-01-628-4706	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7514081-904	5985-01-466-0191	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7514081-910	5985-01-482-4812	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7514081-912	5985-01-575-9739	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7514081-913	5985-01-588-4454	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7514081-914	5985-01-521-8687	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7514081-917	5985-01-476-4910	ANTENNA, TCAS DIRECTIONAL ANTENNA	ACSS
7519350-70051	5826-01-527-0947	TRANSPONDER SET	HONEYWELL INTERNATIONAL
758L1-01	6605-00-239-8205	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
758U	6605-00-239-8206	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
7609-36H5-1	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL
7609-3705-2	6685-00-526-7864	TRANSMITTER, PRESSURE	RAYTHEON
7609-37A5-1	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL
7609-37B5-2	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL
7609-37C5-1	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL
7609-37D5-2	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL
7609-37H5-1	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL

**CAPABILITY LIST**

7609-37M5-2	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL
765592-13	4810-01-154-3200	VALVE, REGULATING, FLUID PRESSURE	HAMILTON SUNDSTRAND
766840-1	1610-01-097-8728	SYNCHROPHASER ASSEMBLY, PROPELLER	HAMILTON SUNDSTRAND
766840-2	1610-01-155-9337	SYNCHROPHASER ASSEMBLY, PROPELLER	HAMILTON SUNDSTRAND
77000546-001	5945-00-628-6484	RELAY, HYBRID	DNE TECHNOLOGIES
77000580-000	6685-01-119-6546	THERMOSTAT, FLOW CONTROL	DNE TECHNOLOGIES
7700-15A5-1A	6620-00-553-8988	TRANSMITTER, PRESSURE	HONEYWELL
7700-15A5-2	6620-00-553-8988	TRANSMITTER, PRESSURE	HONEYWELL
7-702755	2915-00-673-3257	VALVE, FLOAT, FUEL TANK	PARKER HANNIFIN
7706-15A5-1	6620-00-553-8988	TRANSMITTER, PRESSURE	HONEYWELL
7709-15A5-1	6620-00-553-8988	TRANSMITTER, PRESSURE	HONEYWELL
7-716835	2915-00-739-3047	VALVE, FLOAT, FUEL TANK	PARKER HANNIFIN
772-5140-001	6615-00-134-5980	GYROSCOPE, RATE OF TURN	ROCKWELL COLLINS
772-5140-002	6615-01-134-3127	GYROSCOPE, RATE OF TURN	ROCKWELL COLLINS
772-5370-001	----	INDICATOR, COURSE	ROCKWELL COLLINS
772-5370-002	----	INDICATOR, COURSE	ROCKWELL COLLINS
772-5370-003	5826-01-065-9189	INDICATOR, COURSE	ROCKWELL COLLINS
772-5370-005	----	INDICATOR, COURSE	ROCKWELL COLLINS
773170-3	1610-01-226-2721	SYNCHROPHASER ASSEMBLY, PROPELLER	HAMILTON SUNDSTRAND
7742-10-A5-1	6620-00-999-2425	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
7742-15-A5-1	6620-00-999-2222	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
7742-17-A5-1	6620-00-436-6401	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
7742-30-A5-1	6620-00-999-2424	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
7742-47-A5-1	6620-00-065-3235	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
7745-17A5-1	6620-00-901-7848	TRANSMITTER PRESSURE	HONEYWELL INTERNATIONAL
774800-1	1610-01-128-7400	SYNCHROPHASER ASSEMBLY, PROPELLER	HAMILTON SUNDSTRAND
77600000-3	6610-01-044-1860	INDICATOR, ATTITUDE DIRECTOR	MOOG
77600000-4	6610-01-092-9846	INDICATOR, ATTITUDE DIRECTOR	MOOG
777-1029-001	----	CONTROL, RADIO SET	ROCKWELL COLLINS
777-1029-002	----	CONTROL, RADIO SET	ROCKWELL COLLINS
777-1029-003	----	CONTROL, RADIO SET	ROCKWELL COLLINS
777-1029-004	----	CONTROL, RADIO SET	ROCKWELL COLLINS
777-1029-005	----	CONTROL, RADIO SET	ROCKWELL COLLINS
777-1029-006	----	CONTROL, RADIO SET	ROCKWELL COLLINS
777-1029-007	----	CONTROL, RADIO SET	ROCKWELL COLLINS
777-1034-001	6615-00-134-5980	GYROSCOPE, RATE OF TURN	ROCKWELL COLLINS
777-1061-001	----	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS
777-1062-001	5999-01-157-0310	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
777-1062-003	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
777-1492-001	5826-00-322-2167	TRANSCEIVER, ADF	ROCKWELL COLLINS
777-1492-002	5895-01-020-3854	TRANSCEIVER, ADF	ROCKWELL COLLINS
777-1492-003	5841-01-105-3259	TRANSCEIVER, ADF	ROCKWELL COLLINS
777-1492-004	5826-01-068-7371	TRANSCEIVER, ADF	ROCKWELL COLLINS
777-1557-001	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS

## CAPABILITY LIST

78035-01118	6620-01-230-0197	INDICATOR, ELECTRICAL TACHOMETER	AEROSONIC
78035-11119	6620-01-228-1571	INDICATOR, ELECTRICAL TACHOMETER	AEROSONIC
78700000-01	6610-01-114-6817	INDICATOR, ANGLE OF ATTACK	MOOG
78700000-02	6610-01-345-6430	INDICATOR, ANGLE OF ATTACK	MOOG
787-6377-001	----	CONTROL, RADIO SET	ROCKWELL COLLINS
787-6377-002	----	CONTROL, RADIO SET	ROCKWELL COLLINS
787-6378-001	----	CONTROL, RADIO SET	ROCKWELL COLLINS
787-6378-002	----	CONTROL, RADIO SET	ROCKWELL COLLINS
787-6557-001	----	CONTROL, RADIO SET	ROCKWELL COLLINS
792-6216-001	5826-00-275-0612	TRANSCEIVER, ADF	ROCKWELL COLLINS
792-6216-002	5820-01-013-8918	TRANSCEIVER, ADF	ROCKWELL COLLINS
792-6216-003	5826-00-275-0612	TRANSCEIVER, ADF	ROCKWELL COLLINS
792-6216-004	5826-00-275-0612	TRANSCEIVER, ADF	ROCKWELL COLLINS
792-6221-001	5826-01-065-9132	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
792-6221-002	----	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
792-6221-003	----	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
792-6221-004	----	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
792-6221-005	----	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
792-6221-011	6605-01-397-2869	SELECTOR, HEADING, REMOTE	ROCKWELL COLLINS
792-6275-002	5826-01-065-1759	CONTROL, ADF	ROCKWELL COLLINS
792-6348-001	6615-01-015-9189	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-002	6615-01-020-3681	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-003	6615-01-128-2179	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-004	6615-01-096-9997	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-005	6615-01-038-7299	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-015	6615-01-394-5917	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-101	----	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-102	----	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-103	----	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-104	----	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6348-105	----	CONTROLLER, AUTOPILOT	ROCKWELL COLLINS
792-6357-002	6610-01-013-8911	INDICATOR, ATTITUDE DIRECTOR	ROCKWELL COLLINS
792-6357-008	6610-01-013-8911	INDICATOR, ATTITUDE DIRECTOR	ROCKWELL COLLINS
792-6672-001	----	CONTROL, AIR DATA	ROCKWELL COLLINS
792-6672-002	----	CONTROL, AIR DATA	ROCKWELL COLLINS
792-6672-004	----	CONTROL, AIR DATA	ROCKWELL COLLINS
792-6672-005	----	CONTROL, AIR DATA	ROCKWELL COLLINS
792-6672-008	----	CONTROL, AIR DATA	ROCKWELL COLLINS
792-6672-019	5821-01-208-8752	CONTROL, AIR DATA	ROCKWELL COLLINS
792-6694-001	5826-00-348-3874	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
792-6694-002	6615-01-074-7200	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
792-6694-004	5826-01-340-3801	GYROSCOPE, VERTICAL	ROCKWELL COLLINS
792-6703-003	6615-01-040-0126	COMPUTER, FLIGHT CONTROL	ROCKWELL COLLINS
792-6780-001	----	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS

**CAPABILITY LIST**

792-6781-001	6615-01-037-7780	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS
792-6781-003	6615-01-037-7780	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS
792-6782-001	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6783-001	6615-01-140-8884	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6784-001	5999-01-157-0312	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6784-003	6615-01-037-7780	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6784-004	6615-01-074-7201	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6785-001	6615-01-143-3749	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6785-002	6615-01-065-9448	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6785-003	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6972-001	----	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS
792-6972-003	----	SERVO, AUTO-PILOT, PRIMARY	ROCKWELL COLLINS
792-6973-001	5975-01-156-4343	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6973-002	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6973-003	----	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
792-6974-001	6615-01-075-4726	MOUNT, AUTO-PILOT, SERVO	ROCKWELL COLLINS
7938174-60	5826-01-307-7380	TRANSMITTER, EMERGENCY LOCATOR (ELT)	POINTER
7MJ1	6685-00-526-7864	TRANSMITTER, PRESSURE	HONEYWELL
80052-0	1660-00-887-4277	CONTROL BOX, TEMPERATURE	KIDDE TECHNOLOGIES
8010000653-1	5841-01-301-4588	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
8010000653-3	5841-01-301-4588	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
8010000653-5	5841-01-246-9183	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
8010000653-6	5841-01-301-4588	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
8010000788-1	5841-01-349-9175	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
8037M1	1680-01-013-9501	ACTUATOR, ELEVATOR TRIM TAB, ROTARY	CEF INDUSTRIES
8037M2	1680-01-013-9501	ACTUATOR, ELEVATOR TRIM TAB, ROTARY	CEF INDUSTRIES
80-5170-2-3	7025-01-457-2005	DISPLAY, HIGH RESOLUTION, PILOT	CEF INDUSTRIES
80552-2	5826-00-390-5744	INDICATOR, BEARING	BORG INSTRUMENTS
8067-1A	1680-01-009-8293	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8067-2A	1680-01-009-8294	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8067-3A	1680-01-131-0901	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8067-4A	1680-01-131-0902	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
808352/000	5985-01-447-0682	ANTENNA CONTROL SUBASSEMBLY	CEF INDUSTRIES
808352/020	5985-01-506-5380	ANTENNA CONTROL SUBASSEMBLY	RAYTHEON
80C705	5930-00-615-7340	SWITCH, PRESSURE	HATHAWAY MOTION CONTROL
81-0284	5826-01-012-4864	ADAPTER, TACAN, TRANSCEIVER	ROCKWELL COLLINS
81-4557	5975-01-041-2044	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
814B	6605-00-221-1352	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
814BN	6605-00-641-1293	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
817586-1	6645-01-449-1630	TIMER, SEQUENTIAL	HAMILTON SUNDSTRAND
822-0400-001	----	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
822-0731-001	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0731-002	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0731-003	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS

### CAPABILITY LIST

822-0731-004	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0731-005	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0731-006	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0731-008	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0731-009	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0731-010	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0731-011	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-001	5821-01-535-6577	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-002	5821-01-495-0990	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-003	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-010	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-011	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-101	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-102	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-103	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-110	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-111	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-203	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-205	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-206	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-208	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-209	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0732-210	----	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
822-0760-001	5826-01-519-4202	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0760-002	5895-01-493-8421	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0760-003	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0760-004	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0760-005	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0760-006	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0760-007	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0760-008	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0760-009	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-001	5826-01-481-6179	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-002	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-003	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-004	5826-01-462-3896	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-005	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-006	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-007	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-008	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-009	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-010	5826-01-509-8441	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-011	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-012	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS

**CAPABILITY LIST**

822-0761-013	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-101	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0761-201	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0762-002	5826-01-657-7610	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0762-003	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-0762-005	----	RECEIVER, VOR/ILS RADIO NAVIGATION	ROCKWELL COLLINS
822-1000-011	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
822-1000-012	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
822-1000-021	6610-01-460-1385	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
822-1000-022	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
822-1000-121	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
822-1000-122	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
822-1001-011	6610-01-459-8690	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
822-1001-012	----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
822-1001-121	----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
822-1001-122	----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
822-1030-001	6605-01-471-2282	INDICATOR, HORIZONTAL SITUATION	ROCKWELL COLLINS
822-1045-001	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-003	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-004	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-005	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-006	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-008	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-009	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-301	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-303	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-311	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-401	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-403	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-411	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-503	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-505	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-506	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-508	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1045-509	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-001	5820-01-474-0840	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-003	5821-01-541-6335	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-011	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-101	5820-01-517-3020	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-103	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-111	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-203	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-205	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-206	----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS

**CAPABILITY LIST**

822-1046-208	-----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1046-209	-----	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1113-001	5821-01-587-6175	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1114-001	5821-01-467-8793	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
822-1360-021	5895-MD-035-4227	WEATHER RADAR ADAPTER	ROCKWELL COLLINS
822-2092-001	5821-01-527-4256	CONTROL, RADIO SET	ROCKWELL COLLINS
828-0161-003	5820-01-503-5842	TRANSCEIVER, RADIO	ROCKWELL COLLINS
8301-102-00-11	6685-14-423-8334	SONDE, EGT	ACTIA (THALES AVIONICS)
831-0001	6340-00-304-5556	DETECTOR, ICE	NORTHERN TELECOM
831-8-10	1650-00-815-2499	FUSE, HYDRAULIC SYSTEM	PARKER-HANNIFIN
83200-3	5841-MD-010-4248	INDICATOR, DME	CINAVE
8348M1	1620-00-617-9123	GEARBOX, LANDING	LOCKHEED MARTIN
8445M1	1680-01-324-8157	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8446M1	1680-01-472-9783	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8545M1	1680-01-217-5837	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
8546M1	1680-01-222-2551	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
855-51-00-00-951	6130-14-380-2739	POWER SUPPLY	CEF INDUSTRIES
8555M1	6220-00-299-4621	LIGHT, LANDING, AIRCRAFT	DIEHL
8555M2	-----	LIGHT, LANDING, AIRCRAFT	CEF INDUSTRIES
8555M3	-----	LIGHT, LANDING, AIRCRAFT	CEF INDUSTRIES
8555M4	-----	LIGHT, LANDING, AIRCRAFT	CEF INDUSTRIES
8555M5	-----	LIGHT, LANDING, AIRCRAFT	CEF INDUSTRIES
8555M6	6220-01-316-4577	LIGHT, LANDING, AIRCRAFT	CEF INDUSTRIES
8555M7	-----	LIGHT, LANDING, AIRCRAFT	CEF INDUSTRIES
8555M9	6220-01-657-7449	LIGHT, LANDING, AIRCRAFT	CEF INDUSTRIES
86000-1113	6645-00-415-9018	CLOCK, MECHANICAL, PANEL	CEF INDUSTRIES
860F-1	-----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
860F-4	-----	TRANSCEIVER, RADIO ALTIMETER	ROCKWELL COLLINS
86400-1110	6645-00-076-3050	CLOCK, MECHANICAL, PANEL	AEROSONIC
86425-4	6620-00-514-5334	INDICATOR, PRESSURE	S-TECH
8656M2	1680-01-497-7142	ACTUATOR, ELECTRO-MECHANICAL, LINEAR, OIL COOLER DO SOCATA	
880-22293-5	6605-00-239-8209	COMPASS, MAGNETIC, MOUNTED	CEF INDUSTRIES
880T100	1680-00-073-8204	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	AEROCONTROLEX
880T100-3	1680-01-254-6893	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	AEROCONTROLEX
89000-1	6620-00-901-7848	TRANSMITTER PRESSURE	S-TECH
891041-100	6350-01-280-1671	DETECTOR, HEAT	KIDDE TECHNOLOGIES
892541-100	6350-00-015-8049	DETECTOR, HEAT	KIDDE TECHNOLOGIES
899L-1	-----	ADAPTER, TACAN, TRANSCEIVER	ROCKWELL COLLINS
8AW59FAA1	6625-00-668-7818	METER, ELECTRICAL FREQUENCY	GENERAL ELECTRIC
8DJ179DBD3	6620-01-135-3043	INDICATOR, TEMPERATURE, FAN TURBINE INLET	AMETEK
8DJ179DBE1	6620-01-256-4307	INDICATOR, TEMPERATURE, FAN TURBINE INLET	AMETEK
8DJ179WAD1	6685-01-096-6867	INDICATOR, THERMOCOUPLE, TEMPERATURE	AMETEK
8DJ215WBA1	6620-01-129-7247	INDICATOR, ELECTRICAL, TACHOMETER	AMETEK
8DJ43AAM	6620-00-515-4541	INDICATOR, ELECTRICAL TACHOMETER	AMETEK

**CAPABILITY LIST**

8DJ43AAM11	6680-00-663-4209	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ43AAM13	6680-00-663-4207	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ43AAM9	6680-00-663-4214	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ48FAL1	6610-00-515-4600	INDICATOR, FLAP, POSITION	AMETEK
8DJ48FAL2	6610-00-515-4600	INDICATOR, FLAP, POSITION	AMETEK
8DJ49GAY	6610-00-580-9690	INDICATOR, RUDDER, POSITION	AMETEK
8DJ49GAY1	6610-00-580-9690	INDICATOR, RUDDER, POSITION	AMETEK
8DJ49GAY2	6610-00-580-9690	INDICATOR, RUDDER, POSITION	AMETEK
8DJ51GAB4	6695-00-628-8990	INDICATOR, POSITION	AMETEK
8DJ64GAF1	6685-00-561-9378	INDICATOR, FUEL FLOW	AMETEK
8DJ64GAS1	----	INDICATOR, FUEL FLOW	AMETEK
8DJ64GAT1	----	INDICATOR, FUEL FLOW	AMETEK
8DJ64GAX	6620-00-021-2239	INDICATOR, FUEL FLOW	AMETEK
8DJ64GAX1	6620-00-021-2239	INDICATOR, FUEL FLOW	AMETEK
8DJ64GBA1	----	INDICATOR, FUEL FLOW	AMETEK
8DJ64GBC1	6620-01-098-2960	INDICATOR, FUEL FLOW	AMETEK
8DJ64GBH1	6620-01-038-5769	INDICATOR, FUEL FLOW	AMETEK
8DJ64GBW1	6620-01-391-2998	INDICATOR, FUEL FLOW	AMETEK
8DJ71GAB	6620-00-551-2631	INDICATOR, FUEL FLOW	AMETEK
8DJ71GAB1	6620-00-551-2631	INDICATOR, FUEL FLOW	AMETEK
8DJ71GAK2	6620-00-621-2903	INDICATOR, FUEL FLOW	AMETEK
8DJ81CAA1	6620-00-621-0143	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CAA2	6620-00-969-3972	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CAA4	6680-00-663-4207	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CAN1	----	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CAN2	6620-00-543-2534	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CAN4	6620-00-148-8307	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CBD4	6620-01-157-9266	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CDR4	----	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CDS4	----	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CDW4	----	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CDX4	----	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8DJ81CDZ4	----	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
8TJ39AAM	6610-00-800-5569	TRANSMITTER, POSITION	AMETEK
8TJ39AAM2	6610-00-800-5569	TRANSMITTER, POSITION	AMETEK
8TJ50GAB1	----	TRANSMITTER, FLOWMETER	AMETEK
8TJ50GAB3	----	TRANSMITTER, FLOWMETER	AMETEK
8TJ50GAS4	6620-00-726-8153	TRANSMITTER, FLOWMETER	AMETEK
8TJ50GAS5	6620-00-720-3223	TRANSMITTER, FLOWMETER	AMETEK
8TJ50GBM5	6620-00-621-2902	TRANSMITTER, FLOWMETER	AMETEK
8TJ51GAA5	6130-00-772-8567	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ51GBB5	6130-00-754-2950	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ64GAL	6620-00-020-3211	TRANSMITTER, FUEL FLOW	AMETEK
8TJ64GAL1	6620-00-020-3211	TRANSMITTER, FUEL FLOW	AMETEK



**CAPABILITY LIST**

8TJ88GAD1	6125-01-098-2961	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ88GAD3	6130-01-314-0886	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ88GAD4	6130-01-314-0886	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ88GADI	6130-01-314-0886	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ88GAH1	6130-00-906-9917	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ88GAH3	6130-01-227-4291	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ88GAP1	-----	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ88GAR1	6120-01-118-6644	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ88GAT1	6130-00-250-9270	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ88GAV1	-----	POWER SUPPLY, FUEL FLOW	AMETEK
8TJ95GAA4	6130-01-328-4653	POWER SUPPLY, FLOWMETER	AMETEK
8TJ95GAB4	-----	POWER SUPPLY, FLOWMETER	AMETEK
8TJ95GAC4	6130-01-411-9171	POWER SUPPLY, FLOWMETER	AMETEK
90007105-000	6685-01-119-6546	THERMOSTAT, FLOW CONTROL	DNE TECHNOLOGIES
90050-3	5998-MD-031-7652	PANEL, FAILURE WARNING	LEACH
901574-3	1650-00-821-4051	CYLINDER ASSEMBLY, ACTUATING, LINEAR	JEWELL INSTRUMENTS
902607-1	1650-00-887-4305	CYLINDER ASSEMBLY, ACTUATING, LINEAR	LOCKHEED MARTIN
907-74	6625-01-412-3365	METER, ELECTRICAL FREQUENCY	LOCKHEED MARTIN
913G-1	-----	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
913G-2	-----	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
913G-4	-----	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
915-38106-001	6130-01-217-5880	POWER SUPPLY, AIRSPEED INDICATOR	KOLLSMAN
917108-1	4140-01-041-4886	FAN, VANE, AXIAL	LITTON
918918-1	1560-00-821-5126	TANK, ENGINE OIL	RAYTHEON
918918-101	1560-00-821-5126	TANK, ENGINE OIL	LOCKHEED MARTIN
918918-103	2840-00-883-2743	TANK, ENGINE OIL	LOCKHEED MARTIN
918918-111	2840-00-883-2743	TANK, ENGINE OIL	LOCKHEED MARTIN
925659-02	6645-00-076-3050	CLOCK, MECHANICAL, PANEL	LOCKHEED MARTIN
925659-04	6645-00-076-3050	CLOCK, MECHANICAL, PANEL	RAYTHEON
931-0001	6340-00-304-5556	DETECTOR, ICE	NORTHERN TELECOM
93-A152-16	5895-01-128-7267	CONTROL, AMPLIFIER	L3 AVIATION PRODUCTS
942-021031	5826-00-505-3580	INDICATOR, BEARING	KOLLSMAN
947F310-3	6110-01-552-9513	GENERATOR CONTROL UNIT	LOCKHEED MARTIN
9550616-1	1630-01-094-1104	WHEEL, MAIN LANDING GEAR	MEGGITT AIRCRAFT BRAKING SYSTEMS
9560569-1	1630-01-009-8475	BRAKE, MULTIPLE DISK	MEGGITT AIRCRAFT BRAKING SYSTEMS
9560685-1	1630-01-500-1903	BRAKE, MULTIPLE DISK	MEGGITT AIRCRAFT BRAKING SYSTEMS
95797-39	6680-01-058-5863	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
95990000-000	6680-01-170-8405	TRANSMITTER, LIQUID QUANTITY	MEGGITT AIRCRAFT BRAKING SYSTEMS
962194-101	1680-01-011-3856	INTERCONNECTING BOX	LOCKHEED MARTIN
967979-101	5821-01-074-9782	CONTROL, COMMUNICATIONS INTERFACE	LOCKHEED MARTIN
975.26.10.108	6680-01-397-6175	GENERATOR, TACHOMETER	PILATUS AIRCRAFT
9-755-2	4820-00-855-8411	VALVE, HYDRAULIC PRESSURE SHUTOFF	PARKER-HANNIFIN
976J198-1	6130-00-958-9796	POWER SUPPLY, DC	HAMILTON SUNDSTRAND
98700000-02	6610-01-395-3510	INDICATOR, VERTICAL VELOCITY	MOOG

### CAPABILITY LIST

98B3900	6685-01-119-6546	THERMOSTAT, FLOW CONTROL	EDEL ENGINEERING DEVELOPMENT
9901-300	2915-00-464-6946	CONTROL, SENSITIVE, SPEED	WOODWARD
9901-301	2915-00-464-6946	CONTROL, SENSITIVE, SPEED	WOODWARD
991M-1	5975-01-060-9629	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
991M-2	-----	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
991N-1	-----	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
991N-2	-----	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
991N-3	-----	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
991N-4	5975-01-037-6649	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
991N-5	5975-01-039-7621	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
992C-2	-----	TRAY, ELECTRONIC, MOUNTING	ROCKWELL COLLINS
992F-1	5975-01-066-9462	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
992L-2	-----	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
993N-1	-----	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
993R-1	5975-01-120-7047	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
993W-1	5975-01-152-1266	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
995G-2	5975-01-242-9549	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
998J-1	5826-01-066-2662	ADAPTER, TACAN, TRANSCEIVER	ROCKWELL COLLINS
999W-2	5820-01-308-2377	ADAPTER, RADIO, HIGH FREQUENCY	ROCKWELL COLLINS
999W-2A	5820-01-210-2008	ADAPTER, RADIO, HIGH FREQUENCY	ROCKWELL COLLINS
9A1100	6620-01-206-5748	INDICATOR, TORQUEMETER	ROCKWELL COLLINS
9A1300	6620-01-242-7236	INDICATOR, TORQUEMETER	TRANSICOIL
9A2100	6620-01-264-8685	INDICATOR, TORQUEMETER	TRANSICOIL
9A324	6680-00-753-8932	INDICATOR, LIQUID QUANTITY	TRANSICOIL
9A375	6685-00-148-8247	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
9A-375	6685-00-148-8247	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
9A400	6685-00-183-0351	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
9A-400	6685-00-183-0351	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
9A550	6685-01-506-8079	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
9A-550	6685-01-506-8079	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
9D-84073-1	7025-MD-036-3550	PANEL DISPLAY	ISS
A06	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ISS
A06T	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ELTA
A-11	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	LONGINES-WITTNAUER WATCH
A13A1	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
A13A2	6645-00-880-5927	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
A-13A-2	6645-01-633-0303	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
A20112-02	1560-01-551-2217	POWER SUPPLY, AIRCRAFT	MACROLINK
A2850-1	6615-00-857-0828	GYROSCOPE, RATE OF TURN	KELLY MANUFACTURING
A2850-5	6615-00-869-0825	GYROSCOPE, RATE OF TURN	KELLY MANUFACTURING
A3-06-2749-1	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
A3-06-2796-8	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
A3-06-2796-9	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
A3-06-2880	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX

## CAPABILITY LIST

A364	5895-00-168-8277	CONVERTER, SIGNAL DATA	LOCKHEED MARTIN
A40A1750	6110-00-500-0391	REGULATORVOLTAGE	WESTINGHOUSE ELECTRIC
A40A1750-2	6110-00-483-9247	REGULATORVOLTAGE	HAMILTON SUNDSTRAND
A4132210015	6610-01-016-1583	ALTIMETER, SERVO CONTROLLED	KOLLSMAN
A41322-10-015	6610-01-035-0673	ALTIMETER, SERVO CONTROLLED	KOLLSMAN
A487-3	1680-00-705-9996	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	KILGORE FLARES
A487-4	1680-00-705-9997	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	KILGORE FLARES
A489-3	1680-00-672-8931	ACTUATOR, ELEVATOR TRIM TAB, ROTARY	LUNDY ELECTRONICS & SYSTEMS
A489-4	1680-00-672-8931	ACTUATOR, ELEVATOR TRIM TAB, ROTARY	LUNDY ELECTRONICS & SYSTEMS
A489-5	1680-01-013-3229	ACTUATOR, ELEVATOR TRIM TAB, ROTARY	LUNDY ELECTRONICS & SYSTEMS
A6881-2C	1680-00-782-5861	SEAT, AIRCRAFT, TROOPS	C. R. DANIELS
A6881-2L	1680-00-913-4840	SEAT, AIRCRAFT, TROOPS	C. R. DANIELS
A6881-2R	1680-00-913-4841	SEAT, AIRCRAFT, TROOPS	C. R. DANIELS
A6897-1L	1680-00-671-3837	SEAT, AIRCRAFT, TROOPS	C. R. DANIELS
A6897-1R	1680-00-671-2101	SEAT, AIRCRAFT, TROOPS	C. R. DANIELS
A81-12	5831-00-872-6835	STATION, INTERCOMMUNICATION SET	ANDREA SYSTEMS
A81-13	5831-00-809-3180	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
A81-16	5831-00-901-3781	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
A81-2	5831-00-809-3180	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
A81-49	5831-00-880-2834	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
A81-4PS	5831-00-808-9796	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
A81-59	5831-00-539-1471	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
A81-6	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
A81-91	5831-00-523-5328	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
A-825	5945-00-522-6886	RELAY, HYBRID	TE CONNECTIVITY
A-846	2925-00-328-0738	RELAY, HYBRID	TE CONNECTIVITY
A-846-1	5945-00-346-3642	RELAY, HYBRID	TE CONNECTIVITY
A-846-2	5945-00-607-3478	RELAY, HYBRID	TE CONNECTIVITY
A-846-5	5945-01-061-2266	RELAY, HYBRID	TE CONNECTIVITY
A-846-6	5945-00-628-6484	RELAY, HYBRID	TE CONNECTIVITY
A-902-3	-----	RELAY, HYBRID	TE CONNECTIVITY
AAF224225	6685-00-514-5061	INDICATOR, PRESSURE	AEROSONIC
AAU-21/A	6610-00-405-6461	ALTIMETER, ENCODER	KOLLSMAN
AAU21A	6610-00-405-6461	ALTIMETER, ENCODER	KOLLSMAN
AAU-27/A	6610-00-160-3226	ALTIMETER PRESSURE	AEROSONIC
AAU27A	6610-00-160-3226	ALTIMETER PRESSURE	AEROSONIC
AAU-28/A	6610-00-459-4578	ALTIMETER, PRESSURE	KOLLSMAN
AAU28A	6610-00-459-4578	ALTIMETER, PRESSURE	KOLLSMAN
AAU-34/A	6610-01-016-1583	ALTIMETER, SERVO CONTROLLED	KOLLSMAN
AAU34A	6610-01-016-1583	ALTIMETER, SERVO CONTROLLED	KOLLSMAN
AAU-3A/A	6685-00-226-5700	ALTIMETER, CABIN	AEROSONIC
ABU11A	6645-00-076-3050	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
ABU-8A/A	6610-01-391-9062	ACCELEROMETER, MECHANICAL	Q.E.D.
ABU8AA	6610-01-391-9062	ACCELEROMETER, MECHANICAL	Q.E.D.

## CAPABILITY LIST

ABU9A	6645-00-588-7611	CLOCK, MECHANICAL, PANEL	WAKMANN WATCH
ABU9A1	6645-00-793-5794	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
AC1061P	6685-00-514-5061	INDICATOR, PRESSURE	STRUBE
AC106-1P	6685-00-514-5061	INDICATOR, PRESSURE	STRUBE
AC106IP	6685-00-514-5061	INDICATOR, PRESSURE	STRUBE
AC25C	6130-01-539-5316	CONDITIONER, CHARGER	MULTI POWER PRODUCTS
ACA3101-1L	1680-00-671-3837	SEAT, AIRCRAFT, TROOPS	ORO MANUFACTURING
ACA3101-1R	1680-00-671-2101	SEAT, AIRCRAFT, TROOPS	ORO MANUFACTURING
ACA3101-20	1680-00-782-5861	SEAT, AIRCRAFT, TROOPS	ORO MANUFACTURING
ACA3101-20L	1680-00-913-4840	SEAT, AIRCRAFT, TROOPS	ORO MANUFACTURING
ACA3101-20R	1680-00-913-4841	SEAT, AIRCRAFT, TROOPS	ORO MANUFACTURING
ADC-81A	-----	AIR DATA COMPUTER	ROCKWELL COLLINS
ADC-82A	6610-01-345-1256	AIR DATA COMPUTER	ROCKWELL COLLINS
ADC-82C	7021-MD-017-8134	AIR DATA COMPUTER	ROCKWELL COLLINS
ADC-82L	-----	AIR DATA COMPUTER	ROCKWELL COLLINS
ADF-60A	-----	RECEIVER, ADF	ROCKWELL COLLINS
ADF-60B	5826-01-125-1023	RECEIVER, ADF	ROCKWELL COLLINS
ADI-55V	-----	INDICATOR, ATTITUDE DIRECTOR	ROCKWELL COLLINS
AE111-002-99	5945-00-628-6484	RELAY, HYBRID	DARE ELECTRONICS
AE149-016-99	1660-01-130-4645	CONTROL BOX, TEMPERATURE	DARE ELECTRONICS
AEU-13/A	6620-01-172-6946	INDICATOR, TORQUEMETER	PARKER-HANNIFIN
AF200	6685-00-514-5061	INDICATOR, PRESSURE	AEROSONIC
AF200A	6685-00-514-5061	INDICATOR, PRESSURE	AEROSONIC
AF200AW	6685-00-514-5061	INDICATOR, PRESSURE	AEROSONIC
AF200AW1	6685-00-514-5061	INDICATOR, PRESSURE	AEROSONIC
AHC-85	5895-01-289-5799	COMPUTER, HEADING	ROCKWELL COLLINS
ALT-55B	5841-01-272-2715	ALTIMETER SET, ELECTRONIC	ROCKWELL COLLINS
ALU-8521	2925-01-482-5966	ALTERNATOR, CURRENT	HARTZELL ENGINE TECHNOLOGIES
ALU-8521LS	2925-MD-003-3416	ALTERNATOR, CURRENT (24V 70A)	HARTZELL ENGINE TECHNOLOGIES
ALU-8521R	2925-01-482-5967	ALTERNATOR, CURRENT	HARTZELL ENGINE TECHNOLOGIES
ALU-8521RS	2925-MD-003-3416	ALTERNATOR, CURRENT	HARTZELL ENGINE TECHNOLOGIES
AM1963	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
AM-1963	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
AM1963/AIC	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
AM-1963/AIC	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
AM1963/AIC18	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
AM1963/AIC-18	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
AM-1963/AIC-18	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
AM1963AIC	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
AM1963AIC18	5996-00-623-2912	AMPLIFIER, INTERCOMMUNICATION SET	ANDREA SYSTEMS
AM-203/ARA-19	5996-00-546-4902	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS
AM-203/ARA-19NA	5996-00-610-2055	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS
AM-203A/ARA-19	5996-00-556-2479	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS
AM203AARA19	5996-00-556-2479	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS

## CAPABILITY LIST

AM203ARA19	5996-00-546-4902	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS
AM203ARA19NA	5996-00-610-2055	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS
AM-203B/ARA-19	5996-00-505-1016	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS
AM203BARA19	5996-00-505-1016	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS
AM-203C/ARA-19	5996-00-507-1381	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS
AM203CARA19	5996-00-507-1381	AMPLIFIER, ELECTRONIC CONTROL	JOINT ELECTRONICS
AM2B6-6	2910-01-143-0195	PUMP, FUEL, ELECTRICAL	PARKER HANNIFIN
AM-4535/ASQ-81(V)	5895-00-168-3590	AMPLIFIER, POWER SUPPLY	RAYTHEON
AM4923/A	5996-00-358-1724	AMPLIFIER, ELECTRONIC CONTROL	KEARFOTT
AM-4923/A	5996-00-358-1724	AMPLIFIER, ELECTRONIC CONTROL	KEARFOTT
AM4923A	5996-00-358-1724	AMPLIFIER, ELECTRONIC CONTROL	KEARFOTT
AM-944/AIC-13	5996-00-543-1423	AMPLIFIER, AUDIO FREQUENCY	RANDAM ELECTRONICS
AN/AIC-13	5831-00-116-6502	PUBLIC ADDRESS SET AN/AIC-13	RANDAM ELECTRONICS
AN/APN-141(V)	5841-00-192-2831	ALTIMETER SET, ELECTRONIC	ALLIED SIGNAL
AN/APQ107	5841-00-900-8081	WARNING SET, RADIO ALTIMETER (RAWS)	PRECISION AEROSPACE
AN/APX-72	5841-00-089-7179	TRANSCEIVER, RADAR	RAYTHEON
AN/ARC159	5821-00-100-7931	TRANSCEIVER, UHF, RADIO	ROCKWELL COLLINS
AN/PRC-90	5820-00-782-5308	RADIO SET	GENERAL DYNAMICS MISSION SYSTEMS
AN3089-10	5850-00-729-1595	LIGHT, SIGNAL	GRIMES AEROSPACE
AN3203V30	6625-00-235-4782	VOLTMETER, D/C	WESTON ELECTRICAL INSTRUMENT
AN5547-2	-----	GENERATOR, TACHOMETER	AMETEK
AN5732-1	-----	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
AN5733-1	6605-00-239-8206	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
AN5733-2	6605-00-239-8205	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
AN5733T2	6605-00-663-8514	COMPASS, GYROMAGNETIC	AIRPATH
AN5743-1A	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
AN5743T1A	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
AN5760L4B	6610-00-663-7740	ALTIMETER, PRESSURE	KOLLSMAN
AN5766-2	6605-00-514-5746	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
AN5766-4	6605-00-526-7252	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
AN5766T4	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
AN5773-1	6620-00-189-2381	INDICATOR, TRIPLE	LIFTEC
AN5787-1	6610-00-530-0961	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
AN5791-1	6685-00-557-0372	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
AN5839-1	6695-00-628-8990	INDICATOR, POSITION	AMETEK
AN5839-2	6695-00-628-8990	INDICATOR, POSITION	AMETEK
AN6011-2	6685-00-854-8362	INDICATOR, OXYGEN, PRESSURE	AMETEK
AN6281-8-10	1650-00-815-2499	FUSE, HYDRAULIC SYSTEM	PARKER-HANNIFIN
ANT-1T	-----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
ANT-1TB	-----	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
ANT-1TB(M)	-----	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
ANT-60A	-----	ANTENNA, ADF	ROCKWELL COLLINS
ANT-60B	-----	ANTENNA, ADF	ROCKWELL COLLINS
APP-85	-----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS

## CAPABILITY LIST

APP-85A	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
APP-85D	----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
AQU-2/A	6605-00-034-2500	INDICATOR, HORIZONTAL SITUATION	ASTRONAUTICS
AQU-3/A	6605-00-815-1903	COMPASS, MAGNETIC	G T A
ART-2000	----	RADAR, WEATHER	HONEYWELL
ARU-2B/A	6610-00-068-3464	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
ARU-42/A-1	6610-00-200-8832	INDICATOR, VERTICAL VELOCITY	L3 AVIATION PRODUCTS
ARU-50/A	6610-01-092-9846	INDICATOR, ATTITUDE DIRECTOR	MOOG
AS-1199B/APN-59	5985-01-282-7892	ANTENNA, RADAR	NORTHROP GRUMMAN SYSTEMS
AS1199BAPN59	5985-01-282-7892	ANTENNA, RADAR	NORTHROP GRUMMAN SYSTEMS
AS-313A/ARN-6	5985-00-217-0463	ANTENNA, LOOP	KEARFOTT
AS313AARN6	5985-00-217-0463	ANTENNA, LOOP	KEARFOTT
AS-313B/ARN-6	5985-00-149-1451	ANTENNA, LOOP	KEARFOTT
AS313BARN6	5985-00-149-1451	ANTENNA, LOOP	KEARFOTT
AS-3440/APS-133V	5985-01-089-0737	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
AS-3440A/APS-133(V)	5985-01-194-2321	ANTENNA, WEATHER, RADAR	HONEYWELL INTERNATIONAL
AS5604	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
AT-256A/ARC	5985-00-217-0457	ANTENNA, UHF, BLADE	EDO
AT256AARC	5985-01-522-7880	ANTENNA, UHF, BLADE	EDO
AT-740/A	5985-00-673-5831	ANTENNA, DME/TACAN, BEACON	L3 TECHNOLOGIES
AT741B/A	5985-00-106-0906	ANTENNA	EDO
AT-741B/A	5985-00-106-0906	ANTENNA	EDO
AT741B/B	5985-00-106-0906	ANTENNA	EDO
AT-741B/B	5985-00-106-0906	ANTENNA	EDO
ATC2000	5895-12-322-8156	TRANSCEIVER, IFF	BECKER AVIONICS
AV16B1450D	2915-00-632-7932	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16B-1450D	2915-00-632-7932	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16B1467D	2915-00-632-7932	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16B-1467D	2915-00-632-7932	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16B1824	2915-00-983-9306	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16B-1824	2915-00-983-9306	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16B1873C	4810-01-015-1979	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16B-1873C	4810-01-015-1979	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16B1874D	4810-01-015-1980	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16B-1874D	4810-01-015-1980	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16E1131B	2915-00-887-1904	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV16E-1131B	2915-00-887-1904	VALVE, FUEL SYSTEM, GATE	ITT AEROSPACE CONTROLS
AV19E1003-1	4810-01-123-7254	VALVE, FLUID PRESSURE, REGULATING	ITT AEROSPACE CONTROLS
AV8A	5975-01-242-9549	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
AV8C	5975-01-256-7216	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
AVK-13/A24G-9	6610-00-991-0770	INDICATOR, TRUE AIR SPEED	HONEYWELL INTERNATIONAL
AVU-8B/A	6610-01-109-4841	INDICATOR, MACH AND TRUE AIR SPEED	CARLETON LIFE SUPPORT SYSTEMS
AVU-8C/A	6610-01-263-2409	INDICATOR, AIRSPEED/MACH	AEROSONIC
AW-1-7/8-27-E	6685-00-854-8362	INDICATOR, OXYGEN, PRESSURE	AMETEK

**CAPABILITY LIST**

AW-1-7/8-27-E4	6685-00-854-8362	INDICATOR, OXYGEN, PRESSURE	AMETEK
AW17-8-14EL	6685-00-726-2538	GAGE, PRESSURE, DIAL INDICATING	AMETEK
AW-1-7-8-27-E	6685-00-854-8362	INDICATOR, OXYGEN, PRESSURE	AMETEK
AW-1-7-8-27-E4	6685-00-854-8362	INDICATOR, OXYGEN, PRESSURE	AMETEK
AW1833AB01	6685-00-514-5061	INDICATOR, PRESSURE	AMETEK
AW1833AC01	6685-00-514-5061	INDICATOR, PRESSURE	AMETEK
AW2017AC07	6685-00-387-4325	GAGE, PRESSURE, DIAL INDICATING	AMETEK
AW2-33A1	6685-00-887-6812	GAGE, DIFFERENTIAL, DIAL INDICATING	AMETEK
AXIMAX3-1140YH	4140-01-041-4886	FAN, VANE, AXIAL	ROTRON
AXIMAX3-1140YS	4140-01-041-4886	FAN, VANE, AXIAL	ROTRON
AXIMMAX3-1140YS	4140-01-041-4886	FAN, VANE, AXIAL	AMETEK ROTRON
AYLF50677	1660-00-595-7773	SENSOR, CABIN TEMPERATURE	GE AVIATION SYSTEMS
AYLF50679	1660-00-583-7106	SENSOR, DUCT, OVERHEAT	GE AVIATION SYSTEMS
B-00368-5	6110-01-217-7932	CONTROL, ALTERNATOR, VOLTAGE	LAMAR TECHNOLOGIES
B123B	5945-00-675-7413	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B-123B	5945-00-675-7413	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B123J	5945-00-675-7413	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B-123J	5945-00-675-7413	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B123JA	5945-01-250-9675	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B-123JA	5945-01-250-9675	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B-124C		RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B-124K	5945-00-675-7412	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B13	-----	CLOCK, MECHANICAL, PANEL	THOMMEN AIRCRAFT EQUIPMENT
B-16	-----	COMPASS, MAGNETIC, MOUNTED	WAKMANN WATCH
B-17	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
B18	-----	CLOCK, MECHANICAL, PANEL	THOMMEN AIRCRAFT EQUIPMENT
B2516B10	5850-00-729-1595	LIGHT, SIGNAL	GRIMES AEROSPACE
B-2516B-10	5850-00-729-1595	LIGHT, SIGNAL	GRIMES AEROSPACE
B2888-01	6615-00-857-0828	GYROSCOPE, RATE OF TURN	KELLY MANUFACTURING
B2888-02	6615-00-869-0825	GYROSCOPE, RATE OF TURN	KELLY MANUFACTURING
B2888-1	6615-00-857-0828	GYROSCOPE, RATE OF TURN	KELLY MANUFACTURING
B2888-2	6615-00-869-0825	GYROSCOPE, RATE OF TURN	KELLY MANUFACTURING
B4423210101	6610-00-459-4578	ALTIMETER, PRESSURE	LOCKHEED MARTIN
B4515210102	-----	ALTIMETER, PRESSURE	KOLLSMAN
B4515210103	6610-01-038-2122	ALTIMETER, PRESSURE	KOLLSMAN
B459	5945-01-384-4323	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B-459	5945-01-384-4323	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B459A	5945-01-250-9675	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B-459A	5945-01-250-9675	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B-460	5945-00-675-7412	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
B549-1	6610-00-515-4600	INDICATOR, FLAP, POSITION	SIMMONDS PRECISION PRODUCTS
B709-1	6620-00-075-5861	INDICATOR, TORQUEMETER	SIMMONDS PRECISION PRODUCTS
B709-4	6620-00-928-0216	INDICATOR, TORQUEMETER	SIMMONDS PRECISION PRODUCTS
B709-7	6620-00-151-5363	INDICATOR, TORQUEMETER	SIMMONDS PRECISION PRODUCTS



## CAPABILITY LIST

B709-7A	6620-00-151-5363	INDICATOR, TORQUEMETER	SIMMONDS PRECISION PRODUCTS
B709-7J	6620-00-148-7313	INDICATOR, TORQUEMETER	SIMMONDS PRECISION PRODUCTS
BB-620/URT-26(V)	6130-00-927-0415	BATTERY, POWER SUPPLY	DRS TECHNOLOGIES
BTI600-102A-1	-----	INDICATOR, BATTERY TEMPERATURE	TRAMM
BTI600-105A	6625-01-314-6239	INDICATOR, BATTERY TEMPERATURE	TRAMM
BTI600-200A	5996-01-304-3714	INDICATOR, BATTERY TEMPERATURE	TRAMM
BTI600-200A-1	6685-01-473-8187	INDICATOR, BATTERY TEMPERATURE	TRAMM
BTI600-202	6685-01-307-2580	INDICATOR, BATTERY TEMPERATURE	TRAMM
BTI600-202M	6685-01-356-7401	INDICATOR, BATTERY TEMPERATURE	TRAMM
BTI600-202M-1	6685-01-356-7401	INDICATOR, BATTERY TEMPERATURE	TRAMM
BTI600-2A	6685-01-097-6324	INDICATOR, BATTERY TEMPERATURE	TRAMM
BTI600-3A	6685-01-157-0423	INDICATOR, BATTERY TEMPERATURE	TRAMM
BTI600-4A	6685-01-204-8987	INDICATOR, BATTERY TEMPERATURE	TRAMM
BYLB50494-10	4810-01-082-7207	VALVE, BUTTERFLY	GE AVIATION SYSTEMS
BYLB50494-11	4810-01-152-5662	VALVE, BUTTERFLY	GE AVIATION SYSTEMS
BYLB50495	4810-01-082-7208	VALVE, BUTTERFLY	GE AVIATION SYSTEMS
BYLB50495-1	4810-01-142-8229	VALVE, BUTTERFLY	GE AVIATION SYSTEMS
BYLB50496	4810-01-085-7038	VALVE, BUTTERFLY	GE AVIATION SYSTEMS
BYLB51044	4810-01-218-2643	VALVE, TEMPERATURE CONTROL, BUTTERFLY	GE AVIATION SYSTEMS
BYLB51045	4810-01-219-3417	VALVE, TEMPERATURE CONTROL, BUTTERFLY	GE AVIATION SYSTEMS
BYLB7520	4810-00-566-0332	VALVE, CROSS, SOLENOID	GE AVIATION SYSTEMS
BYLB7520-1	4810-01-646-9761	VALVE, CROSS, SOLENOID	GE AVIATION SYSTEMS
C-10056/A	5895-01-012-1920	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
C-10057/A	5895-01-012-7084	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
C-10058/A	5895-01-012-7085	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
C10060/ARN	5895-01-079-7568	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
C-10061/A	5895-01-014-3656	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
C-10062/A	5895-01-018-3511	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
C-11840/ARN-118(V)	5826-01-251-1148	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
C-149/ARN-6	5895-00-247-3004	CONTROL BOX, RECEIVER	BAE SYSTEMS
C-149A/ARN-6	5895-00-228-3133	CONTROL BOX, RECEIVER	RAYTHEON
C149AARN6	5895-00-228-3133	CONTROL BOX, RECEIVER	RAYTHEON
C149ARN6	5895-00-247-3004	CONTROL BOX, RECEIVER	BAE SYSTEMS
C-1513/A	5826-00-535-6629	CONTROL PANEL, DIRECTION FINDER	PHILIPS ELECTRONIC INSTRUMENTS
C-1513/ARN-6	5826-00-535-6629	CONTROL PANEL, DIRECTION FINDER	PHILIPS ELECTRONIC INSTRUMENTS
C1513A	5826-00-535-6629	CONTROL PANEL, DIRECTION FINDER	PHILIPS ELECTRONIC INSTRUMENTS
C-1614/AIC13	5831-00-106-2733	CONTROL, PUBLIC ADDRESS SET	RANDAM ELECTRONICS
C19A513	4140-00-564-5980	FAN, CENTRIFUGAL	GLOBE MOTORS
C2105/AIC18	5831-00-872-6835	STATION, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C-2105/AIC-18	5831-00-872-6835	STATION, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C2105AIC18	5831-00-872-6835	STATION, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C2106/AIC18	5831-00-809-3180	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C2106/AIC-18	5831-00-809-3180	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C-2106/AIC-18	5831-00-809-3180	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS



## CAPABILITY LIST

C2300	6605-00-239-8209	COMPASS, GYROMAGNETIC	AIRPATH
C2300D	6605-00-239-8210	COMPASS, GYROMAGNETIC	AIRPATH
C2323/AIC	5831-00-808-9796	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C-2323/AIC	5831-00-808-9796	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C2323A/AIC	5831-00-901-3781	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C-2323A/AIC	5831-00-901-3781	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C2323A81-59-AIC	5831-00-539-1471	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C2323AAIC	5831-00-901-3781	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C2323AIC	5831-00-808-9796	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C2350DL4CM	6605-01-141-7035	COMPASS, GYROMAGNETIC	AIRPATH
C2350L4-M23	6605-01-141-7035	COMPASS, GYROMAGNETIC	AIRPATH
C25C	6130-01-539-5316	CONDITIONER, CHARGER	LAMAR TECHNOLOGIES
C2A	6605-00-526-7251	COMPASS, MAGNETIC, MOUNTED	AMETEK
C2C	6605-00-857-9978	COMPASS, MAGNETIC, MOUNTED	AMETEK
C3236K13	6680-00-920-9213	GENERATOR, TACHOMETER	AMETEK
C3435210006	6610-01-046-4844	INDICATOR, MACH AND TRUE AIR SPEED	KOLLSMAN
C3814/ARC89(V)	5831-00-884-3604	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C-3814/ARC-89(V)	5831-00-884-3604	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C3814ARC89V	5831-00-884-3604	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C3815/ARC89(V)	5831-00-884-3611	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C-3815/ARC-89(V)	5831-00-884-3611	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C3815ARC89V	5831-00-884-3611	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C3942(P)/AIC18	5831-00-523-5328	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C-3942(P)/AIC-18	5831-00-523-5328	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C3942PAIC18	5831-00-523-5328	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C3943(P)/AIC	5895-00-060-9857	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C-3943(P)/AIC	5895-00-060-9857	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C3943PAIC	5895-00-060-9857	CONTROL, INTERCOMMUNICATION SET	ANDREA SYSTEMS
C406-N	5821-01-561-9503	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
C406-NHM	-----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	ARTEX
C4154210003	6610-00-405-6461	ALTIMETER, ENCODER	KOLLSMAN
C52C22	4810-00-670-1111	VALVE, BUTTERFLY	GRIMES AEROSPACE
C6567/AIC25	5831-00-880-2834	CONTROL, INTERCOMMUNICATION SET	ANDREA ELECTRONICS
C-6567/AIC-25	5831-00-880-2834	CONTROL, INTERCOMMUNICATION SET	ANDREA ELECTRONICS
C661015-0102	6610-MD-016-3666	ACCELEROMETER, MECHANICAL	CESSNA
C7041-1	1680-00-088-6102	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
C7041-2	1680-00-981-7652	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	CEF INDUSTRIES
C7088-1A	1680-00-789-9345	GEAR BOX ASSYFLAP DRIVEMOTOR DRIVEN	CEF INDUSTRIES
C7157	5831-00-078-4971	CONTROL, INTERCOMMUNICATION SET	CEF INDUSTRIES
C-9603/A	5895-01-012-1919	CONTROL PANEL, TACAN, TRANSCEIVER	ROCKWELL COLLINS
CB1000	6605-00-239-8204	COMPASS, GYROMAGNETIC	AIRPATH
CB1100	6605-00-663-8514	COMPASS, GYROMAGNETIC	AIRPATH
CB2100	6605-00-663-8526	COMPASS, GYROMAGNETIC	AIRPATH
CB2100-2	6605-00-557-5673	COMPASS, GYROMAGNETIC	AIRPATH

## CAPABILITY LIST

CB2100-3	6605-00-663-5621	COMPASS, GYROMAGNETIC	AIRPATH
CB2100-4	6605-00-551-8187	COMPASS, GYROMAGNETIC	AIRPATH
CB2100M	6605-00-663-5619	COMPASS, GYROMAGNETIC	AIRPATH
CB2100T4	6605-00-663-5637	COMPASS, GYROMAGNETIC	AIRPATH
CB-2100-T4	6605-00-551-8187	COMPASS, GYROMAGNETIC	AIRPATH
CB2100T4A	6605-00-551-8187	COMPASS, GYROMAGNETIC	AIRPATH
CB-2100-T4A	6605-01-647-9175	COMPASS, GYROMAGNETIC	AIRPATH
CB-2100-T4-A	6605-00-551-8187	COMPASS, GYROMAGNETIC	AIRPATH
CB-2125-5	6605-00-815-1903	COMPASS, MAGNETIC	G T A
CB2125T5	6605-00-815-1903	COMPASS, MAGNETIC	G T A
CG12313	5930-00-965-7111	SWITCH, FUEL FILTER, PRESSURE	UNISON INDUSTRIES
CG12313A	5930-00-965-7111	SWITCH, FUEL FILTER, PRESSURE	UNISON INDUSTRIES
CG12313B	5930-00-965-7111	SWITCH, FUEL FILTER, PRESSURE	UNISON INDUSTRIES
CG12313C	5930-00-965-7111	SWITCH, FUEL FILTER, PRESSURE	UNISON INDUSTRIES
CG12313D	5930-00-965-7111	SWITCH, FUEL FILTER, PRESSURE	UNISON INDUSTRIES
CG12313E	5930-00-965-7111	SWITCH, FUEL FILTER, PRESSURE	UNISON INDUSTRIES
CG12313F	5930-00-965-7111	SWITCH, FUEL FILTER, PRESSURE	UNISON INDUSTRIES
CG12313G	5930-00-965-7111	SWITCH, FUEL FILTER, PRESSURE	UNISON INDUSTRIES
CH-26	5945-00-728-3191	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
CLABU9A1	6645-00-793-5794	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
CN-1386/AJB-3A	6615-00-181-1879	GYROSCOPE, SWITCHING RATE	GE AVIATION SYSTEMS
CN-495A/AJB-3	6615-00-880-5033	GYROSCOPE, SWITCHING RATE	GE AVIATION SYSTEMS
CP1AAU3A12	6685-00-226-5700	ALTIMETER, CABIN	AEROSONIC
CP2323AD01	5821-MD-038-6393	CONTROL PANEL, AUDIO	TEAM
CP2367L02	5831-MD-010-3134	PANEL, AUDIO, SELECTOR	TEAM
CPK-28/A24G-9	6610-00-759-7170	COMPUTER, TRUE AIR SPEED	HONEYWELL INTERNATIONAL
CPK-281A24G-9	6610-00-759-7170	COMPUTER, TRUE AIR SPEED	HONEYWELL INTERNATIONAL
CPU-65/A	6610-00-763-2415	COMPUTER, FLIGHT DIRECTOR	ROCKWELL COLLINS
CU1658A	5985-00-852-0457	COUPLER, ANTENNA	ROCKWELL COLLINS
CU1669GRC	5985-00-939-7495	COUPLER, ANTENNA	ROCKWELL COLLINS
CU-2275(V)2	5985-01-151-5848	COUPLER, ANTENNA	ROCKWELL COLLINS
CU-65/ARN-6	5826-00-521-0571	COUPLING, ANTENNA	RAYTHEON
CU-65A/ARN-6	5826-00-342-1964	COUPLING, ANTENNA	RAYTHEON
CU65AARN6	5826-00-342-1964	COUPLING, ANTENNA	RAYTHEON
CU65ARN6	5826-00-521-0571	COUPLING, ANTENNA	RAYTHEON
CYLB51055	4820-00-006-5087	VALVE, ENGINE, BLEED AIR, CHECK	GE AVIATION SYSTEMS
D-12	-----	COMPASS, MAGNETIC, MOUNTED	KILGORE
D125140HB-5	6105-00-683-0353	MOTOR, DIRECT CURRENT	HONEYWELL AEROSPATIALE
D125140HB-5A	6105-00-683-0353	MOTOR, DIRECT CURRENT	KILGORE
D3851-56280	6610-00-467-7152	TRANSMITTER, ANGLE OF ATTACK	RAYTHEON
D424D1	5826-00-611-0951	MOUNTING BASE	AEROSONIC
D5725	3010-00-635-4730	POWER UNIT & GEARCASE, LIGHT	SIMMONDS PRECISION PRODUCTS
DDA-42	5998-01-308-3066	ADAPTER, DME	ROCKWELL COLLINS
DL1326M11	1680-00-617-9128	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	GRIMES AEROSPACE

## CAPABILITY LIST

DL1326M39-4	1680-00-877-6385	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	SIMMONDS PRECISION PRODUCTS
DL1326M39-5	1680-01-181-3218	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	SIMMONDS PRECISION PRODUCTS
DL1326M40-1	1680-01-181-1374	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	SIMMONDS PRECISION PRODUCTS
DL1326M40-4	1680-01-181-1374	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	SIMMONDS PRECISION PRODUCTS
DME-42	5895-01-304-3814	INTERROGATOR SET	ROCKWELL COLLINS
DMN4-33-3	5985-01-433-9503	ANTENNA	EDO
DMNI50-2-2	5985-01-015-0737	ANTENNA	EDO
DMNI50-4-2	5985-01-324-6246	ANTENNA	EDO
DPU-86R	5821-01-333-9238	PROCESSOR UNIT, DISPLAY	ROCKWELL COLLINS
DST29-1	6685-00-066-4581	INDICATOR, THERMOCOUPLE, TEMPERATURE	CARLETON LIFE SUPPORT SYSTEMS
DST29-2	6685-00-066-4581	INDICATOR, THERMOCOUPLE, TEMPERATURE	CARLETON LIFE SUPPORT SYSTEMS
DST29-3	6685-00-933-7911	INDICATOR, THERMOCOUPLE, TEMPERATURE	CARLETON LIFE SUPPORT SYSTEMS
DYLZ3990		VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ3990-1	1660-00-672-4247	VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ3990-2	1660-00-832-3076	VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ3990-3	1660-00-690-6150	VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ3990A		VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ3991		VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ3991-1	4810-00-525-2445	VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ3991-2	4810-00-522-4595	VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ3991-3	4810-00-682-5374	VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ3991A		VALVE, ENVIRONMENTAL AIR ,FLOW CONTROL	GE AVIATION SYSTEMS
DYLZ5858-1	1660-00-818-7701	VALVE, BUTTERFLY	GE AVIATION
E0724104003	6610-00-585-1524	INDICATOR, AIR SPEED	KOLLSMAN
E07241-04-003	6610-00-585-1524	INDICATOR, AIR SPEED	KOLLSMAN
E0724110004	6610-01-393-1139	INDICATOR, AIR SPEED	KOLLSMAN
E07241-10-004	6610-01-393-1139	INDICATOR, AIR SPEED	KOLLSMAN
E0724310002	6610-00-834-0713	INDICATOR, AIR SPEED	KOLLSMAN
E07243-10-002	6610-00-834-0713	INDICATOR, AIR SPEED	KOLLSMAN
E-29	6620-00-526-5003	INDICATOR, ELECTRICAL TACHOMETER	KOLLSMAN
E-323E	5945-00-628-6484	RELAY, HYBRID	TE CONNECTIVITY
E-323E-1	5945-00-628-6484	RELAY, HYBRID	TE CONNECTIVITY
E-323E-1A	5945-00-628-6484	RELAY, HYBRID	TE CONNECTIVITY
E-384	5945-00-628-6484	RELAY, HYBRID	TE CONNECTIVITY
E424B10	5826-00-969-9542	MOUNTING BASE ASSEMBLY	BAE SYSTEMS
E424C1	5895-00-247-3004	CONTROL BOX, RECEIVER	BAE SYSTEMS
E424E2	5826-00-505-3580	INDICATOR, BEARING	FAIRCHILD
E830023	6625-00-668-7818	METER, ELECTRICAL FREQUENCY	LOCKHEED MARTIN
EA100ANH144	6680-00-580-9557	INDICATOR, ENGINE OIL, QUANTITY	SIMMONDS PRECISION PRODUCTS
EA1045-037-2B	4320-00-949-6842	PUMP, HYDRAULIC, AUXILIARY	EATON AEROSPACE
EA1065A-1615	6680-00-472-6348	TRANSMITTER, OIL QUANTITY	SIMMONDS PRECISION PRODUCTS
EA1065AW1827	6680-00-740-7044	TRANSMITTER, OIL QUANTITY	STRUBE
EA1065AW-1827	6680-00-740-7044	TRANSMITTER, OIL QUANTITY	STRUBE
EA1065AW2315	6680-01-419-1995	TRANSMITTER, OIL QUANTITY	STRUBE

## CAPABILITY LIST

EA1065AW-2315	6680-01-419-1995	TRANSMITTER, OIL QUANTITY	STRUBE
EA1068A-2313	----	TRANSMITTER, OIL QUANTITY	STRUBE
EA1068A-2352	6680-00-319-1723	TRANSMITTER, OIL QUANTITY	STRUBE
EA321-16	6610-00-515-4600	INDICATOR, FLAP, POSITION	SIMMONDS PRECISION PRODUCTS
EA321-2	6610-00-515-4600	INDICATOR, FLAP, POSITION	SIMMONDS PRECISION PRODUCTS
EA326-8	6610-00-580-9690	INDICATOR, RUDDER, POSITION	SIMMONDS PRECISION PRODUCTS
EA573-1	6610-00-530-0961	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
EA573A1	6610-00-530-0961	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
EA573A-1	6610-00-530-0961	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
EA573A11	6610-00-530-0961	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
EA573A6A	6610-00-800-5569	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
EA573C1A	6610-00-526-8232	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
EA573C2A	6610-00-526-8231	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
EA573D1	6610-00-678-9887	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
EA7722856	6680-00-869-9811	COMPENSATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
EA7722857	6680-00-869-9812	COMPENSATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
EA7722858	6680-00-869-9813	COMPENSATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
EA7722859	6680-00-869-9814	COMPENSATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
ECU-23/A	6130-00-958-9796	POWER SUPPLY, DC	HAMILTON SUNDSTRAND
ED101	5826-00-535-6629	CONTROL PANEL, DIRECTION FINDER	PHILIPS ELECTRONIC INSTRUMENTS
EE0141-X	6130-MD-013-7377	BATTERY, EMERGENCY	SFENA (THALES AVIONICS)
EFD-85	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
EFD-85A	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
EFD-85M	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
EFD-86	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
EFD-86A	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
EFD-86S	----	DISPLAY, OPTOELECTRONIC, EADI/EHSI	ROCKWELL COLLINS
EFU-4/A	6620-00-581-5102	INDICATOR, FUEL FLOW	AMETEK
EHU-15A	----	INDICATOR, THERMOCOUPLE, TEMPERATURE	CARLETON LIFE SUPPORT SYSTEMS
EHU-15A/A	----	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
EHU15AA	----	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
EHU-15AA	----	INDICATOR, THERMOCOUPLE, TEMPERATURE	CARLETON LIFE SUPPORT SYSTEMS
EKCC18043	6685-00-692-8341	INDICATOR, ANTI-ICING	JEWELL INSTRUMENTS
EM8000	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8000-1	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8000-2	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8000-3	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8000-4	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8000-5	6680-00-815-1905	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8001	6680-01-308-3311	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8001-1	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8001-2	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8001-3	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8001-4	6680-01-394-1114	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES

**CAPABILITY LIST**

EM8001-5	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
EM8002	----	GENERATOR, TACHOMETER	ELECTROMECH TECHNOLOGIES
ERU-22/A	6620-01-060-3086	INDICATOR, ELECTRICAL, TACHOMETER	PARKER-HANNIFIN
ET-B4	----	AMPLIFIER, ELECTRONIC TEMPERATURE DATUM	HONEYWELL INTERNATIONAL
F0739310067	6610-00-929-1614	INDICATOR, AIR SPEED	KOLLSMAN
F1559710003	6620-00-543-2534	INDICATOR, ELECTRICAL TACHOMETER	KOLLSMAN
F15597-10-003	6620-00-543-2534	INDICATOR, ELECTRICAL TACHOMETER	KOLLSMAN
F60W0232	2915-00-349-2719	VALVE, FLOAT, FUEL TANK	PARKER HANNIFIN
F60W0232M1	2915-00-574-3227	VALVE, FLOAT, FUEL TANK	PARKER HANNIFIN
F60W0233	2915-00-357-2499	VALVE, FLOAT, FUEL TANK	PARKER HANNIFIN
F60W0233M1	2915-00-581-0477	VALVE, FLOAT, FUEL TANK	PARKER HANNIFIN
FCC-86D	6605-15-191-3981	COMPUTER, AP/FD	ROCKWELL COLLINS
FDU-70	----	VALVE, FLUX DETECTOR	ROCKWELL COLLINS
FG220A100	----	COMPENSATOR, FUEL QUANTITY	SIMMONDS PRECISION PRODUCTS
FG220A101	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A102	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A103	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A104	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A105	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A106	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A107	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A108	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A109	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A110	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A111	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A112	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A113	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A114	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A115	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A155	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A156	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A175	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A176	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A177	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A178	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A179	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A192	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A193	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A194	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A195	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A196	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A197	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A198	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A199	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL

**CAPABILITY LIST**

FG220A200	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A201	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A202	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A203	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A204	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A205	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A206	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A207	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A208	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A209	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A210	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A211	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A212	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A213	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A214	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A215	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A216	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A60	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A61	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A62	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A63	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A64	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A65	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A66	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A67	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A68	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A75	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A76	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A83	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A95	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A96	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A97	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A98	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG220A99	----	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG250A42	6680-00-089-5300	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG250A43	6680-00-089-5299	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG250A44	6680-00-089-5298	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG250A51	6680-00-968-3277	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG250A53	6680-00-968-3281	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG250A6	6680-00-585-0827	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG250A7	6680-00-585-0828	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG250A8	6680-00-968-3281	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG450A51	6680-01-059-3387	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
FG450A53	6680-01-064-3231	COMPENSATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL

**CAPABILITY LIST**

FG6F1	6680-01-067-4552	COMPENSATOR, LIQUID QUANTITY GAGE	HONEYWELL INTERNATIONAL
FGA220A237	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A238	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A239	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A240	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A241	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A242	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A243	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A244	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A245	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A246	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A247	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A248	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A249	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A250	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A251	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A252	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A253	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A254	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A255	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A256	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA220A257	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A237	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A238	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A239	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A240	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A241	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A242	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A243	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A244	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A245	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A246	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A247	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A248	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A249	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A250	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A251	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A252	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A253	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A254	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A255	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A256	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A257	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL
FGA430A259	----	COMPENSATOR, FUEL QUANITY	HONEYWELL INTERNATIONAL



### CAPABILITY LIST

FLDXF20307A	6625-01-412-3365	METER, ELECTRICAL FREQUENCY	HONEYWELL INTERNATIONAL
G-1152-B460-C	5945-00-675-7412	RELAY, ELECTROMAGNETIC	TE CONNECTIVITY
G4020	6220-01-362-0390	CONTROL, ATC	GABLES ENGINEERING
G-5400-1	6220-00-299-4621	LIGHT, LANDING, AIRCRAFT	GRIMES AEROSPACE
G-5400-2	-----	LIGHT, LANDING, AIRCRAFT	GRIMES AEROSPACE
G-5400-3	6220-00-299-4621	LIGHT, LANDING, AIRCRAFT	GRIMES AEROSPACE
G-5400-4	-----	LIGHT, LANDING, AIRCRAFT	GRIMES AEROSPACE
G-5400-5	6220-00-893-8777	LIGHT, LANDING, AIRCRAFT	GRIMES AEROSPACE
G-6965-13	6220-00-548-0008	LIGHT, WARNING, NAVIGATION	GRIMES AEROSPACE
G-6965-15	6220-00-548-0008	LIGHT, WARNING, NAVIGATION	GRIMES AEROSPACE
G-6965-22	6220-00-346-6820	LIGHT, WARNING, NAVIGATION	GRIMES AEROSPACE
G-6965-34	6220-00-548-0008	LIGHT, WARNING, NAVIGATION	GRIMES AEROSPACE
G-6965-8	6220-00-421-9109	LIGHT, WARNING, NAVIGATION	GRIMES AEROSPACE
G-6965-9	6220-00-548-0008	LIGHT, WARNING, NAVIGATION	GRIMES AEROSPACE
G7300-02	1680-01-594-5284	CONTROL PANEL, ELECTRICAL-ELECTRONIC	ACSS
G8400A41-24L	-----	LIGHT, WARNING, ROTATING	GRIMES AEROSPACE
G8895-1	6220-00-858-0915	LIGHT, AIRCRAFT, LANDING	GRIMES AEROSPACE
G-8895-1	6220-00-858-0915	LIGHT, AIRCRAFT, LANDING	GRIMES AEROSPACE
GA3090MS	6610-00-111-3159	INDICATOR, VERTICAL VELOCITY	AEROSONIC
GG2479AA01	6615-00-169-1564	GYROSCOPE, RATE OF TURN	HONEYWELL INTERNATIONAL
GG2479AB01	6615-00-137-6038	GYROSCOPE, RATE OF TURN	HONEYWELL INTERNATIONAL
GG2-79	6615-00-137-6038	GYROSCOPE, RATE OF TURN	HONEYWELL INTERNATIONAL
GHN10125-1	4810-00-761-6225	VALVE, LINEAR, DIRECTIONAL CONTROL	LOCKHEED MARTIN
GHN10255-1	1650-00-815-2499	FUSE, HYDRAULIC SYSTEM	PARKER-HANNIFIN
GMU-37/A	6680-00-753-8932	INDICATOR, LIQUID QUANTITY	TRANSCOIL
GMU37A	6680-00-753-8932	INDICATOR, LIQUID QUANTITY	TRANSCOIL
HSI-45	6605-01-101-1883	INDICATOR, HORIZONTAL SITUATION	ROCKWELL COLLINS
ID-1103/ARN	5826-01-459-5969	INDICATOR, BEARING DISTANCE, HEADING	AERONAUTICAL INSTRUMENT AND RADIO COM
ID1103ARN	5826-00-032-7024	INDICATOR, BEARING-DISTANCE-HEADING	AERONAUTICAL INSTRUMENT AND RADIO COM
ID1768A/APN-194V	5841-00-110-4912	INDICATOR, HEIGHT	HONEYWELL INTERNATIONAL
ID1768AAPN194V	5841-00-110-4912	INDICATOR, HEIGHT	HONEYWELL INTERNATIONAL
ID-1768B/APN-194V	5841-01-082-7951	INDICATOR, HEIGHT	HONEYWELL INTERNATIONAL
ID1768BAPN194V	5841-01-082-7951	INDICATOR, HEIGHT	HONEYWELL INTERNATIONAL
ID-231/ARN-6	5826-00-612-6596	INDICATOR, BEARING	KOLLSMAN
ID-231A/ARN-6	5826-00-612-6597	INDICATOR, BEARING	KOLLSMAN
ID-231AARN-6	5826-00-612-6597	INDICATOR, BEARING	KOLLSMAN
ID231ARN6	5826-00-612-6596	INDICATOR, BEARING	KOLLSMAN
ID-231B/ARN-6	5826-00-188-5554	INDICATOR, BEARING	KOLLSMAN
ID231BARN6	5826-00-188-5554	INDICATOR, BEARING	KOLLSMAN
ID-250/ARN	-----	INDICATOR, RADIO MAGNETIC	HONEYWELL INTERNATIONAL
ID-250A/ARN	5826-00-505-3094	INDICATOR, RADIO MAGNETIC	HONEYWELL INTERNATIONAL
ID-663CU	5826-00-089-7912	INDICATOR, BEARING DISTANCE HEADING	ASTRONAUTICS
ID-663CU	5826-00-168-8308	INDICATOR, BEARING DISTANCE HEADING	ASTRONAUTICS
ID-90/ARN-6	5826-00-505-3580	INDICATOR, BEARING	KOLLSMAN



**CAPABILITY LIST**

ID90A/ARN6	5826-00-090-3646	INDICATOR, BEARING	KEARFOTT
ID-90A/ARN-6	5826-00-090-3646	INDICATOR, BEARING	KEARFOTT
ID90AARN6	5826-00-090-3645	INDICATOR, BEARING	KEARFOTT
ID90ARN6	5826-00-505-3580	INDICATOR, BEARING	KOLLSMAN
ID-91A/ARN-6	5826-00-234-6315	INDICATOR, BEARING	KEARFOTT
ID91AARN6	5826-00-234-6315	INDICATOR, BEARING	KEARFOTT
ID-91B/ARN-6	5826-00-390-5744	INDICATOR, BEARING	KEARFOTT
ID91BARN6	5826-00-390-5744	INDICATOR, BEARING	KEARFOTT
ID-92/ARN-6	5826-00-505-0968	INDICATOR, BEARING	KOLLSMAN
ID92ARN6	5826-00-505-0968	INDICATOR, BEARING	KOLLSMAN
ID-938/APN-147(V)	5841-00-892-1070	INDICATOR, DRIFT ANGLE-GROUND SPEED	CMC ELECTRONIQUE
IND-40	----	INDICATOR, DME	ROCKWELL COLLINS
IND-40A	----	INDICATOR, DME	ROCKWELL COLLINS
IND-40B	----	INDICATOR, DME	ROCKWELL COLLINS
IND-40C	----	INDICATOR, DME	ROCKWELL COLLINS
IND-41	----	INDICATOR, DME	ROCKWELL COLLINS
IND-41A	----	INDICATOR, DME	ROCKWELL COLLINS
IND-41B	----	INDICATOR, DME	ROCKWELL COLLINS
IND-41C	----	INDICATOR, DME	ROCKWELL COLLINS
INTEGRA	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
IP-1374A/APS-133(V)	5841-01-193-6436	INDICATOR, WEATHER, RADAR	HONEYWELL INTERNATIONAL
IP-239A/APN-59	5841-00-851-8029	INDICATOR, RADAR, TARGET	LOCKHEED MARTIN
JG1073AB01	5841-00-110-4912	INDICATOR, HEIGHT	HONEYWELL INTERNATIONAL
JG1073CC01	5841-01-082-7951	INDICATOR, HEIGHT	HONEYWELL INTERNATIONAL
JG402A2	6680-00-580-1247	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A-2	6680-00-580-1247	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A3	6680-00-580-1246	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A-3	6680-00-580-1246	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A32	6680-00-866-5116	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A-32	6680-00-866-5116	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A4	6680-00-580-1248	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A-4	6680-00-580-1248	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A52	6680-01-056-1779	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A-52	6680-01-056-1779	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A53	6680-01-060-5228	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A-53	6680-01-060-5228	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A54	6680-01-058-5859	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A-54	6680-01-058-5859	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A55	6680-01-058-5860	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG402A-55	6680-01-058-5860	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A10	6680-00-849-7809	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A-10	6680-00-849-7809	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A2	6680-00-585-5859	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A-2	6680-00-585-5859	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL

## CAPABILITY LIST

JG412A3	6680-00-585-5444	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A-3	6680-00-585-5444	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A4	6680-00-585-8600	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A-4	6680-00-585-8600	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A52	6680-01-063-0597	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A-52	6680-01-063-0597	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A53	6680-01-058-5861	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A-53	6680-01-058-5861	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A54	6680-01-058-5862	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A-54	6680-01-058-5862	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A55	6680-01-058-5863	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
JG412A-55	6680-01-058-5863	INDICATOR, FUEL QUANTITY	HONEYWELL INTERNATIONAL
K300K001-01	5996-00-358-1724	AMPLIFIER, ELECTRONIC CONTROL	KEARFOTT
KT-76A	5895-01-269-4441	TRANSCEIVER, ATC	HONEYWELL INTERNATIONAL
KY-96A	5821-MD-010-2079	TRANSCEIVER, RADIO	HONEYWELL INTERNATIONAL
L16-107	1680-01-008-7442	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	WHIPPANY ACTUATION SYSTEMS
L16-8	1680-00-687-4872	ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	WHIPPANY ACTUATION SYSTEMS
L16-8-1	1680-00-720-5810	ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	WHIPPANY ACTUATION SYSTEMS
L16-8-3	1680-00-720-5810	ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	WHIPPANY ACTUATION SYSTEMS
L16-8-5	1680-01-378-1631	ACTUATOR, OIL COOLER DOOR, ELECTRO-MECHANICAL	WHIPPANY ACTUATION SYSTEMS
L200261-1	5826-00-611-0951	MOUNTING BASE	RAYTHEON
L200355-1	5826-00-521-0571	COUPLING, ANTENNA	RAYTHEON
L8529935	2935-00-887-4267	COOLER, ENGINE OIL	LOCKHEED MARTIN
L95808-1	4810-01-206-6309	VALVE, SOLENOID, SHUT-OFF	HONEYWELL AEROSPACE
LAC624328-1	6685-00-561-9378	INDICATOR, FUEL FLOW	AMETEK
LPE-22251-2	-----	INDICATOR, AIR SPEED	CARLETON
LPE-22251-2M	-----	INDICATOR, AIR SPEED	CARLETON
LPT-125G	5826-14-547-0474	RECEIVER PROCESSOR	ROCKWELL COLLINS
LS-211/AIC-13	5965-01-493-9721	LOUDSPEAKER, MAGNETIC	RANDAM ELECTRONICS
M200250-1	5826-00-090-3646	INDICATOR, BEARING	RAYTHEON
M25707/1-01	5985-00-673-5831	ANTENNA, DME/TACAN, BEACON	L3 TECHNOLOGIES
M25708/1-01	5985-00-106-0906	ANTENNA	EDO
M270-1	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
M5498-4	1650-00-877-6095	ACCUMULATOR ASSY, HYDRAULIC	PARKER-HANNIFIN
M5815/1-01	5985-00-217-0457	ANTENNA, UHF, BLADE	EDO
MA-1	6685-00-514-5061	INDICATOR, PRESSURE	AEROSONIC
MA7	-----	INDICATOR, FUEL FLOW	AMETEK
MA-7	6620-00-551-2631	INDICATOR, FUEL FLOW	AMETEK
MA-7A	6620-01-391-2998	INDICATOR, FUEL FLOW	AMETEK
MC7545	6645-00-076-3050	CLOCK, MECHANICAL, PANEL	MACLEOD INSTRUMENT
MD-1	-----	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
MF30-3913-25ZE5	1650-00-540-0162	MOTOR, HYDRAULIC	EATON AEROSPACE
MF30-3913-25ZE-S656-5	1650-00-954-1429	MOTOR, HYDRAULIC	EATON AEROSPACE
MF30-3913-30S159-2	1650-00-540-1773	MOTOR, HYDRAULIC	EATON AEROSPACE

**CAPABILITY LIST**

MF30-3913-30ZE5	1650-00-204-1703	MOTOR, HYDRAULIC	EATON AEROSPACE
MF30-3913-30ZG-2	-----	MOTOR, HYDRAULIC	EATON AEROSPACE
MF30-3913S228-2	1650-00-540-1773	MOTOR, HYDRAULIC	EATON AEROSPACE
MF-3913-2	-----	MOTOR, HYDRAULIC	EATON AEROSPACE
MF-3913-5	-----	MOTOR, HYDRAULIC	EATON AEROSPACE
MF42-3913S159-2	-----	MOTOR, HYDRAULIC	EATON AEROSPACE
MF60-3913-30ZG5	1650-00-535-5878	MOTOR, HYDRAULIC	EATON AEROSPACE
MF60-3913-S215-2	-----	MOTOR, HYDRAULIC	EATON AEROSPACE
MF88-913S395-5A	1650-00-651-2885	MOTOR, HYDRAULIC	EATON AEROSPACE
MF9-3911-30ZE	4320-01-224-9869	MOTOR, HYDRAULIC	EATON AEROSPACE
MF9-3911-30ZES473	1650-00-288-9632	MOTOR, HYDRAULIC	EATON AEROSPACE
MF9-3911-30ZS481	1650-00-815-9387	MOTOR, HYDRAULIC	EATON AEROSPACE
MFD-85	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
MFD-85A	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
MFD-85B	7025-01-476-7706	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
MFD-85C	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
MFD-85M	-----	DISPLAY, MULTIFUNCTION	ROCKWELL COLLINS
MGE23-400	6125-00-020-3217	POWER CONVERTER, DC/AC	GE AVIATION SYSTEMS
MGE23-400A	6125-00-020-3217	POWER CONVERTER, DC/AC	GE AVIATION SYSTEMS
MGE23-500A	6125-01-503-8092	POWER CONVERTER, DC/AC	GE AVIATION SYSTEMS
MHB4016	2925-01-139-5144	STARTER, ENGINE	HARTZELL ENGINE TECHNOLOGIES
MIL-A-25707/1	5985-00-673-5831	ANTENNA, DME/TACAN, BEACON	L3 TECHNOLOGIES
MIL-A-25708/1	5985-00-106-0906	ANTENNA	EDO
MIL-A-25719	6610-00-007-1030	ACCELEROMETER, MECHANICAL	QED
MIL-A-25719 TYPE MA1	-----	ACCELEROMETER, MECHANICAL	BURTON MEDICAL PRODUCTS
MIL-A-25933	6685-00-226-5700	ALTIMETER, CABIN	AEROSONIC
MIL-A-27261A	6610-01-391-9062	ACCELEROMETER, MECHANICAL	Q.E.D.
MILA5498	1650-00-395-2599	ACCUMULATOR ASSY, HYDRAULIC	HONEYWELL INTERNATIONAL
MIL-A-5498	1650-00-395-2599	ACCUMULATOR ASSY, HYDRAULIC	HONEYWELL INTERNATIONAL
MIL-A-5815/1	5985-00-217-0457	ANTENNA, UHF, BLADE	EDO
MILA83212	6610-00-160-3226	ALTIMETER PRESSURE	AEROSONIC
MIL-A-83212	6610-00-160-3226	ALTIMETER PRESSURE	AEROSONIC
MIL-A-83419	6610-01-016-1583	ALTIMETER, SERVO CONTROLLED	KOLLSMAN
MIL-C-27298 TYPE ABU9A	6645-00-793-5794	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MILC27298TYPEABU9A	6645-00-793-5794	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MILC38207	6645-00-076-3050	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MIL-C-38207	6645-00-076-3050	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MIL-C-38214	6605-00-815-1903	COMPASS, MAGNETIC	G T A
MILC38286	6610-00-763-2415	COMPUTER, FLIGHT DIRECTOR	ROCKWELL COLLINS
MIL-C-38286	6610-00-763-2415	COMPUTER, FLIGHT DIRECTOR	ROCKWELL COLLINS
MILC5604	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
MIL-C-5604	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
MILC6125	6605-00-239-8205	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
MIL-C-6125	6605-00-239-8205	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN

### CAPABILITY LIST

MILC6126	6605-00-239-8206	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
MIL-C-6126	6605-00-239-8206	COMPASS, MAGNETIC, MOUNTED	KOLLSMAN
MIL-C-6499	6645-00-150-6526	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MIL-C-6499A	6645-00-150-6526	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MIL-C-6499A TYPE A13A	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MILC6499ATYPEA13A	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MIL-C-6499B	6645-00-150-6526	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MIL-C-6499C	6645-00-150-6526	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MIL-C-6499D	6645-00-150-6526	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MIL-C-6499E	6645-00-150-6526	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
MIL-C-7115	6130-00-314-0050	POWER CONVERTER, AC/DC	COOPER INDUSTRIES
MIL-DTL-25707	5985-00-673-5831	ANTENNA, DME/TACAN, BEACON	L3 TECHNOLOGIES
MIL-DTL-25707/1	5985-00-673-5831	ANTENNA, DME/TACAN, BEACON	L3 TECHNOLOGIES
MIL-DTL-25708/1	5985-00-106-0906	ANTENNA	EDO
MIL-DTL-38394	6620-00-901-7848	TRANSMITTER PRESSURE	HONEYWELL INTERNATIONAL
MIL-DTL-6839	-----	INDICATOR, POSITION	AMETEK
MILF8378	6625-00-668-7818	METER, ELECTRICAL FREQUENCY	GENERAL ELECTRIC
MIL-F-8378	6625-00-668-7818	METER, ELECTRICAL FREQUENCY	GENERAL ELECTRIC
MIL-G-25597	-----	GYROSCOPE, DISPLACEMENT	GE AVIATION SYSTEMS
MILG5413	-----	GENERATOR, TACHOMETER	AMETEK
MIL-G-5413	-----	GENERATOR, TACHOMETER	AMETEK
MIL-I-18856A	6610-00-620-7888	INDICATOR, ANGLE OF ATTACK	AEROSONIC
MIL-I-25324	-----	INDICATOR, FUEL FLOW	AMETEK
MILI25593	6610-00-557-3030	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
MIL-I-25593	6610-00-557-3030	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
MILI25623	6620-00-557-3023	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
MIL-I-25623	6620-01-322-7678	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
MIL-I-25623	6620-00-557-3023	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
MIL-I-25623 TYPE MU1	6620-00-557-3023	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
MIL-I-26689	6605-00-034-2500	INDICATOR, HORIZONTAL SITUATION	ASTRONAUTICS
MIL-I-27197	6610-01-263-2409	INDICATOR, AIRSPEED/MACH	AEROSONIC
MIL-I-27209	-----	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
MIL-I-27552	-----	INDICATOR, THERMOCOUPLE, TEMPERATURE	CARLETON LIFE SUPPORT SYSTEMS
MIL-I-27882	6680-00-753-8932	INDICATOR, LIQUID QUANTITY	TRANSICOIL
MIL-I-5099	6685-00-514-5061	INDICATOR, PRESSURE	AEROSONIC
MIL-I-5184	6610-00-515-4600	INDICATOR, FLAP, POSITION	AMETEK
MIL-I-5392A	6610-00-006-5783	INDICATOR, MACH AND TRUE AIR SPEED	AEROSONIC
MILI6447	6610-00-514-5611	INDICATOR, AIR SPEED	KOLLSMAN
MIL-I-6447	6610-00-514-5611	INDICATOR, AIR SPEED	KOLLSMAN
MIL-I-6447 TYPE G-1	-----	INDICATOR, AIR SPEED	KOLLSMAN
MIL-I-6447 TYPE M1	-----	INDICATOR, AIR SPEED	KOLLSMAN
MIL-I-6447 TYPE M1A	6610-00-514-5612	INDICATOR, AIR SPEED	KOLLSMAN
MIL-I-6447A TYPE M1A	6610-00-585-1524	INDICATOR, AIR SPEED	KOLLSMAN
MILI6447TYPEG1	-----	INDICATOR, AIR SPEED	KOLLSMAN

## CAPABILITY LIST

MIL16447TYPEM1	----	INDICATOR, AIR SPEED	KOLLSMAN
MIL16447TYPEM1A	6610-00-514-5612	INDICATOR, AIR SPEED	KOLLSMAN
MIL-I-6839	----	INDICATOR, POSITION	AMETEK
MIL-I-7075	6685-00-557-0372	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
MIL-I-7077	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
MIL-I-7721	6610-00-530-0028	INDICATOR, VERTICAL VELOCITY	AEROSONIC
MIL-I-83392	6610-00-200-8832	INDICATOR, VERTICAL VELOCITY	L3 AVIATION PRODUCTS
MIL-I-87923	6620-01-172-6946	INDICATOR, TORQUEMETER	PARKER-HANNIFIN
MIL19343	6685-00-530-3614	INDICATOR, ANTI-ICING	HORIZON AEROSPACE
MIL-I-9343	6685-00-530-3614	INDICATOR, ANTI-ICING	HORIZON AEROSPACE
MIL-L-6723	5850-00-729-1595	LIGHT, SIGNAL	GRIMES AEROSPACE
MIL-P-8422 TYPE MC-1	6130-01-178-7850	POWER SUPPLY	PACIFIC ELECTRONIC ENTERPRISES
MIL-PRF-38214	6605-00-815-1903	COMPASS, MAGNETIC	G T A
MIL-T-25307	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
MIL-T-25307D	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
MIL-T-25624	6620-01-067-8336	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
MIL-T-25905	6620-00-621-2902	TRANSMITTER, FLOWMETER	AMETEK
MIL-T-27200	6615-01-059-7909	GYROSCOPE, RATE OF TURN	ATLANTIC INERTIAL SYSTEMS
MIL-T-38394	6620-00-901-7848	TRANSMITTER PRESSURE	HONEYWELL INTERNATIONAL
MIL-T-5583	6610-00-678-9887	TRANSMITTER, POSITION	SIMMONDS PRECISION PRODUCTS
MIL-T-7748	6620-00-999-2222	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
MIL-T-8249	6620-00-557-0259	TRANSMITTER, FLOWMETER	AMETEK
MJ1	6685-00-530-3614	INDICATOR, ANTI-ICING	HORIZON AEROSPACE
MJ-1	6685-00-530-3614	INDICATOR, ANTI-ICING	HORIZON AEROSPACE
ML-1	6605-00-111-3645	TRANSMITTER, INDUCTION COMPASS	HONEYWELL INTERNATIONAL
MM4	6610-00-557-3030	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
MM-4	6610-00-557-3030	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
MM4A	6610-00-866-3234	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
MM-4A	6610-00-866-3234	INDICATOR, ATTITUDE DIRECTOR	GE AVIATION SYSTEMS
MN95A	5985-00-149-1451	ANTENNA, LOOP	RAYTHEON
MODEL 833	----	AMMETER	WESTON ELECTRICAL INSTRUMENT
MPEV3-032-2	4320-00-174-5811	PUMP, AUXILIAR	EATON AEROSPACE
MPEV3-032-2A	4320-00-174-5811	PUMP, AUXILIAR	EATON AEROSPACE
MPU-86R	5821-01-333-9239	PROCESSOR UNIT, MULTI	ROCKWELL COLLINS
MS17399-1	6615-00-181-1879	GYROSCOPE, SWITCHING RATE	GE AVIATION SYSTEMS
MS17404-2	6125-00-020-3217	POWER CONVERTER, DC/AC	GE AVIATION SYSTEMS
MS17983-02	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
MS17983-2	6605-00-551-8187	COMPASS, MAGNETIC, MOUNTED	HONEYWELL INTERNATIONAL
MS21971-1	----	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
MS21971-2	----	INDICATOR, ELECTRICAL TACHOMETER	AEROSONIC
MS24569-1	6685-00-183-0351	INDICATOR, THERMOCOUPLE, TEMPERATURE	TRANSICOIL
MS25038-2	----	GENERATOR, TACHOMETER	AMETEK
MS25038-4	6680-00-553-8892	GENERATOR, TACHOMETER	AMETEK
MS25396	6605-00-833-5087	TRANSMITTER, INDUCTION COMPASS	HONEYWELL INTERNATIONAL

### CAPABILITY LIST

MS25396-1	6605-00-833-5087	TRANSMITTER, INDUCTION COMPASS	HONEYWELL INTERNATIONAL
MS25470-7	6685-00-868-5858	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
MS27403-2	-----	INDICATOR, POSITION	AMETEK
MS28000-1	6620-00-515-4541	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
MS28005-1	6620-00-553-8988	TRANSMITTER, PRESSURE	HONEYWELL
MS28005-5	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
MS28005-8	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
MS28008-1	6685-00-557-0372	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
MS28009-1	6685-00-557-0370	INDICATOR, TEMPERATURE, ELECTRICAL RESISTANCE	HORIZON AEROSPACE
MS28010-1	6620-00-514-5334	INDICATOR, PRESSURE	HONEYWELL INTERNATIONAL
MS28023-1	6610-00-515-4600	INDICATOR, FLAP, POSITION	AMETEK
MS28027-1	5826-00-505-3094	INDICATOR, RADIO MAGNETIC	HONEYWELL INTERNATIONAL
MS28036-1	-----	INDICATOR, AIR SPEED	KOLLSMAN
MS28049-1	6610-00-530-0028	INDICATOR, VERTICAL VELOCITY	AEROSONIC
MS28066-30	6610-00-719-6882	TRANSMITTER, ANGLE OF ATTACK	AEROSONIC
MS28067-2	6610-00-620-7888	INDICATOR, ANGLE OF ATTACK	AEROSONIC
MS28075-1	6610-00-473-5046	INDICATOR, VERTICAL VELOCITY	AEROSONIC
MS28075-1B	6610-00-473-5046	INDICATOR, VERTICAL VELOCITY	AEROSONIC
MS28131-10T	6620-00-065-3235	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
MS28131-12T	6620-00-999-2425	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
MS28131-14T	6620-00-115-2501	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
MS28131-6T	6620-00-999-2222	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
MS28131-8T	6620-00-999-2424	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
MS28132-1	6130-00-566-0347	POWER CONVERTER, AC/DC	COOPER INDUSTRIES
MS28132-2	6130-00-164-4224	POWER CONVERTER, AC/DC	COOPER INDUSTRIES
MS28700-4	1650-00-640-8486	ACCUMULATOR ASSY, HYDRAULIC	HONEYWELL INTERNATIONAL
MS28925-9	5850-00-729-1595	LIGHT, SIGNAL	GRIMES AEROSPACE
MS3370-1	6130-00-314-0050	POWER CONVERTER, AC/DC	COOPER INDUSTRIES
MS42-3913S159-2A	1650-00-720-0093	MOTOR, HYDRAULIC	EATON AEROSPACE
MS42-3913S159-2C	-----	MOTOR, HYDRAULIC	EATON AEROSPACE
MS90323-6	6620-00-151-5363	INDICATOR, TORQUEMETER	SIMMONDS PRECISION PRODUCTS
MS90325-4	6110-01-017-5428	REGULATOR, VOLTAGE	HONEYWELL INTERNATIONAL
MSP-85	-----	SELECT PANEL, AUTO-PILOT MODE	ROCKWELL COLLINS
MT-273/ARN-6	5340-00-612-1246	MOUNTING BASE ASSEMBLY	RAYTHEON
MT-273A/ARN-6	5826-00-969-9543	MOUNTING BASE ASSEMBLY	RAYTHEON
MT273AARN6	5826-00-969-9543	MOUNTING BASE ASSEMBLY	RAYTHEON
MT273ARN6	5340-00-612-1246	MOUNTING BASE ASSEMBLY	RAYTHEON
MT-273B/ARN-6	5826-00-969-9542	MOUNTING BASE ASSEMBLY	RAYTHEON
MT273BARN6	5826-00-969-9542	MOUNTING BASE ASSEMBLY	RAYTHEON
MT-273C/ARN-6	5826-00-969-9542	MOUNTING BASE ASSEMBLY	RAYTHEON
MT273CARN6	5826-00-969-9542	MOUNTING BASE ASSEMBLY	RAYTHEON
MT-273D/ARN-6	5826-00-333-9867	MOUNTING BASE ASSEMBLY	RAYTHEON
MT273DARN6	5826-00-333-9867	MOUNTING BASE ASSEMBLY	RAYTHEON
MT-273E/ARN-6	5826-00-522-3428	MOUNTING BASE ASSEMBLY	RAYTHEON

## CAPABILITY LIST

MT273EARN6	5826-00-522-3428	MOUNTING BASE ASSEMBLY	RAYTHEON
MT-273F/ARN-6	5826-00-629-8309	MOUNTING BASE ASSEMBLY	RAYTHEON
MT273FARN6	5826-00-629-8309	MOUNTING BASE ASSEMBLY	RAYTHEON
MT-275/ARN-6	5826-00-611-0951	MOUNTING BASE	RAYTHEON
MT275ARN6	5826-00-611-0951	MOUNTING BASE	RAYTHEON
MT-4680/A	5975-01-013-0861	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-4680A/A	5975-01-045-6683	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-4681/A	5975-01-013-0862	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-4682/A	5975-01-012-1857	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-4682A/A	5975-01-034-5477	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-4842/A	5975-01-151-9680	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-4915/A	5975-01-041-2044	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-6019/ARN	5975-01-062-5189	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-6230/ARN-118(V)	5975-01-136-2750	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-6487/ARN-118(V)	5975-01-208-8418	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MT-6527/ARN-118(V)	5975-01-249-5920	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MTK-14/A24G-9	6610-00-887-9422	MOUNT ASSY, COMPUTER RESILIENT	HONEYWELL INTERNATIONAL
MU1	6620-00-557-3023	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
MU-1	6620-00-557-3023	INDICATOR, ELECTRICAL TACHOMETER	AMETEK
MX-10384/ARN-118(V)	5826-01-132-7214	MOUNTING BASE, TACAN, TRANSCEIVER	ROCKWELL COLLINS
MX-9577/A	5826-01-012-4864	ADAPTER, TACAN, TRANSCEIVER	ROCKWELL COLLINS
N200250-2	5826-00-234-6315	INDICATOR, BEARING	RAYTHEON
N212254-1	5985-00-149-1451	ANTENNA, LOOP	RAYTHEON
N212254-2	5985-00-149-1451	ANTENNA, LOOP	RAYTHEON
N400-4B-3	6105-00-683-0351	MOTOR,ALTERNATING CURRENT	ALLIANT DEFENSE
N400-4B-4	6105-00-683-0351	MOTOR,ALTERNATING CURRENT	ALLIANT DEFENSE
NA126D2	5841-00-464-0335	DECODER	MOTOROLA
NA5-8218-3	4820-00-810-2061	VALVE, FLUID, REGULATING	BOEING
NABO17	6645-12-146-1628	CLOCK, MECHANICAL, PANEL	SINN SPEZIALUHREN
OA-8697/ARD	5826-01-008-4097	DIRECTION FINDER SET	ROCKWELL COLLINS
P16M-3	5930-00-615-7340	SWITCH, PRESSURE	UNITED ELECTRIC CONTROLS
P46D-18	5930-00-615-7340	SWITCH, PRESSURE	UNITED ELECTRIC CONTROLS
PE22251-5	6610-00-263-3076	INDICATOR, AIR SPEED	CARLETON
PP-1073C/APN-59	6130-01-056-8665	POWER SUPPLY, RADAR	NORTHROP GRUMMAN SYSTEMS
PP1073CAPN59	6130-01-056-8665	POWER SUPPLY, RADAR	NORTHROP GRUMMAN SYSTEMS
PPI-1T	6210-01-408-7389	INDICATOR, RADAR, LIGHT	HONEYWELL
PPI-1TB(M)	-----	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
PS309407-02	6615-01-450-2720	SELECT PANEL, AUTO-PILOT MODE	CAE
PS309442-02	6610-01-460-1385	DISPLAY, OPTOELECTRONIC, EADI/EHSI	CAE
PS-835D	6130-01-219-8285	POWER SUPPLY, BATTERY	L3 AVIATION PRODUCTS
PWR-230	5996-01-306-4529	AMPLIFIER, ELECTRONIC CONTROL	ROCKWELL COLLINS
PYLB51239	4810-01-237-5974	VALVE, OIL COOLER, AUGMENTATION	GE AVIATION SYSTEMS
PYLB51239-1	4810-01-619-3259	VALVE, OIL COOLER, AUGMENTATION	GE AVIATION SYSTEMS
PYLB51239-2	4810-01-237-5974	VALVE, OIL COOLER, AUGMENTATION	GE AVIATION SYSTEMS



## CAPABILITY LIST

R-101/ARN-6	5826-00-543-0829	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R-101A/ARN6	5826-00-241-1011	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R-101A/ARN6-2	5826-00-241-1011	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R101AARN6	5826-00-241-1011	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R101AARN6-2	5826-00-241-1011	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R101ARN6	5826-00-543-0829	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R-101B/ARN-6	5826-00-505-0793	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R101BARN6	5826-00-505-0793	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R-101C/ARN-6	5826-00-625-9201	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R101CARN6	5826-00-625-9201	TRANSCEIVER, RADIO COMPASS	RAYTHEON
R1596M5	1680-00-887-1911	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	WHIPPANY ACTUATION SYSTEMS
R200260-1	5895-00-228-3133	CONTROL BOX, RECEIVER	RAYTHEON
R-2217/ARN-140	5826-01-486-8271	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
R5170M34-2	1680-00-804-5756	ACTUATOR, APU DOOR, ELECTRO-MECHANICAL	ROCKWELL COLLINS
R5170M34-3	1680-00-474-3300	ACTUATOR, APU DOOR, ELECTRO-MECHANICAL	WHIPPANY ACTUATION SYSTEMS
R5170M34-4	1680-00-426-5616	ACTUATOR, APU DOOR, ELECTRO-MECHANICAL	WHIPPANY ACTUATION SYSTEMS
R6607-2-14	5930-00-615-7340	SWITCH, PRESSURE	EATON AEROSPACE
R88-C-783	-----	COMPASS, MAGNETIC, MOUNTED	AEROSONIC
R88-C-800	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
R88-C-845	-----	COMPASS, MAGNETIC, MOUNTED	HONEYWELL AEROSPATIALE
RC60	6610-00-530-0028	INDICATOR, VERTICAL VELOCITY	HONEYWELL AEROSPATIALE
RC-60	6610-00-530-0028	INDICATOR, VERTICAL VELOCITY	AEROSONIC
RC60MS	6610-00-111-3159	INDICATOR, VERTICAL VELOCITY	AEROSONIC
RC-60MS	6610-00-111-3159	INDICATOR, VERTICAL VELOCITY	AEROSONIC
RC60MS10-3	6610-00-951-4451	INDICATOR, VERTICAL VELOCITY	AEROSONIC
RC-60MS-10-3	6610-00-951-4451	INDICATOR, VERTICAL VELOCITY	AEROSONIC
RCA40-02	-----	INDICATOR, ELECTRICAL TACHOMETER	AEROSONIC
RCA40-03	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA40-05	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA40-06	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA40-07	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA40-09	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA40A-10	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA40A-11	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA40AB	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA41-09	6680-01-313-3450	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA41-11A	6680-00-944-3117	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA41A-07	6620-01-322-7678	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA41A-09	6680-01-313-3450	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA41AB	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA42	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCA42A	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-01	5841-00-189-9436	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-02	-----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING



## CAPABILITY LIST

RCB40B-03	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-04	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-05	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-07	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-08	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-09	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-10	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-11	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB40B-12	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB41B	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCB42B	----	INDICATOR, ELECTRICAL TACHOMETER	KELLY MANUFACTURING
RCS60-1L	6610-00-473-5046	INDICATOR, VERTICAL VELOCITY	KELLY MANUFACTURING
RG14D3	6680-00-653-1139	INDICATOR, FUEL QUANTITY, TOTALIZER	HONEYWELL INTERNATIONAL
RG14D7	6680-00-860-6390	INDICATOR, FUEL QUANTITY, TOTALIZER	HONEYWELL INTERNATIONAL
RG-3-11	----	GYROSCOPE, ROTATING	ROCKWELL COLLINS
RG-3-21	----	GYROSCOPE, ROTATING	ROCKWELL COLLINS
RG9080J6A	2915-MD-003-2382	PUMP, FUEL	CRANE
RL30P	6610-00-729-4292	TRANSMITTER, ANGLE OF ATTACK	ROCKWELL COLLINS
RL50	6610-00-467-7152	TRANSMITTER, ANGLE OF ATTACK	AEROSONIC
RL50P	6610-00-720-3237	TRANSMITTER, ANGLE OF ATTACK	AEROSONIC
RL50PE	6610-00-719-6882	TRANSMITTER, ANGLE OF ATTACK	AEROSONIC
RT1159/ARN-118	5826-01-012-1938	TRANSCEIVER, TACAN	AEROSONIC
RT-1250A/ARC-182	5821-01-203-3480	TRANSCEIVER, RADIO AM/FM	ROCKWELL COLLINS
RT-1338/APS-133(V)	5841-01-091-8929	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
RT-1338A/APS-133(V)	5841-01-194-2452	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
RT-1341(V)3/ARC-190	5821-01-258-7579	TRANSCEIVER, RADIO	ROCKWELL COLLINS
RT-1397/ARC-197	5821-01-140-7767	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
RT-1438/APN-232(V)	5841-01-301-4588	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
RT1438APN232V	5841-01-301-4588	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
RT-1692/APN-232(V)	5841-01-349-9175	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
RT1692APN232V	5841-01-349-9175	TRANSCEIVER, CARA	NAVCOM DEFENSE ELECTRONICS
RT-474/ARC-72	5821-00-893-0193	TRANSCEIVER, RADIO	ROCKWELL COLLINS
RT-5048/ARC-511(V)	5821-01-038-7301	TRANSCEIVER, VHF, RADIO	ROCKWELL COLLINS
RT-5048D/ARC-511(V)	5820-01-517-3020	TRANSCEIVER, RADIO VHF	ROCKWELL COLLINS
RT-648/ARC-94	5821-00-893-2906	TRANSCEIVER, RADIO	ROCKWELL COLLINS
RT-698/ARC-102	5821-00-604-3307	TRANSCEIVER, RADIO	ROCKWELL COLLINS
RT859A/APX-72	5841-00-089-7179	TRANSCEIVER, RADAR	RAYTHEON
RTA-1FB	5841-01-305-1921	TRANSCEIVER, WEATHER, RADAR	HONEYWELL INTERNATIONAL
RTA-1FB(M)	5841-01-314-9947	TRANSCEIVER, WEATHER, RADAR	HONEYWELL
RTA-842	----	TRANSCEIVER, WEATHER, RADAR	ROCKWELL COLLINS
RYLC51047	1680-01-221-8261	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	GE AVIATION SYSTEMS
RYLC51047-1	1680-01-221-8261	ACTUATOR, ELECTRO-MECHANICAL, LINEAR	GE AVIATION SYSTEMS
S1660-60034-8	5985-00-852-0457	COUPLER, ANTENNA	GE AVIATION SYSTEMS
S1820502-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD

### CAPABILITY LIST

S1820502-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1820502-04	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1821502-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1821502-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1821502-06	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1822502-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1822502-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1823502-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1823502-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1823502-03	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1823502-05	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1824502-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1824502-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1840501-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1840501-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1850501-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1850501-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1850501-03	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1851501-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1851501-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1851501-03	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1852501-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1852501-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1852501-03	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1854501-01	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1854501-02	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S1854501-03	----	TRANSMITTER, EMERGENCY LOCATOR (ELT)	KANNAD
S2204-105	6220-00-370-5447	LIGHT, EMERGENCY EXIT	SODERBERG
S2320-101	6220-01-438-3488	LIGHT, EMERGENCY	SODERBERG
S3698	6645-00-887-0122	TIMER, SEQUENTIAL	AI-TEK INSTRUMENTS
S-513-100-2	1650-00-640-8486	ACCUMULATOR ASSY, HYDRAULIC	TELEDYNE
S513-100-2T	1650-00-516-6893	ACCUMULATOR ASSY, HYDRAULIC	TELEDYNE
S65-8282-831	5985-01-598-5646	ANTENNA, BLADE , VHF/UHF	SENSOR SYSTEMS
S85-AVU-8C/A	6610-01-263-2409	INDICATOR, AIRSPEED/MACH	AEROSONIC
SA103-18	6695-00-628-8990	INDICATOR, POSITION	PENN KEYSTONE
SC2253A	----	SELCAL, DECODER	TEAM
SCD10175	6685-00-526-7864	TRANSMITTER, PRESSURE	CELTECH
SK40LC1	6610-01-109-5105	INDICATOR, MACH AND TRUE AIR SPEED	AEROSONIC
SLZ2226A	----	TRANSMITTER, ANGLE OF ATTACK	AEROSONIC
SLZ2481	6610-00-729-4292	TRANSMITTER, ANGLE OF ATTACK	AEROSONIC
SLZ2482	6610-00-720-3237	TRANSMITTER, ANGLE OF ATTACK	AEROSONIC
SLZ2501	6610-00-719-6882	TRANSMITTER, ANGLE OF ATTACK	AEROSONIC
SLZ9028	6610-00-557-5832	INDICATOR, ANGLE OF ATTACK	AEROSONIC
SLZ9028D	6610-00-527-8356	INDICATOR, ANGLE OF ATTACK	AEROSONIC

## CAPABILITY LIST

SLZ9028E	6610-00-620-7888	INDICATOR, ANGLE OF ATTACK	AEROSONIC
SLZ9028G	6610-00-811-6070	INDICATOR, ANGLE OF ATTACK	AEROSONIC
SLZ9034	-----	INDICATOR, ANGLE OF ATTACK	AEROSONIC
SLZ9695-3	6610-01-222-6439	TRANSMITTER, ANGLE OF ATTACK	AEROSONIC
SLZ9696	6610-01-004-5856	INDICATOR, ANGLE OF ATTACK	AEROSONIC
SP9509	1650-00-204-1703	MOTOR, HYDRAULIC	EATON AEROSPACE
SR14-1	4110-00-015-7627	REFRIGERATOR, MECHANICAL	GOODRICH
SR14-101	4110-00-015-7627	REFRIGERATOR, MECHANICAL	GOODRICH
SR18B	-----	INDICATOR, CONDENSOR DOOR POSITION	AMETEK
SR-18B	-----	INDICATOR, CONDENSOR DOOR POSITION	AMETEK
SR18C	-----	INDICATOR, CONDENSOR DOOR POSITION	AMETEK
SR-18C	-----	INDICATOR, CONDENSOR DOOR POSITION	AMETEK
SR3J	6685-00-887-6815	INDICATOR, FUEL CROSS FEED PRESSURE	AMETEK
SR-3J	6685-00-887-6815	INDICATOR, FUEL CROSS FEED PRESSURE	AMETEK
SR-4J	-----	INDICATOR, OIL COOLER FLAP POSITION	AMETEK
SR4K	-----	INDICATOR, ENGINE OIL PRESSURE	AMETEK
SR-4K	-----	INDICATOR, ENGINE OIL PRESSURE	AMETEK
SR4M	-----	INDICATOR, REDUCTION GEAR OIL PRESSURE	AMETEK
SR-4M	-----	INDICATOR, REDUCTION GEAR OIL PRESSURE	AMETEK
SR-4U	-----	INDICATOR, WING FLAP POSITION	AMETEK
SR5E	6685-00-887-6813	INDICATOR, BLEED MANIFOLD PRESSURE	AMETEK
SR-5E	6685-00-887-6813	INDICATOR, BLEED MANIFOLD PRESSURE	AMETEK
SR5F	-----	INDICATOR, FREON CONDENSOR PRESSURE	AMETEK
SR-5F	-----	INDICATOR, FREON CONDENSOR PRESSURE	AMETEK
SR5G	-----	INDICATOR, FREON COMPRESSOR PRESSURE	AMETEK
SR-5G	-----	INDICATOR, FREON COMPRESSOR PRESSURE	AMETEK
SR6A	6620-00-514-5334	INDICATOR, PRESSURE	AMETEK
SR-6A	6620-00-514-5334	INDICATOR, PRESSURE	AMETEK
ST104A	6620-00-526-7917	TRANSMITTER, PRESSURE	AMETEK
ST-104A	6620-00-526-7917	PRESSURE TRANSMITER	AMETEK
ST207A	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
ST-207A	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
ST4F	6620-00-553-8988	TRANSMITTER, PRESSURE	AMETEK
ST-4F	6620-00-553-8988	TRANSMITTER, PRESSURE	AMETEK
ST6B	6620-00-553-8988	TRANSMITTER, PRESSURE	AMETEK
ST-6B	6620-00-553-8988	TRANSMITTER, PRESSURE	AMETEK
ST6C	6620-00-553-8988	TRANSMITTER, PRESSURE	AMETEK
ST-6C	6620-00-553-8988	TRANSMITTER, PRESSURE	AMETEK
ST7A	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
ST-7A	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
ST7B	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
ST-7B	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
ST7C	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
ST-7C	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK

### CAPABILITY LIST

ST7D	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
ST-7D	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
SYLZ50683-1	1660-01-126-1784	CONTROL BOX, AIRCRAFT AIR TEMPERATURE	GE AVIATION SYSTEMS
SYLZ50684	1660-01-121-7386	CONTROL BOX, AIRCRAFT AIR TEMPERATURE	GE AVIATION SYSTEMS
SYLZ50685	1660-01-021-4981	CONTROL BOX, TEMPERATURE	GE AVIATION SYSTEMS
T16-311-350M001	6610-MD-030-7102	INDICATOR, AIR SPEED	JAEGER (THALES AVIONICS)
T700A3420008000	6605-14-489-2230	COMPASS, GYROMAGNETIC	SOCATA
TG255-001	-----	GENERATOR, TACHOMETER	ADVANCED POWER
TG255-002	6680-00-445-1246	GENERATOR, TACHOMETER	ADVANCED POWER
TG255-003	6680-00-920-9213	GENERATOR, TACHOMETER	ADVANCED POWER
TG255-004	-----	GENERATOR, TACHOMETER	ADVANCED POWER
TG255-005	-----	GENERATOR, TACHOMETER	ADVANCED POWER
TG255-006	-----	GENERATOR, TACHOMETER	ADVANCED POWER
TG255-007	6680-00-923-8466	GENERATOR TACHOMETER	ADVANCE POWER
TG255-008	-----	GENERATOR, TACHOMETER	ADVANCED POWER
TRK-46/A24G-9	6685-00-887-1966	PROBE, TEMPERATURE	HONEYWELL INTERNATIONAL
TRK-56/A27J-1	6685-00-526-7864	TRANSMITTER, PRESSURE	AMETEK
TRU-2A/A	6615-01-059-7909	GYROSCOPE, RATE OF TURN	ATLANTIC INERTIAL SYSTEMS
TRU-7/A	6620-00-621-2902	TRANSMITTER, FLOWMETER	AMETEK
TRU-80/A3A	6620-01-067-8336	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
TRU-81/A	6620-00-901-7848	TRANSMITTER, PRESSURE	HONEYWELL INTERNATIONAL
TRU81A	6620-00-901-7848	TRANSMITTER PRESSURE	HONEYWELL INTERNATIONAL
TS-2046/AIC	4920-00-986-7642	TEST SET, INTERCOMMUNICATION	TRAYTHEON
TSG421-106	6130-12-148-2278	INVERTER, POWER, STATIC	DIEHL
TYPE11A	6645-14-401-6084	CLOCK, STOP	ANODE
TYPE500-12	-----	TRANSMITTER, PERSONAL LOCATOR (PLT/PLB)	TECHTEST
TYPE500-16	-----	TRANSMITTER, PERSONAL LOCATOR (PLT/PLB)	TECHTEST
TYPE500-27	-----	TRANSMITTER, PERSONAL LOCATOR (PLT/PLB)	TECHTEST
U521251-1	2935-00-887-1969	COOLER, LUBRICATING OIL, ENGINE	TRIUMPH THERMAL SYSTEMS
VIR-30		RECEIVER, RADIO NAVIGATION	TRIUMPH THERMAL SYSTEMS
VIR-30A		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
VIR-30M		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
VIR-31		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
VIR-31A		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
VIR-31H		RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
VIR-32	5821-01-450-6351	RECEIVER, RADIO NAVIGATION	PARKER-HANNIFIN
VIR-33	-----	RECEIVER, RADIO NAVIGATION	ROCKWELL COLLINS
W1121F8-9-0	4820-00-810-2061	VALVE, FLUID, REGULATING	ROCKWELL COLLINS
W33-7540	6645-00-950-8599	CLOCK, MECHANICAL, PANEL	WAKMANN WATCH COMPANY
W33-7545-10	6645-00-089-7903	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
W33-7545-4	6645-00-089-7903	CLOCK, MECHANICAL, PANEL	WALTHAM AIRCRAFT CLOCK
W33-7590-1	6645-00-588-7611	CLOCK, MECHANICAL, PANEL	WAKMANN WATCH
W33-7590-10A	6645-00-588-7611	CLOCK, MECHANICAL, PANEL	WAKMANN WATCH
WXA-1000	5895-MD-035-4227	WEATHER RADAR ADAPTER	ROCKWELL COLLINS

## CAPABILITY LIST

WXT-250B	-----	TRANSCEIVER, RADAR	ROCKWELL COLLINS
XD708054	5826-00-342-1964	COUPLING, ANTENNA	RAYTHEON
XW20058M1	6105-00-630-5828	MOTOR, WINDSHIELD, DIRECT CURRENT	EMERSON ELECTRIC
XW20345-318-46	1680-00-712-0716	ACTUATOR, LINEAR	ROSEMOUNT AEROSPACE
Y5485-1	5826-00-090-3646	INDICATOR, BEARING	KEARFOTT
Z00.N6002377222	6605-01-141-7035	COMPASS, GYROMAGNETIC	SOCATA
Z00.N6018157226	2910-01-143-0195	PUMP, FUEL, ELECTRICAL	SOCATA